



elmeg T444

Operating instructions
English

Declaration of conformity and CE marks

This device meets the requirements of the following EC directive R&TTE 6/3/EG:



»Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity«.

You can also request this EC declaration of conformity at the following Internet URL: <http://www.bintec-elmeg.com>.



The waste container symbol with the "X" through it on the device indicates that the device must be disposed of separately from normal domestic waste at an appropriate waste disposal facility at the end of its useful service life. You will find additional information on an individual returning of the old appliances under www.bintec-elmeg.com.

© bintec elmeg GmbH - All rights reserved.

Reprinting of this document, even excerpts, is permitted only with the express consent of the publisher and with precise source information, regardless of the media used (mechanical or electronic).

Function descriptions included in this documentation which refer to software products of other manufacturers are based on the software used and valid at the date the documentation was prepared or published. The product and company names used in this documentation may be protected by trademarks.

Table of contents

Declaration of conformity and CE marks.	2
PABX Description	1
Loss of power	1
Cleaning	1
Safety notes	1
Important safety information for handling the PABX system	1
Supported Features	2
Display / LEDs.	3
All LEDs lit.	4
All LEDs flashing	4
Symbols	5
Symbols used	5
Acoustic signals	6
Internal dial tone(421 Hz)	6
Busy tone (421Hz).	6
Positive acknowledgement signal (mixed tone 421Hz und 320 Hz).	6
Negative acknowledgement signal (mixed tone 421Hz and 320 Hz).	6
Internal ringing signal (421 Hz)	6
Special dial tone (421 Hz and 316 Hz mixed)	6
External dial tone (425 Hz).	6
Call waiting tone (421 Hz)	6
Calling cycles	7
Internal call, Internal call-back, internal recall.	7
Internal call, internal call-back, internal recall with Clip.	7
External call, external call-back, external recall	7
External call, external call-back, external recall, call with CLIP	7
Communication data overflow	7
System telephones at the internal ISDN port	8
System telephones	8
Configuration of system telephones via the PABX	8
Intercom	8
Activate / inhibit intercom calling.	8
PABX system menu	9
The following features are available in the system menu:.	9
Telephone directory.	9
Follow me	9
Direct dial-in.	9
call modes	10
Cost logging	10
(LCR)	10
Making Calls	11
Direct exchange line access	11
calls	11
Accepting calls	11
Accepting a call (Pick-up).	11
Call pick-up from answering machine.	12

Making internal calls	13
Making internal calls without »Direct exchange line access«	13
Making internal calls with »Direct exchange line access«	13
Announcement.	13
Making an announcement	13
Enabling / inhibiting announcements	13
Enabling / Inhibiting announcements at telephones.	13
 Making outside calls	 14
The user.	14
Making outside calls at automatic exchange line access.	14
Making external calls with prefix code	15
Telephone interlock	15
 Trunk group (routing discrimination)	 15
 Specific trunk bundle selection	 15
ISDN ,POTS	15
ISDN, POTS, SIP-provider	15
Call waiting.	15
Enable / Inhibit Call Waiting for a Further Call	15
Enable / inhibit call waiting.	16
Automatic completion of call.	16
Automatic completion of call to busy subscriber	16
Automatic completion of calls on no reply	16
Programming an automatic »Completion of Call on No Answer« for analog phones.	16
Programming an automatic »Completion of Call on Busy« for ISDN phones	17
Programming an automatic »Completion of Call on No Answer« for ISDN phones	17
Deleting automatic completion of call for analog phones	17
Deleting an automatic »Completion of Call on No Answer« with ISDN phones.	17
 Calling several telephones (team call)	 17
Defining Your Own Number for the Next Call	18
Suppressing transmission of your own number	18
Noting an external ISDN connection	18
Canceling »Noting an external ISDN connection.	19
Speed dialing from the telephone directory.	19
Authorization for dialing from the telephone directory.	19
Reading/loading the telephone directory	19
Showing names in the display of the system telephone	20
Speed dialing from the telephone directory.	20
Call deflection during regular signaling (Call Deflection).	20
Forwarding external calls to external parties	20
Direct dial-in	20
Preparing and activating a direct call with set numbers	21
Activating direct dial-in.	21
Deleting a direct dial-in number	21
Voice announcement	21
Room monitoring	21
Enabling room monitoring for an internal telephone	22
Room monitoring from an internal telephone	22
Room monitoring from external telephones	22
You are at an external telephone.	22
Tracing (Malicious call identification).	23
Allocating Project Numbers	23
Assigning a project number for a call you initiate	23
Project number for an external call from an ISDN terminal device.	23

Project number for an external call	23
Keypad function («Net direct»)	24
Initiating the keypad function	24
Multifunctional device	24
Never Out of Touch	25
Call forwarding.	25
Call forwarding by the PABX.	25
Call forwarding in the exchange	25
There are three different variants of call forwarding:	25
Activating call forwarding	25
Deactivating call forwarding	26
Call forwarding in teams	26
Follow me (call forwarding from another telephone)	26
Internal configuration of call forwarding (Follow me, internal)	26
Internal de-activation of call forwarding (Follow me, internal and external)	26
Setting up/deactivating call forwarding from an external location (external Follow me).	27
You are located at an external telephone.	27
Setting up call forwarding from an external location	27
Canceling call forwarding from an external location (canceling Follow me from an external location)	27
Monitoring costs	28
Call data records	28
Call data record overflow	28
ISDN terminals.	28
Analog terminal devices.	28
Charge counter.	28
System telephones	29
Transmission of communication costs by the network service provider	29
Call account (charge limitation, pocket money account)	29
Notes	29
Least Cost Routing (LCR).	29
LCR Professional features.	30
Important notice for using the LCR procedure.	30
Operation	31
Activating the LCR procedure	31
Deactivating the LCR procedure	31
Block dialing (Austria)	31
PABX Settings	32
Activating and deactivating call signaling for analog terminal devices	32
Deactivating call signaling for analog terminal devices(Inhibiting calls ON)	32
Activating call signaling for analog terminal devices(Inhibiting calls OFF)	32
Teams	32
Call to busy team member («Busy on Busy«).	32
Enabling / Inhibiting a member's phone within a team	32
Enabling / Inhibiting subscribers within a team (log-in, log-off)	33
Enable / inhibit member(s) in all teams (log-in, log-off)	33
Switching team call day/night assignments (call distribution)	33
Switching all call modes.	33
Switching day/night team call assignment for all teams.	33
Switching team call assignments (day and night) for one team	34
Features without user action	35
SMS (short messages)	35
Transmission of user-defined characters (UUS1)	35
Information from the ISDN network (MWI)	35

Automatic changeover of authorization for external calls	36
Extended addressing (Sub-addressing)	36
Calendar	36
Example:	37
Park	37
Data packet transfer (X.31)	37
Protection of data link.	37
Emergency call priority	37
Dial ranges	38
Time acceptance	38
Conducting calls with several subscribers	39
Inquiry call	39
Call waiting.	39
Accepting a call (entering into an inquiry call)	40
Refusing a call	40
Accepting a call	40
Transfer calls	40
Transferring calls internally without advance notice	40
Transferring calls with advance notice	40
Connecting (ECT)	41
Transfer within the PABX	41
Transfer in the exchange	41
Connecting	41
Connecting a waiting subscriber with several subscribers on hold	41
Broker`s call	42
Three-party conference call.	42
Initiate a three-party conference call	42
System parked inquiry	43
Initiating a system-parked inquiry	43
Accepting a system-parked inquiry	44
Function keys for calls on hold (park keys)	44
Modified code numbers	44
Installation	45
Installation of the PABX	45
Contents:	45
Installation sequence	45
This section gives you step-by-step instructions on how to install your PABX. It is important that you adhere to the installation sequence given here.	45
Connections to the PABX system	47
View inside the PABX system	47
Terminals of the PABX	48
Internal ISDN connection.	48
Analog connections	48
Assignment of the RJ12 jack	48
USB/PC interface	49
Ethernet connection LAN1	49
Connecting the DSL modem to the Ethernet (10BaseT) port)	49
Modules	50
Module installation	50
Installation of the module elmeg M 1 POTS	50
External POTS Connection	51
Functional ground.	51
Installation of the module elmeg M 2 a/b	51

Installation of the module elmeg M 4 DSP	52
Commissioning the phone part.	53
Phone number plan	53
Internal numbers:	53
Default setting	53
Initial startup (telephone operation).	55
Configuration using a telephone	55
Configuration using a telephone	55
You can set the following features:.	56
PIN 1 / PIN 2	56
Changing PIN	56
Begin the configuration procedure (see page 55).	56
Setting up cost monitoring	56
Clearing the charge counters for one or all of the users	56
Setting up / delete call accounts	57
Deleting call accounts	57
Charge limitation On/ Off.	57
Setting the date and the time	57
Enabling/ inhibiting remote access	57
Enable / inhibit the remote access authorization.	57
Restoring settings (Reset of the PABX system).	57
Resetting settings to initial state	57
Resetting the features for one internal subscriber or for all	58
Configuration by the specialized dealer	58
Remote access	58
Remote access with call to the dealer's service center	58
Remote access with call to the dealer's service center	59
Enable the PABX for dial-in by the service center	59
Continuous enabling of PABX for dial-in by service center	59
Ending an active, incoming remote access connection	59
Inhibit remote access	60
Commissioning an IP-phone for a DSP module.	61
Initial startup	61
Language setting	61
Selecting a calling tone	61
Select a time zone	61
First log-in	61
PABX and PC	63
Contents of the CD-ROM	63
Programs for configuring the PABX.	63
Professional Configurator:	63
Charge Manager:	63
Telephone Directory Manager:	63
ControlCenter:	63
Download Manager:	63
TAPI-Configurator:	63
LCR Professional.	64
Application programs	65
Drivers	66
TAPI in the LAN:	66
CAPI in LAN:	66

Installation instruction for Windows 98	66
Initial installation	66
Installing the driver:	66
Removing the default driver	67
CAPI driver (Common ISDN Application Programming Interface):	67
Important for Installation of the CAPI driver	67
Installing programs from the CD.	68
System requirements:	68
Installation instructions:	68
When the file is started the welcome screen of the CD is displayed..	68
Configuration with a PC	69
You can program your pabx over the LAN, USB or via the internal ISDN connection.	69
Professional Configurator.	69
Description of the router functions	70
System Requirements for Windows	70
System requirements:	70
Initial Commissioning and Minimum Configuration	70
Connecting the DSL modem to the Ethernet (10BaseT) port	70
Connecting a pcs via USB.	70
Connection of a PC through Ethernet or Fast Ethernet	71
Connecting several PCs via Ethernet.	71
Configuring the PCs	72
IP addresses	72
You can configure the following parameters:	72
Default TTL.	72
MTU.	72
DHCP lease time	72
Default gateway	72
Domain Suffixes	72
Netbios Name Servers	73
Time Servers	73
DNS Servers	73
DHCP server and IP addressing	73
Configuration of the Internet Service providers (ISP).	74
Internet-by-Call	74
Discontinuing an Internet connection.	75
Using a fallback	75
You have configured three ISPs:	75
Firewall	76
Costs for Internet connections	77
Dial-in into the LAN (RAS).	77
Appendix	79
Troubleshooting	79
Technical specifications	81
PABX:	81
ISDN connections:	81
Analog ports:	81
USB port:	81
Ethernet connections:	81
Index	83
Brief description of functions.	87
Pick-up of the call	87

Making internal calls	87
Making outside calls.	87
Temporarily suppressing transmission of your own number (CLIR)	87
Dialing phone numbers from the phone directory.	87
Forwarding a call (connecting).	87
Broker`s call	87
Completion of call	87
Three-party conference call.	88
Call waiting.	88
Announcement.	88
Call modes	88
Call modes for teams	88
Call forwarding.	88
Follow me.	88
Room monitoring	88
Inhibiting calls	88
Malicious call identification (MCID)	89
Project numbers	89
Answering machine:.	89
Multifunctional device	89
Keypad functions	89
System parked inquiry	89

PABX Description

The PABX system is an ISDN telecommunications system at an ISDN point-to-multipoint or point-to-point connection that employs the Euro ISDN protocol (DSS1). Analog terminal devices can be connected via integrated jacks. The PABX system is also equipped with an internal ISDN port, allowing an ISDN terminal device to be connected at its RJ45 jacks. Fixed cabling using terminals is also possible for analog connections. Two analog ports are routed out via a common RJ45 jack. Assignment of internal phone numbers is freely configurable between 00... 99. Calling using analog terminal devices should be conducted using the tone dialing (DTMF) method, and these devices should be equipped with a Flash key. Analog terminal devices that use pulse dialing can not be used for functions or codes. Please note that the buttons on some ISDN terminals available on the market may limit the use of the features provided by the PABX system. All terminal devices connected to the system must be »TC Terminals Guideline« or »R&TTE Guideline« approved.

The PABX system also provides all of the functions necessary for high-speed Internet access for a single pcs, or for complete LANs via xDSL or ISDN. Here the firewall integrated into the PABX system, together with the NAT (network address translation) function, provides the necessary security; the functions DHCP server and DNS proxy ensure that the scope of configuration, both for your PABX system and your PC, is kept to a minimum.

Internet access for all of the PCs connected to the PABX system is provided via one single connection (SUA - single user account); only one set of access data is required from your Internet service providers (ISP).

Loss of power

During a loss of power you can initiate or receive calls at an ISDN or system telephone capable of emergency operation. Other telephones or terminal devices can not be reached as long as power is down.

In the event of a loss of power, all stored contents (program and application data) are retained in the PABX without any changes. The internal clock for the phone system is set automatically via the ISDN port on the next external call.

Cleaning

You can clean your PABX without any difficulties. Use a slightly moistened cloth or an anti-static cloth for this. Do not use any solvents! Never use a dry cloth; Electrostatic charges could damage the electronics in the system. Always ensure, however, that no moisture penetrates into your PABX, as this could result in damage to the PABX.

Safety notes

Important safety information for handling the PABX system

- Unauthorized opening of the PABX and improper repairs may result in risk of injury for the user.

Note

Attention: Unplug the 230 V AC plug-in power supply before removing the enclosure cover of the PABX and working on the cable terminal bay. Replace the top on the PABX before plugging the power connector back in.

Note

Plug the plug-in power supply unit into the 230 V ~ socket so that the connecting cord to the PABX system points downward.

- Do not expose the inside of the PABX or the plug-in power supply to any liquids. this would pose a risk of electrical shock. and can also destroy the devices.
- You should not connect or disconnect any lines during thunderstorms.
- Only terminals with SELV and/or which comply with ETS 300047 may be connected to the PABX system. This regulation is fulfilled when approved terminal devices are used as intended.
- The distance between the plug-in power supply unit and the PABX and to the ISDN connection should not exceed 1.5 meters so that standard connecting lines can be used.
- The PABX is operated with 230 V AC using the plug-in power supply unit. Please ensure that the electrical outlet (grounding outlet) for the PABX (and for additional devices where required) is installed such that it is freely accessible at all times and that it is installed by a qualified electrician to prevent any risks of personal or material injury/damage! Where at all possible, provide a separate power circuit for the 230 V connection of your PABX system; This protects your PABX from short-circuits that may occur in other in-house equipment.
- We recommend installing an overload protection to protect your PABX against surge that can sometimes occur during thunderstorms. For further information please contact your local electrician.
- To prevent mutual interference, do not install your PABX system in the immediate vicinity of electronic devices such as stereo equipment, electronic office equipment or microwave units. Avoid installing your PABX near sources of excessive heat, e.g. radiators or in rooms with excessive humidity. The ambient temperature at the location where the system is operated must be between 5 to 176° C.

Supported Features

The following ISDN features are supported by the PABX system at the exchange of the network service provider; some of these may have to be applied for at your service provider.

- HOLD: Hold / Broker's call
- ECT: Call switching
- 3PTY: Three-party conference call
- CD: Call deflection (forwarding of calls)
- PR: Partial Rerouting. Individual call forwarding for terminal devices at a point-to-point connection
- CLIP / CLIR: Activation/Deactivation of caller ID to party being called.
- COLP / COLR: Activation/Deactivation of called party ID to caller.
- AOCD: Transmission of charge costs during a call.
- AOCE: Transmission of costs of call at end of call.
- AOCS: Transfer of tariff information during the calling phase, for example for pay phones.
- CCBS: Completion of call to busy subscriber, as soon as subscriber is available.
- CCNR: Call-back to available subscriber as soon as that party has lifted and replaced the handset.
- MCID: Malicious caller ID (tracing).
- CFB / CFU / CFNR: Call forwarding.
- UUS1: Transmission of user-defined text messages.
- SUB: Extended addressing for a terminal device.
- X.31: Support for packet data (V-25) on the D-channel, for example for electronic cashiers.

- SMS in the fixed-line network.

Note

Please note that some of the features described in these operating manual must be applied for at your service provider.

Display / LEDs

Power	Ready for operation indicator.
	Green lit: When the PABX is ready for operation.
	Green flashing: When 480 data records have been saved in the charges memory of the PABX
ISDN/ POTS	Indicates the allocation of each B channel for the external ISDN connection.
	Green lit: ISDN port ready for operation or POTS-module plugged in
	Green flashing: One B channel busy, or an existing connection via the POTS module
	Green flickering: Two B-channels busy
DSL	Indicates the function of the DSL router:
	Green lit: DSL connection established
	Green flickering: Data link established
LAN	Indicates the network connection status:
	Green lit: 100Mbit/s network connection established
	Green flickering: 100Mbit/s data link
	Orange lit: 10Mbit/s network connection established
	Orange flickering: 10Mbit/s data link
	Red flickering: Network link collision
USB	Indicates the status / activities on the USB port.
	Not lit: The USB port of the PABX system is not ready for operation at the connected PC (not logged in, or not recognized), or when the PC/USB port is in the suspended mode.
	Green lit: The USB port of the PABX system is ready for operation at the connected PC (USB driver active). PC applications that run via the USB connection can be started.
	Green flickering: Data is being exchanged via the USB port. For ex.: CAPI application programs, CTI applications or new software download into PABX system.

All LEDs lit

New firmware not properly identified by the PABX. Please repeat the operation.

All LEDs flashing

New firmware being downloaded into the PABX. Do not remove the plug-in power supply unit for the PABX system during this phase, as it can result in data being lost in the PABX.

Symbols

Please note: Different terminal devices will not necessarily have the same dial tones, ringing signals or procedures for use.

Symbols used



Lift up the handset, activate hands free calling, or start initializing selection.



This symbol indicates the call status.



Replace the handset of your phone in the carriage, or the telephone is idle.



Indicates signaling at a terminal device, for example your phone rings.



You can dial the desired number.



Dial a specified code, number or character.



Dial a code or a character.



Prompts you to press the flash key (signal key).



Indicates that an acknowledgement signal can be heard in the handset.



Indicates a conference call.



When you enter the number for dialing via an SIP provider, dialing is not performed until around 5 seconds after the last digit has been entered. Dialing is performed immediately when you press the # key after entering the number. In this case, the terminal device must also be capable of dialing into the phone system with the #.

Acoustic signals

The following tones describe signaling for the PABX when using analog telephones.

Internal dial tone(421 Hz)



 
You will hear this dial tone after lifting the handset for »calling external parties with line access digit«. This signal indicates that you can dial a number. After 40 seconds this signal changes to the busy signal; hang up the handset and then lift it up again. You will then hear again the internal dial tone.

Busy tone (421Hz)



You will hear this signal, when the called external or internal extension is busy.

Positive acknowledgement signal (mixed tone 421Hz und 320 Hz)




The positive acknowledgement signal indicates that your input has been accepted.

Negative acknowledgement signal (mixed tone 421Hz and 320 Hz)



If you hear this tone, the selected function can not be used or the feature has not been configured or has been canceled.

 Internal ringing signal (421 Hz)



This signal indicates that the telephone of the external or internal extension is ringing.

Special dial tone (421 Hz and 316 Hz mixed)



This signal indicates that your phone has been set for call re-routing.

External dial tone (425 Hz)



A continuous signal that you hear when you have engaged the external ISDN connection.

Call waiting tone (421 Hz)



Call waiting tone. This tone signals that an external party is calling you during an ongoing call. The call waiting signal is sounded for a maximum of. 30 seconds.

Time intervals of the signals in seconds

 


1 2 3 4 5

Calling cycles

The figures below show the duration of the calling cycles when using analog telephones.

Internal call, Internal call-back, internal recall



Internal call: You are called either directly, or in an inquiry call by an internal user.

Internal call-back: You are called automatically when the party you attempted to call hangs up the handset for his/her phone.

Internal repeat call: You initiate an inquiry call, but replace the handset before dialing. The first call that is on hold is signaled at your terminal device by call-back for 3 minutes. If your telephone has been configured for calling line identification (CLIP), this alarm call will be displayed just like a normal external call.

Internal call, internal call-back, internal recall with Clip



CLIP: If your analog telephone has been configured for calling line identification (CLIP), it will be called with this signal.

External call, external call-back, external recall

 


External call: You are called by an external party.

External call-back: You are called automatically when the party you attempted to call hangs up the handset for his/her phone.


External repeat call: You initiate an inquiry call, but replace the handset before dialing. The first call that is on hold is signaled at your terminal device by call-back for 3 minutes.

External call, external call-back, external recall, call with CLIP



CLIP: If your analog telephone has been configured for calling line identification (CLIP), it will be called with this signal.

 Communication data overflow



Communication data overflow: This signal indicates a communication data overflow at a system telephone. Depending on the system telephone type used, the caller list either displays the service number together with a message or the service number only.

Time interval of the signals in seconds



1 2 3 4 5

System telephones at the internal ISDN port

System telephones

Your PABX is prepared for operation with system telephones. No special programming is required for these system telephones. The PABX automatically recognizes the activated system telephones and provides functions typical for these telephones in a special menu. You can also configure several function keys on system telephones and expansion modules for the system telephones. The system telephone operating instructions include a description of these functions and their configuration and use.

Configuration of system telephones via the PABX

You can configure system telephones from a central location from PC off using the Professional Configurator. The system telephones are recognized by the Professional Configurator and the configuration can be read out and edited. You can also load ringing melodies using the Sound Manager and edit the telephone book for the system telephone (with the exception of the CS290).

Intercom

An intercom call allows you to set up a connection from one system telephone to another system telephone without this connection having to be accepted by pushing a button. Intercom calls are accepted automatically by the phone being called when the function »Hands-free calling« is activated, provided:

- the telephone is idle,
- the intercom call function has not been specifically deactivated and
- »Do not disturb« has been deactivated.

If you lift the handset of a system telephone during an intercom call, the call is continued over the handset.

If an intercom call is not terminated by one of the two users, the connection is terminated automatically after a time defined in the PABX (around.

If the function »Do not disturb« is activated at a system telephone, intercom calls can not be placed to that phone. Intercom calls can be activated or inhibited specifically using a function key or a code procedure.

Activate / inhibit intercom calling

				
Lift up handset	Enable intercom calls / Inhibit intercom calls		Ack. signal	Replace handset

PABX system menu

A special menu containing functions typical for the system is provided by the PABX. This menu, and the associated features, are managed solely from the PABX.

You can select the language of your display, provided the desired language has been configured using the telephone directory program.

The following features are available in the system menu:

- Telephone directory for the PABX
- Follow me
- Direct call
- Switching call modes (day/night)
- Cost registration
- LCR

Refer to the operating instructions of the terminal device being used to find out how to reach the PABX system menu.

Telephone directory

Using system telephones, you can access the PABX telephone directory.

To search for an entry in the telephone directory enter the first few letters (maximum 8) for the entry and then confirm your input.

Eight (8) entries from the PABX telephone directory are always shown which you can view one after the other.

Select the desired entry and confirm by clicking »OK«.

You must now begin dialing by lifting the handset.

Note

When using system telephones you can reach the PABX telephone directory by pressing Shift + the telephone directory softkey (e. B. »tbook« or »Telephone directory«). System telephones without a telephone directory can access the telephone directory of the PABX via this telephone directory softkey.

Follow me

Using system telephones, you can set up call forwarding from another terminal device of your PABX system to your telephone or mobile unit. This call forwarding is based on the feature Follow me for the PABX.

Enter the number of the subscriber that is to be forwarded to your telephone and the type of call forwarding using the system menu. In addition, you can also delete an existing call forwarding function. A distinction is made between the following types of call forwarding:

»Activate« / »Always active«

All calls are forwarded to your telephone or mobile unit.

Direct dial-in

If the direct call function has been configured your telephone will dial a number (MSN) that you have input previously. If you do not begin dialing a number within five seconds after lifting up the handset, dialing is begun automatically.

You can configure the number for a direct call via the system menu. The PABX system recognizes by the length of the number whether you have entered an internal or external number. You therefore do not need to input a prefix code for external numbers. You can also deactivate or delete a direct call number that has been previously configured or activated.

call modes

In the »Day / Night« menu of the system menu you can switch over the call mode for the PABX without using the allocated codes (see page 26). The telephones must be authorized for switchover of the call modes.

Cost logging

The cost logging function allows you to view and, if desired, delete the number of accumulated units and the costs of calls for the terminal devices.

This feature is protected by the 6-digit PIN2.

If you wish to clear all of the counters for the terminal devices enter »*« instead of the number for the internal user.

(LCR)

You can query the status of LCR using this menu item. Settings are not available.

Making Calls

Some terminal devices use their own special procedures for the functions described in the following. Refer to the operating instructions for the terminal device being used for detailed information.



Only telephone connections, i. e. calls between subscribers, are presented in the following usage procedures as examples. For analog telephones, these functions are only described for tone dialing terminal devices equipped with a flash key. The tones and signals described below are heard when using analog telephones. These tones may be different for analog telephones which generate their own dial tones. Other information may also be shown in the display of these telephones.

Direct exchange line access

The individual users of the PABX can configure activation of direct exchange line access or dialing calls using a prefix digit. When direct exchange line access is activated, you will be switched immediately to the external ISDN connection when you lift the handset and will then hear the dial tone for the exchange. You can then begin dialing the external number at once.

If you deactivate direct exchange line access you must dial a prefix (LAD) when you make an external call. You will hear the internal dial tone when you lift up your handset.





Note

If your phone is set for »Automatic line access« you must first press the ***** key when you lift the handset  before beginning any internal call procedures. The symbol  is highlighted in color, as shown in the example below, for the corresponding performance feature.

		
Lift up handset	Making internal calls	Conduct your call

calls

Accepting calls

			
Telephone klingelt	Lift up handset	Conversation	Replace handset

Accepting a call (Pick-up)



An external call is signaled at a different in-house telephone.

You can now create different pick-up groups of subscribers for whom pick-up (accepting) of calls is possible. A call can only be accepted by subscribers/terminal devices of the same pick-up group. Assignment of subscribers to pick-up groups can be made regardless of the settings for the Day/Night team call assignments.

Note



However, picking up a call is possible only within the pick-up group to which your terminal device has been assigned via PC configuration. In the initial state all terminal devices are assigned to pick-up group 00 so that calls can be accepted from any telephone.

A telephone near you begins ringing. You would like to accept the call at your own phone.

 Lift up handset	* 0 Accept call	 Conversation
--	---------------------------	---

Call pick-up from answering machine

Calls that are signaled at the answering machine (the answering machine has not yet responded) can be taken within a group using the performance feature »Accepting a call«. If the answering machine has already accepted the connection you can also take this call from your telephone.


 Lift up handset	# 0 Take call / conversation from the answering machine	 Conversation
--	--	---

Making internal calls

All phone calls, fax transmissions or data transmissions that take place between internal analog and ISDN terminal devices are internal connections for which no charges are billed.

If a connection is set up between internal terminal devices and the terminal devices connected to the external ISDN point-to-multipoint connection (to which your PABX system is also connected), this is considered as being an external connection for which charges are billed.

Making internal calls without »Direct exchange line access«

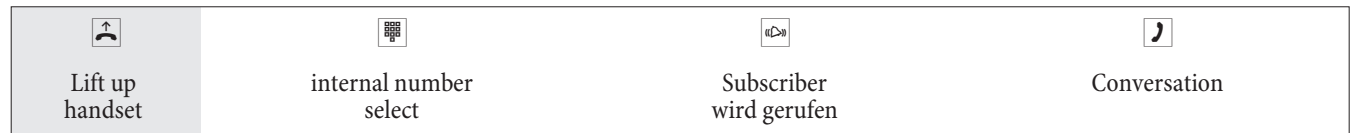

Making internal calls with »Direct exchange line access«

If you are making an internal call, or initiating a function, such as accepting a call, lift the handset and press the asterisk key – you can then dial an internal number.

If you hear the busy signal when you lift the handset (external ISDN connection busy) press the asterisk key again and you will hear the internal dial tone.




Announcement

Would you like to call your co-workers to a meeting, or invite your family out to eat? You could call each separate person to do this, or you can use the message function. With this function, you need to make only one call to reach all of the telephones that are authorized for messages, without the called parties having to lift up the handsets of their phones.

At the internal ISDN connection of your PABX only the first two team telephones can be used simultaneously for a message. You can enable or inhibit the message function for each internal user (see page 12). A notice signal is issued at the beginning of the message.

Refer to the operating instructions for your telephones whether the phones support the message feature.

Making an announcement

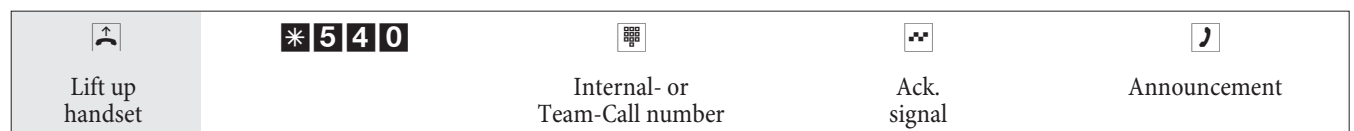

Enabling / inhibiting announcements

You can enable or inhibit the sending of messages to your telephone. If you have disabled messages being sent to your phone, the caller that is attempting to send a message to you will hear the busy signal.

Enabling / Inhibiting announcements at telephones



Making outside calls

Your PABX system comes equipped with an external ISDN port, with the option for an external, analog port (POTS module, DSP module). The two B-channels of an ISDN access allow you to establish two outgoing connections, the external analog port provides another communication link plus another 4 SIP-connections via DSL. These connections may also be to two different parties simultaneously. For example, you can call an external business partner while simultaneously transferring data from your PC to a different business partner. When you initiate an external call via your PABX, the system automatically transmits your number and the service ID (for the terminal device, such as phone or fax). This ensures that only a terminal having the same ID code is called at the subscriber being called (phone calls phone, fax group 4 calls fax group 4).

If a terminal connection is configured for a multi-functional device in the PABX, external calls are signaled with the ID »Analog telephony«, »ISDN telephony« and »Fax device« at the terminal device. Here, when you initiate an external call, the service ID code »Analog telephony« is transmitted.

It is not necessarily required that all telephones / terminal devices be available for making calls throughout the world. It is sometimes even more advantageous when some telephones are authorized for local calls only (phone bills also more transparent).

The exchange authorization function exists to control and monitor this. An individual authorization for outgoing calls (external) can be assigned in PC configuration for each PABX user. This authorization is broken down into 5 different categories.

The user

- has unrestricted line access authorization.
- has call authorization for national (long-distance) calls.
- has call authorization for local calls.
- Region (regional numbers).
- can be reached for incoming calls, but can only make internal calls.
- is authorized for internal calls only.


Note

Please note: ISDN terminal devices connected to the ISDN connection may not have the same signals, ringing cycles or operating procedures as the internal analog terminal devices for the PABX system.

The individual users of the PABX can configure activation of direct exchange line access or dialing calls using a prefix digit. When direct exchange line access is activated, you will be switched immediately to the external ISDN connection when you lift the handset and will then hear the dial tone for the exchange. You can then begin dialing the external number at once.


Making outside calls at automatic exchange line access

You wish to make a call to an external party.

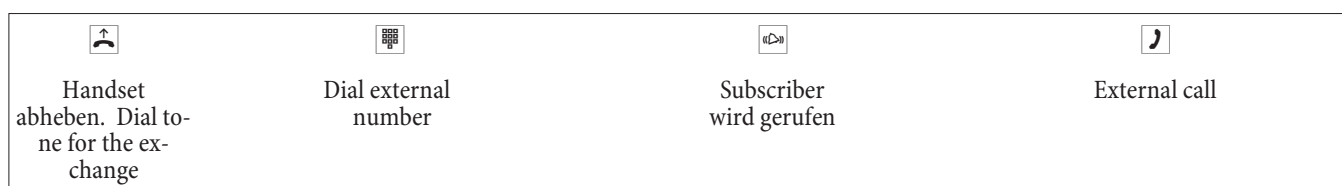

Making external calls with prefix code

You wish to make a call to an external party.

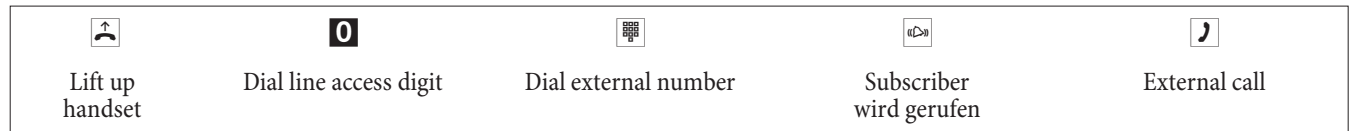


Note

If you hear the busy signal after dialing the first 0 your telephone either does not have authorization for making external calls, or the external ISDN connection is busy.

Telephone interlock

Use this feature to download configured characteristics for outgoing calls into another phone. This includes trunk group seizure, authorizations etc. All charges will be billed to your own phone. If possible, the called party sees the number or name in the display of his or her phone. This applies also to an inquiry call. During configuration, a PIN is allocated to each subscriber.

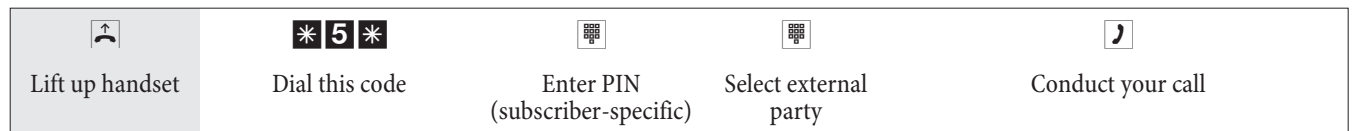


Trunk group (routing discrimination)


You can only use this performance feature when you are using more than one external port (only with POTS module, DSP module). In the default setting, the external ISDN port is used first after dialing the line access digit. If this port is busy, the external analog port is selected automatically. If that port is also busy, the DSL-port will be used. When you have set up 2 or 3 bundles, you can determine, which bundle is taken first.

Specific trunk bundle selection

ISDN ,POTS

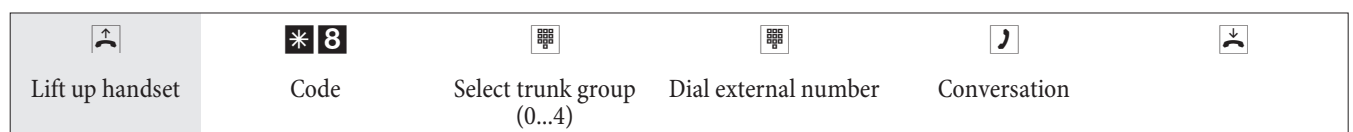

ISDN, POTS, SIP-provider

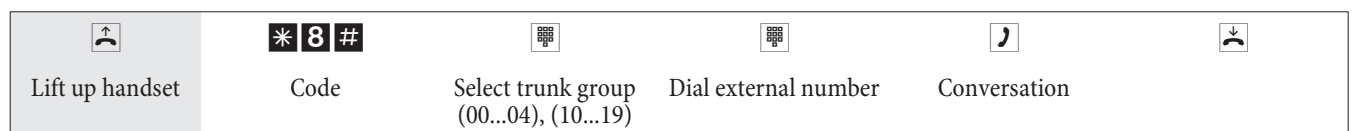

Call waiting

Enable / Inhibit Call Waiting for a Further Call

Using the function »Call waiting« you can be called by other parties while conducting an ongoing call. When a second caller calls up you will hear the call waiting signal in your handset and can then decide whether you want to continue your call with the current caller, or whether you want to take the waiting caller right away.

The call waiting feature is supported by analog phones. Please refer to the corresponding section in the operating instructions for your ISDN terminals for proper use of this function.

If call waiting occurs during an ongoing call with an analog phone and you ignore the call waiting signal, it will be de-activated after around 30 seconds. You can also disable call waiting with analog telephones so that no call waiting signals are given during your calls.

Enable / inhibit call waiting

		5 8		
Lift up handset	enable / inhibit	Dial this code	Ack. signal	Replace handset

Automatic completion of call

This function can only be used by telephones that permit suffix dialing! Automatic call completions from an inquiry call are not possible.

Automatic completion of call to busy subscriber

Let's assume that you must urgently contact a business partner or an internal extension. When you call their number you always get a busy signal however. If you were to be provided with a message that the subscriber you are attempting to call has ended his/her call, this would increase your chances of reaching that party considerably.

»Completion of call to busy subscriber« allows you to call the extension as soon as the other subscriber hangs up his or her telephone. Your telephone will then ring. When you then lift your handset, a connection is set up automatically to that party.

An internal »Completion of call to busy subscriber« is deleted automatically after 30 minutes. The external »Completion of call to busy subscriber« is deleted after a period defined by the exchange (around 45 minutes). You can also manually delete this function before this period expires.

Automatic completion of calls on no reply

Let's assume that you must urgently contact a business partner or an internal extension. When you call their number you always get a ringing signal, but the party is not near the phone or does not answer. If supported by your network provider, you can use the function »Completion of calls on no reply« to reach the party immediately when he/she ends a call, or lifts and then replaces his/her handset. Your telephone will then ring. When you then lift your handset, a connection is set up automatically to that party.

Note

In the following procedures a distinction is made between analog and ISDN telephones with regard to use and acoustic tones/signals.

Programming an automatic »Completion of Call on No Answer« for analog phones

	* 4 0		
Internal or external subscriber is busy or does not answer		Ack. signal	Replace handset




When the subscriber that was called hangs up his/her handset your telephone will ring.

When you lift up your handset the subscriber for which completion of call is active is called. If the party answers you can conduct your call.

Programming an automatic »Completion of Call on Busy« for ISDN phones

This feature is supported for ISDN telephones by the PABX at the internal ISDN connection. Please refer to the operating instructions for your ISDN telephone for proper use.

Programming an automatic »Completion of Call on No Answer« for ISDN phones

	* 4 0		
Internal or external subscriber does not answer		Ack. signal (or voice announcement)	Replace handset

When the subscriber that was called hangs up his/her handset your telephone will ring. When you lift up your handset the subscriber for which completion of call is active is called. If the party answers you can conduct your call.

Deleting automatic completion of call for analog phones

Analog telephones use this procedure for canceling:


- Internal and external completions of call to busy subscriber.
- Internal completion of calls on no reply.

An external »Completion of calls on no reply« is canceled by the exchange after the defined time period expires.

	# 4 0		
Lift up handset	Delete call-backs	Ack. signal	Replace handset

Deleting an automatic »Completion of Call on No Answer« with ISDN phones

Internal completion of calls on no reply is canceled with ISDN telephones using the following procedure. An external »Completion of calls on no reply« is canceled by the exchange after the defined time period expires.

	# 4 0		
Lift up handset	Delete call-backs	Ack. signal	Replace handset

Calling several telephones (team call)

You can place a call to all the members of a team using the assigned number (group call).

A distinction is made between three types of team call variants, »Team call simultaneous«, »Team call linear«, »Team call rotating« and »Teamcall adding«.

- Team call simultaneous:
All assigned terminal devices are called simultaneously. If a telephone is busy call waiting can be initiated.
- Team call linear:
All assigned terminal devices are called one after the other (as entered in the PC configuration); if one telephone is busy, the next available one is called.
The call is signaled for around 15 seconds at each terminal. You can set this time to between 1 and 99 seconds however during PC configuration.
- Team call rotating:
This type of team call is a special variant of the linear team call. After all of the terminal devices of a team

have been called the call is signaled again at the first terminal device. The call is signaled until either the caller hangs up, or until the call is terminated by the exchange (after around 2 minutes).

- Team call adding:

The terminal devices are called in the order that they have been entered in the subscriber list in PC configuration. Each terminal device that has already been called will continue to be called until all of the devices that are entered have been called. Using PC configuration you can define when the next terminal device is to be called each time.

Note

If you have set linear or rotating team call for a team, the members of this team can not forward calls when the call is being signaled (call deflection).


Defining Your Own Number for the Next Call

For example, if you want to make a business call from home, late at night, you can define your business telephone number as the MSN for this business call.

The advantage is that the connection and its cost are recorded under the selected MSN and your business partner can see that it is you calling.

Before you begin to make an external call you can define which number is to be transmitted to the exchange and to the party you are calling. This MSN must first be assigned to an index during PC configuration (see External numbers). When you then also dial this index, the assigned MSN is transmitted to the party being called. The charge for this call at your network service provider is then billed to this MSN.

You wish to set up a connection with an external party and have a certain number transmitted along with the call.

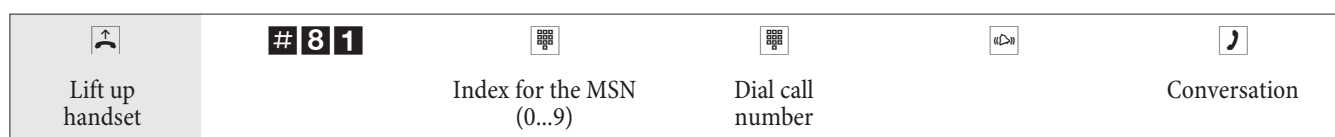

Suppressing transmission of your own number

If you do not wish to have your number displayed to the party being called before he/she lifts up the handset, you can suppress the transmission of your MSN specifically for that call.

This feature must be applied for at your network service provider.

Transmission of the caller's own number is suppressed using the following procedure with analog terminal devices. Please refer to the operating instructions for ISDN terminal devices on how to initiate this feature.



Noting an external ISDN connection

You can use for each terminal device an »automatic call back« (subscriber free) or note »an external ISDN connection«. The last entered feature will be active. The performance feature entered previously will be canceled.

ISDN terminal devices can use this feature provided keypad dialing is possible during an ongoing call or when the line is busy.


You want to call an outside party but the external ISDN connection is busy. With this procedure, you can note an external ISDN connection. As soon as this ISDN connection is again available, your telephone rings and you can make your call. All current »reservations« are automatically deleted at midnight (0:00). This function can only be used by telephones that permit suffix dialing.

You wish to call an external party. The external ISDN connection is busy. You hear the busy signal.

	* 4 0			
You hear the busy signal.		Replace handset	Called subscriber is again available.	

Now switch your ISDN telephone to keypad mode.
Dial the number of the external party you wish to call.

Canceling »Noting an external ISDN connection

	# 4 1		
Lift up handset		Ack. signal	Replace handset

Speed dialing from the telephone directory

The PABX system is equipped with an integrated telephone directory in which you can make up to 500 entries, each with up to a 24-digit number and up to a 20-character name (text).

Note

You can dial these speed dialing numbers with analog phones using the codes 000...499.

Authorization for dialing from the telephone directory

The authorization level for dialing from the telephone directory can be set individually for each subscriber. There are three different authorization levels:

- Subscriber is not authorized to dial numbers listed in the telephone directory.
- Subscriber may dial only those telephone directory listings that match his or her specified call authorization.
- Subscriber may dial all telephone directory listings.

An analog subscriber with no telephone directory authorization hears the busy signal. ISDN as well as system phones display »You have no authorization« if telephone directory authorization has not been assigned.

Configuration of the telephone directory is performed using the telephone directory program on the WIN-Tools CD-ROM. You can create or edit telephone directory entries using this software.

Note

When you download new firmware versions for your PABX system, all of the telephone directory data is deleted. Therefore, save all of your telephone directory data to your PC prior to loading new firmware.

Reading/loading the telephone directory

The contents of the telephone directory can be exported, and also loaded, via a connected PC (USB, Ethernet, ISDN connection). You can have the service center export the directory of your PABX in a remote access link and then upload it again when the firmware download is completed.

Showing names in the display of the system telephone

When a subscriber is called by an internal or external party, the name that is entered in the telephone directory is shown in the display in addition to the telephone number. With internal calls, the name from the telephone directory is displayed only if no name has been entered during PC configuration under »Internal extension«. If a name has been entered here, this name is displayed, as it has priority over the name in the telephone directory.

Speed dialing from the telephone directory

Every number in the PABX telephone directory is assigned to a speed dialing index (000...299). You can dial this speed dialing index in place of the long number. The speed dialing memory is integrated into the PABX telephone directory. Observe the information provided in PC configuration.

				
Lift up handset		Speed dialing index select	Subscriber is called	Conversation

Call deflection during regular signaling (Call Deflection)

If you are not able, or do not wish, to accept a call, you have the option of rerouting the call to a different subscriber while the call is being signaled. When you forward a call to an external subscriber, you will be charged for the costs of the call from your phone to the forwarding destination.

You can utilize this performance feature with system telephones of ISDN phones that support this function (refer to Operating Manual for terminal devices).

Forwarding external calls to external parties

Forwarding of calls while the call is being signaled depends on the team that is being called:

If several members are entered for a team, call forwarding in the PABX is carried out via the second B channel of the ISDN connection. This also applies when the connection has the feature CD (call deflection). The PABX can not be reached by external parties while call forwarding is in progress.

If only one member is entered for a team, call forwarding in the PABX is carried out via the second B channel of the ISDN connection when the connection does not have the feature CD. The PABX can not be reached by external parties while call forwarding is in progress. If the connection does have the CD feature activated however, the call is forwarded to the exchange. Both B channels are then immediately available again and the PABX can be reached by external parties.

Note

Call forwarding by a team member is only possible when »Team call simultaneous« call signaling has been set for the team.

Direct dial-in

Say you are away from home. However, somebody at home should be able to reach you quickly and easily by telephone if needed (for example children or elderly relative). Since you have already configured the function »Direct call« for one or more of your phones, you need to lift the handset of one of these phones. After five seconds without any numbers being dialed the PABX will automatically dial the defined direct call number.

You can enter the number yourself of the party that is to be called prior to calling. The PABX system recognizes by the length of the number whether you have entered an internal or external number. You therefore do not need to input a prefix code for external numbers. To change an already entered direct call number, just enter the new one without deleting the old number. You can also perform the following settings using PC configuration.

Preparing and activating a direct call with set numbers

 Lift up handset	* 6 5	 Call number	#	 Ack. signal	 Replace handset
--	--------------	--	----------	--	--

Note

Now, when you lift up your handset the direct call number will be dialed after five seconds.

Activating direct dial-in

 Lift up handset	# 6 5 *	or	* 6 5 #	 Ack. signal	 Replace handset
	Deactivate direct dial-in		Reactivating a direct dial-in		

The numbers stored in the PABX for direct calls are retained even when the direct call function is deactivated.

Deleting a direct dial-in number

 Lift up handset	# 6 5 #	 Ack. signal	 Replace handset
	Delete a direct dial-in		





The stored direct dial-in number is deleted.

Voice announcement

You can use an analog port of your PABX for an intercom function by configuring this port for voice announcements. This enables you make voice announcements for example into a waiting room via an internal telephone.

Note

A voice announcement extension can be reached by internal devices only.

 Lift up handset	 Dial the internal number of the voice announcement extension	 Voice announcement	 Terminate voice announcement
--	---	---	---


Room monitoring

You can monitor a room acoustically from a telephone in your PABX system, or from an external telephone. To do this, the telephone in the room to be monitored must be enabled for room monitoring with the correct code and the handset removed from the holder, or hands-free calling must be activated. If you hang up the handset of the phone in the room being monitored, or if you deactivate hands-free calling, room monitoring is ended and the feature is deactivated again.



This feature can not be used in conjunction with inquiry call, call forwarding or team call functions.

Note
 Room monitoring is deactivated after each PC configuration of the pabx and must subsequently be enabled and configured once again.

Enabling room monitoring for an internal telephone

	* 5 9 3		Do not replace handset / Do not deactivate hands-free calling
Lift up handset		Ack. signal	

Room monitoring from an internal telephone

		Room monitoring is activated
Lift up handset	Dial the number of the telephone to be used for room monitoring	

Room monitoring from external telephones

This function is used for room monitoring from an external telephone. To carry out room monitoring from an external location dial the number (MSN or direct dial-in number) to which the PABX system service number is assigned. The service number (internal virtual subscriber) is assigned to this MSN in the PABX. You must then enter a 6-digit PIN. The PABX then checks your authorization for executing room monitoring from an external phone based on this PIN 2. In the initial state (when delivered), the internal number 55 is entered as the service number. This number can not be used in teams. Please note that you must first allocate a multiple subscriber number (MSN) or direct dial-in number to this service number during PC configuration. Room monitoring is protected by a 6-digit PIN 2 and can be activated by entering this PIN 2.

Note
 In the initial state, this PIN 2 is set to **0 0 0 0 0 0**. To ensure adequate security you must change this 6-digit PIN 2 and enable remote access to the PABX if you wish to use this feature.

You are at an external telephone.

Lift up the handset of the phone from which you wish to conduct room monitoring and dial the MSN or direct dial-in number to which the service number for the PABX is assigned. If remote access has been enabled and is possible at this time you will hear the special dial tone of your PABX. Set your phone to frequency (DTMF) dialing, or use a DTMF manual transmitter.

				Room monitoring is activated
Enter PIN 2	Ack. signal	Dial the number of the telephone to be used for room monitoring	Ack. signal	


To end room monitoring, hang up the handset of the external telephone.

Tracing (Malicious call identification)

You must apply for this feature to your service provider. You will then be informed of further procedures there. If you dial the appropriate code during a call, or after the caller has ended a call (you will hear the busy signal from the exchange) the caller's number is saved at the exchange. ISDN telephones can also use dedicated functions for this feature.

Note

Attention: Only hang up the handset after you have entered the code for tracing the caller and hear the positive acknowledgement signal.

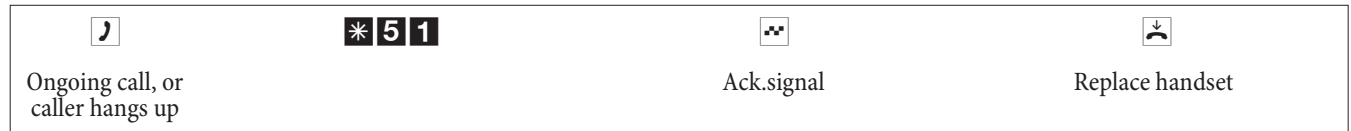


Allocating Project Numbers

Project numbers allow you for example to invoice telephone calls for specific customers. If you have initiated calls yourself you can save the data for call duration and costs for this customer under the project number. If you are called by a customer, you can store the call data for this particular customer.

A project is activated by entering a code and a project number consisting of up to 6 digits.

If you have exported call data records using the charge manager software on the CD, you can, for example, sort, filter or compile these data records according to project numbers.


Assigning a project number for a call you initiate

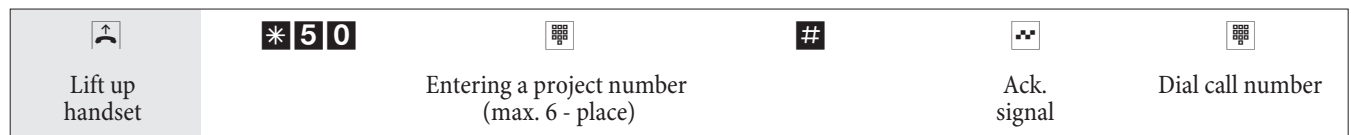

Project number for an external call from an ISDN terminal device

You can use this feature at an ISDN terminal if your ISDN terminal device supports the function »Network Direct« (keypad).


You are conducting a call and wish to register it for a project.

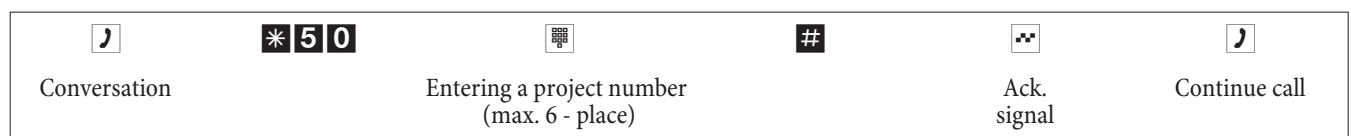

Project number for an external call

You can use this feature at an analog or an ISDN terminal device if your ISDN terminal does not support the function »Net direct« (Keypad) during an ongoing call.

You are conducting a call and wish to register it for a project.

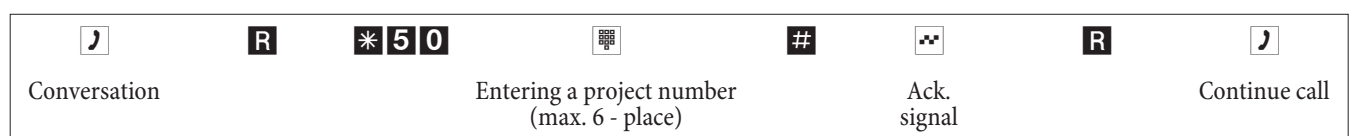

Keypad function (»Net direct«)


Only recently you purchased the most modern telephone on the market. Since then, however, new features have been added to the public network which you are not able to use just by pushing a button.

Using the »Keypad« function you can use current ISDN functions offered by your service provider by entering a key sequence from your ISDN or analog telephone.

Ask your network service provider about this and get the corresponding codes from them (for example activating inhibits at the exchange office). Use of this feature must be enabled for a user defined in configuration in the section »Internal user« on the tab »Features«. If the feature »Direct exchange line access« is activated you will only be able to use the keypad function if you press the * button first and then dial 0 after you lift the handset.

The keypad functions can only be used by terminal devices to which an MSN has been assigned during configuration and for which this feature has been applied for at the exchange.

Initiating the keypad function

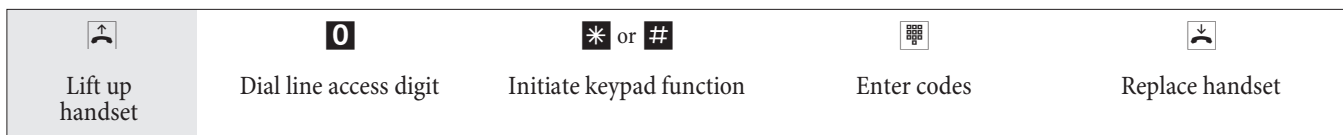


Multifunctional device

If an analog terminal device connection for the PABX has been configured as a »Multi-function port« for multi-function devices, all calls will come in, regardless of their service function. With exchange line acquisition using a code the service IDs for »analog telephony«, »fax group 3« or »ISDN telephony« can be transmitted, regardless of the configuration for the analog connection. The service ID »analog telephony« is transmitted when you dial a 0.

Example:

You are unable to reach a fax machine of group 3 that is operated with the service ID at a remote ISDN PABX system. By dialing the appropriate code, your PABX transmits the service ID »fax group 3«. The remote PABX system recognizes the service and connects you to the fax machine.

You would like to make an external connection to a certain service.

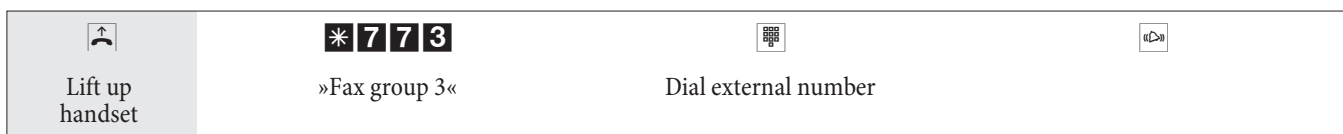

Never Out of Touch

Call forwarding

Using the function »Call forwarding«, the PABX provides you with a means for remaining accessible, even if you leave your desk or phone. This is achieved by the system automatically forwarding calls to another internal or external number. During PC configuration for the PABX you can specify for each internal extension whether this feature is to be executed within your PABX system or in the exchange.

Call forwarding by the PABX

The PABX connects the calling party with the internal or external subscriber that you have specified. The B channel of the ISDN connection is used for an external call, depending on your particular configuration.

Call forwarding can also be made to a team number.

Call forwarding in the exchange

- You can use this option at the network service provider if you have activated these services for your connection. Contact your network service provider for more information.
- The exchange connects calling parties with the external number that you have specified. Internal call forwarding is activated by the PABX within the PABX.
- At a point-to-multipoint connection all calls are forwarded for the MSN that is called. Other terminal devices of the PABX to which the same MSN has been assigned are not called (partial rerouting).

Note

If call forwarding has been configured but is not carried out by the exchange (because this feature was not applied for) calls will automatically be forwarded by the PABX.

There are three different variants of call forwarding:

- Call forwarding immediately:
The call is forwarded immediately to the defined number.
- Call forwarding on no answer: The call is forwarded after 15 seconds (depending on the setting in the PABX or at the exchange; partial rerouting).
- Call forwarding on busy:
 - The call is forwarded only if the destination telephone is busy.

Note







Ongoing call forwarding calls also be overwritten by a new call forwarding. Other call forwarding variants may also be activated simultaneously. For example call forwarding »by time«, to number 12345 and call forwarding »on busy«, to number 45677.

Activating call forwarding





Using this procedure, all calls will be forwarded to the MSN to which the terminal device initiating the function is assigned, even if several terminal devices are assigned to this MSN.

Note

The PABX recognizes automatically by the length of the number whether call forwarding is to be made to an internal or external subscriber. This is why the destination number for call forwarding to an external subscriber is always input without the line access digit (LAD).

		6 1 / 6 2 / 6 3				
Lift up handset		Permanent call forwarding / Call forwarding on no reply / Call forwarding on busy	Destination number for call forwarding		Ack. signal	Replace handset

Deactivating call forwarding

		6 1 / 6 2 / 6 3		
Lift up handset		Permanent call forwarding / Call forwarding on no reply / Call forwarding on busy	Ack. signal	Replace handset

Call forwarding in teams







Certain conditions apply to subscribers that are assigned to a team for call forwarding:

- Each subscriber can initiate call forwarding from his/her internal number to a different subscriber (regardless of the team that subscriber is assigned to).
- Call forwarding from one team member to a team number is not possible. If call forwarding is initiated from one team number to the team number for a different team, the function will not be active and the user initiating the call forwarding function is called.

Follow me (call forwarding from another telephone)







If you are at a different location, and not at your phone, you have the possibility of having calls made to your phone while you are away forwarded to a telephone near or at your current location (Follow me). You can also forward calls from other phones to your phone. When you lift up the handset of your phone a special dial tone will remind you that you have call forwarding currently activated.

Internal configuration of call forwarding (Follow me, internal)

		6 4				
Lift up handset		Internal number whose calls are to be forwarded			Ack. signal	Replace handset

Call will then be forwarded to the specified telephone.

Internal de-activation of call forwarding (Follow me, internal and external)

		6 4				
Lift up handset		Internal number for which call forwarding is to be canceled			Ack. signal	Replace handset

Setting up/deactivating call forwarding from an external location (external Follow me)

For the weekend you have rerouted the fax number of your office to your private fax machine at home. Let’s say you’re on the way to the office, which takes around 30 minutes, and would now like to also receive fax messages that are addressed to your office.

You then cancel the »Follow me - external« function at home and when you arrive at the office your fax messages will be waiting on you – exactly where you need them.

You can use this function to configure or cancel call forwarding to any destinations.

To configure call forwarding, dial (from an external location) the multiple subscriber number (MSN) to which the Service number (internal, virtual subscriber) has been assigned. In the initial state, the number 55 is entered as the service number.

Remote access must be enabled during configuration. The PABX uses the PIN to check the authorization for call forwarding from an external location 2.

Please note that you must first allocate a service number to this multiple extension number (MSN) number during PC configuration.


The factory setting of the 6-digit authorization PIN 2 is. You must change the PIN2 in the PC configuration, as otherwise you will not be allowed access to the PABX system.

You are located at an external telephone.

Lift up the handset of your phone and dial the MSN to which the internal service number of the PABX has been assigned to.

If remote activation of call forwarding has been enabled you will hear the special dial tone for your PABX system. Set your phone to frequency (DTMF) dialing, or use a DTMF manual transmitter.


Setting up call forwarding from an external location

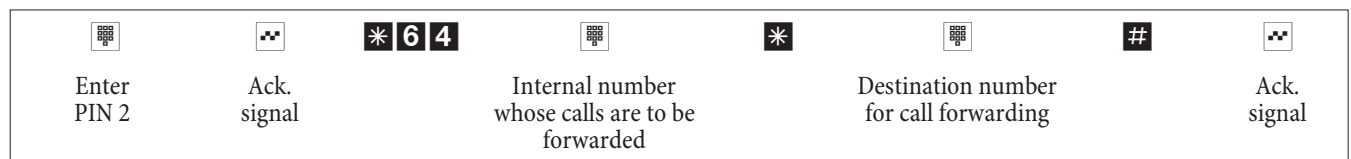

You will then hear the positive acknowledgement signal for about 1 second; the connection is then terminated and you will hear the busy signal.

Replace the handset.

Canceling call forwarding from an external location (canceling Follow me from an external location)

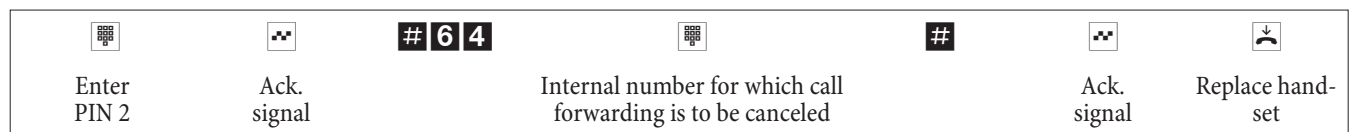

After you cancel call forwarding (positive acknowledgement signal), the connection is terminated and you will hear the busy signal.

Monitoring costs

Call data records

The PABX can store up to 500 call data records. This data is not lost in the event of a loss of power.

The PABX generates a call data record for every external call. The call data records contain detailed information about the call. For ex.: Date and time, duration of the call, number of the called party, number of the calling party, type of connection, communication costs and possible project numbers.

In the default state, all external calls that you initiate are stored. Incoming calls can be logged in two different ways.

- Only incoming calls with a certain project number are stored.
- All incoming calls are stored.

Note

Please note that only the network service provider is authorized for binding connection/call cost logging.

For configuration information using the telephone please refer to page 57.

Call data record overflow

The memory for your call data records is limited. If the PABX memory has already stored more than 480 communication data sets, a communication data overflow can be indicated by system telephones. Depending on the system telephone type used, the caller list either displays the service number together with a message or the service number only. The system telephone is specified when configuring the PABX.

ISDN terminals

The communication / call charges can be displayed at ISDN terminal devices that support this feature.

Analog terminal devices

With your PABX system it is possible to transmit the charge rate information as metering pulses via the analog ports with appropriately equipped terminal devices. In the initial state transmission of the 12 or 16 kHz charge pulse is deactivated. On account of the technology used in ISDN for the connection/call cost transfer, connection/call costs may continue to be transmitted even after the connection has been terminated. With all of the analog terminal devices available on the market, it may not always be possible for the charge pulse transmitted by your PABX system at the conclusion of a connection to be received properly by the terminal device you are using. Please observe the instructions in the operating manual for your terminal device.

The transmit pulse frequency can be set during PC configuration to 12kHz or 16kHz.

Charge counter

The PABX manages a charge counter for each internal user on the basis of the transmitted charge rate information. The counter logs the costs of all calls. You can use the PABX menu or the charge logger program to display the counter for an internal user. You can also reset the counters.

System telephones

System phones can use the PABX system menu (PIN protected) to view and delete the charge counters of the individual terminal devices.

Transmission of communication costs by the network service provider

To display call/connection costs at internal terminal devices of the PABX either during or at the end of the call and to manage the charge counter you have to apply for the rate information transfer to be activated by your network service provider. There are two ways to transfer the cost of calls:

- Transfer of rate information in units.
These units are then converted to a currency value using a defined factor. The currency must be specified previously in the PABX however.
- Transfer of the currency value.
No conversion required in the PABX.

Ask your network provider which method is used to transmit your charge rate data. Make sure your connected terminal devices support the method that is used. The PABX supports both these transmission types.

Note

If your network service provider has made this rate information display during calls available on your ISDN connection then the PABX terminal devices can display this information.

Call account (charge limitation, pocket money account)

A call charge account can be programmed for each internal user. The charge rate amounts available to that particular user are defined in this account. If the user uses up his/her allotted units he/she can then only make internal calls. If this limit is reached during an ongoing call, the call can be completed. The user can make external calls again when the number of units on his/her account is increased or the counter is deleted.

Notes

Please note that user's charge account must be activated and transmission of the rate information must be applied for at your network service provider in order to utilize this feature. If you make a call using a different provider which does not transfer the charge rate information, the call account function will be ineffective.

Before you enter the amount for the call cost account you must clear the charge counter for the internal number of the account holder. You can then set up the call account.

Note

For configuration information using the telephone please refer to page 57.

Least Cost Routing (LCR)

The built-in Least Cost Routing feature lets you make calls via an alternative carrier or service provider. When this performance feature is activated the PABX system attempts to set up the most reasonably priced or optimum connection for that time. The optimum connection may not always be the most reasonably priced however.

Diverse information must be available for selecting the best price and reasonably priced service provider for a call:

- To where is the call being placed?

- Time of the call?

The charge rate data for the LCR function can be downloaded from the Internet site www.telefonsparbuch.de. bintec elmeg GmbH is not liable for, nor can it guarantee the up-to-dateness, completeness and correctness/freedom from error of the rate tables.

Normally, you are connected with your network service provider when you lift the handset of your phone and dial the line access digit (default: 0). The built-in Least Cost Routing feature lets you make calls via an alternative carrier or service provider.

In its initial state, no LCR procedure is activated in your PABX. You can configure the various LCR procedures using a PC and the WIN-Tools CD supplied with the system.

Please note that there are some providers whose services must be applied for. Some of these providers automatically set up a connection to enroll unregistered customers. If you terminate such a connection during dialing and then subsequently attempt to set up this link again, this may result in errors during calling (communication will not be established). In this case it will be necessary to deactivate the provider concerned in the LCR professional on the WIN-Tools CD and to update the date records in the PABX.

LCR Professional features

- Configuration of up to 20 providers including provider name and prefix. Setting options for individual routing procedures (standard, trunk group, MSN)
- Up to 50 zones with a maximum of 200 entries each (prefix, phone numbers, subscribers) can be configured.
- You can configure a GSM gateway as provider. The trunk code for the port is dialed for connections at the external ISDN port of the PABX system as the »Provider prefix. When connected to one of the pabx's analog port, the internal extension number of the pabx is dialed.
- Three different fallback stages can be set.
- The rate tables are configured for Monday through Friday, Saturday and Sunday for the zones that have been configured.
- Preconfiguration and download of rate tables from the Internet (www.telefonsparbuch.de).
- Importing and saving the rate tables and transferring them to your PABX system.

Important notice for using the LCR procedure

- When a connection is established via a provider, the name of that provider is shown in the display of system telephones.
- Users can be inhibited from using this feature in PC configuration.
- The rate information is not logged completely in the call data records of the PABX when using the LCR procedure, as this information is not furnished by all service providers.
- When call forwarding is activated you should enter the network service provider as the main provider to ensure a high degree of accessibility.
- Call forwarding in the exchange, or automatic call-back to an external party will always be executed via the main network service provider.

When you lift the handset you will hear a special dial tone in all country variants except DE and AT.


Operation

You can activate/de-activate the LCR procedure using either the »Professional Configurator«, or a code sequence on the telephone.

Activating the LCR procedure





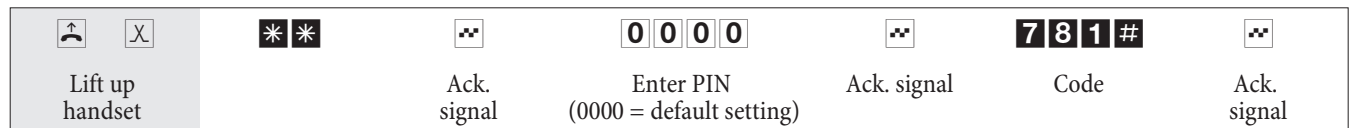

Deactivating the LCR procedure



Block dialing (Austria)

Using block dialing (prepared dialing) you can first input a number completely at a terminal device to put it into the buffer memory in the PABX system. You can then initiate dialing of the complete number. Some network service providers require block dialing to enable direct dialing to a certain terminal device. This feature is described in the operating instructions for the ISDN terminal devices. Block dialing is also possible for internal communications.

-  Lift up the handset of your phone. You will hear the internal dial tone.
- * 5 5** Dial this code.
- 0** Dial this code **0**.
-  Dial the number you wish to call.
- #** Begin dialing by pressing the key #.
Only now is the call transferred to the exchange.




You will hear the ringing signal in your handset.
The external party is being called.
The party being called lifts up the handset of his/her phone.
-  Conduct your call.
-  End the call by hanging up your handset.

PABX Settings




Activating and deactivating call signaling for analog terminal devices

You can activate/deactivate the ringing of your analog terminal devices for internal, external or all calls. You will still have use of all of the other functions for the terminal device. When the caller places a call he/she will hear the ringing signal. When you lift up the handset during a call (you can not hear the call) you will be connected with the caller.

Deactivating call signaling for analog terminal devices(Inhibiting calls ON)

 Lift up handset	* 5 7	0 / 1 / 2 all calls / only external calls / only internal calls	 Ack. signal	 Replace handset
---	--------------	---	--	---

Activating call signaling for analog terminal devices(Inhibiting calls OFF)

 Lift up handset	# 5 7 0	 Ack. signal	 Replace handset
---	----------------	---	---

Teams

Teams are groups of persons who work together to achieve a set goal. Normally, this means that all of the members of a team can be reached at a common number for external and internal calls. In the PABX this means that a number can be specifically assigned to each team of telephones / terminal devices, allowing all team members to be reached at all times for external and internal calls.

In PC configuration you can assign up to eight internal numbers or one number for external call forwarding to each of the 10 possible teams. These teams can, in turn, be allocated to the external MSN. A team number can be specified in PC configuration for the team for internal team calls.

When a subscriber dials the number for a team the team name is shown in the display of his/her phone while the call is in process. If a team member answers the call, then his or her name will be displayed.

If the MSN is dialed by an external party, or the team number by an internal user, all of the assigned terminal devices are called. Different terminal devices can be assigned to the teams (for example telephone, fax group 4); calls are signaled according to their function.

Note

Teams can also be called during an ongoing inquiry call or on call forwarding. It is also possible to forward a call to a team.

Call to busy team member (»Busy on Busy«)

If a member of a team is making a call you can decide whether further calls are to be signaled for this team (PC configuration setting). If the function »Busy on busy« has been configured for this team any further callers making calls to this team will receive the »busy« signal.

Enabling / Inhibiting a member's phone within a team

Let's assume you are leaving the phone range and wish to disable your telephone for call signaling.






You can disable your telephone for call signaling in a team or in all teams and enable it later. Enabling or inhibiting is always conducted simultaneously in the day/ night team call allocation. If your phone is disabled in a team no further team calls will be signaled at your phone.

If all team members' phones are disabled in the day/night team call allocation, the calls for this team will be signaled at the terminal devices of Team 00. The caller will hear a busy signal if no terminal device has been enabled for call sig-

naling in Team 00 either. In the initial state the numbers 10.11, 20 and 20 are entered and enabled for Team 00 in the day/night call allocation.

Note
The specific internal number must be assigned to the corresponding team to enable or inhibit a telephone within a team.

Enabling / Inhibiting subscribers within a team (log-in, log-off)

		9 4 3			
Lift up handset	Enable/inhibit subscribers		Team number (00...09)	Ack. signal	Replace handset

Enable / inhibit member(s) in all teams (log-in, log-off)

		9 4 3 *		
Lift up handset	Enable/inhibit subscribers		Ack. signal	Replace handset

Switching team call day/night assignments (call distribution)

The Day/Night team call assignment defines which internal telephones should ring when an external call comes in. The day/night team call assignment list is a table in which incoming calls are assigned to internal users.

Let's say you wish to reroute important business calls to your (home) office to an answering machine after hours so that you will not be disturbed at home.

In PC configuration you can assign two different call distribution options (team call assignment day/night) to each team. Call forwarding to an external subscriber is also possible for day/night team call assignments, allowing you to always be reached by important callers, for example. You then only need to switch the team call assignment option from day to night and call will be signaled where you need them to be.

Note
You can switch over the day/night team call mode at any time during the day or night. This switchover can be performed by any user with the proper privileges (default setting: no subscriber).

Switching all call modes

You can switch over all team call modes simultaneously. This switchover can be performed by any user with the proper privileges.

Switching day/night team call assignment for all teams

	 9 3 *	or	 9 3 *		
Lift up handset	Call mode »Day«		Call mode »Night«	Ack. signal	Replace handset

Switching team call assignments (day and night) for one team

	* 9 3	or	# 9 3			
Lift up handset	Call mode »Day«		Call mode »Night«	Team number (00...09)	Ack. signal	Replace handset

Features without user action

SMS (short messages)

SMS (Short Message Service) allows you to send/receive text messages to/from other SMS-compatible telephones in the fixed-line network or to/from cell phones.

The information for a new SMS is shown in the display of the corresponding terminal device after this information has been transferred. Depending on the terminal device being used, preset or self-generated short messages can be transmitted. Short messages are input using the key block of the telephone. A short message is restricted to 160 characters. Additional costs are charged when an SMS is transmitted.

Sending/Receiving of SMS messages is possible using analog or ISDN phones.

You can also use different system telephones for sending text messages. The system telephones can only utilize this feature (SMS) in conjunction with the PABX.

Sending/Receiving of SMS messages is only possible:

- If you have applied for this feature for your USB port (by calling the SMS center of your service provider and completing the application procedure).
- If the number for the SMS center for your service provider is stored in the PABX.
- When the caller's (sender's) number is also transmitted and this number displayed at the receiving party.
- Essentially, you can authorize all terminal devices for SMS.
- Within a team call assignment configuration you can only assign one telephone (analog or ISDN) with SMS authorization in order that the SMSs reach that specific phone.
- You can only assign one outgoing number (MSN) to an SMS-authorized telephone. Assignment is made in PC configuration in the section »Internal subscriber« under the tab »Phone number«. Log-in at the SMS center and receiving of the SMSs are then made using this number.
- If you enter an SMS-authorized telephone in the team call allocation (in the section »External numbers«) in several teams with different MSNs, the SMS will only be received at the telephone with the number entered as the outgoing number.

Note

Contact your service provider to find out what the costs are for sending/receiving SMS.

Transmission of user-defined characters (UUS1)

You can send text messages from one ISDN terminal device to another ISDN terminal without having to call that particular subscriber. There are no additional charges for transmission of these types of messages.

The information about a new text message is shown in the display of the corresponding terminal device after this information has been transferred. Depending on the type of ISDN terminal device used, these text messages may be default messages, or freely generated texts.

You can only use this performance feature if it is supported by the ISDN terminal devices. Please refer to the operating instructions for your ISDN terminal devices for proper use.

You can also utilize the transmission of text messages from and to external telephones if the feature »UUS1 (User to User Signaling1)« has been activated for your connection. Ask your network service provider for details.

Information from the ISDN network (MWI)

The MWI feature allows your service provider to inform you if new messages for you are actually available. For example, if you have a new e-mail message in your mailbox or on the server of your Internet provider, MWI will notify you.

Terminal devices that support this feature can display or signal this information. MWI information is transferred transparently by the PABX to the terminal devices.

Note

You must apply for this ISDN connection feature at your service provider. You will then be informed of all available services there.

Automatic changeover of authorization for external calls

Do you need to revoke or grant authorization privileges of certain subscribers / terminal devices of the PABX for making external calls?

You can specify separately for each telephone / terminal device whether the authorization privileges for making external calls are to be revoked or granted for a certain time defined in the calendar. After the authorization privileges have been changed automatically, the user concerned will not be able to place any external calls.

No operating actions are required for this function. In PC configuration you can mark (specify) the user for which call authorization is to be changed. The calendar used to determine when changeover is to take place can be set in PC configuration.

Note

Emergency calls using terminal devices provided for this purpose, or emergency numbers, are exempt from this authorization privilege change.

Extended addressing (Sub-addressing)

An ISDN terminal device can be reached at a certain MSN. Using the feature »SUB« (Subaddressing) you can expand the addressing function for a terminal device with a certain MSN. Subaddressing is transferred transparently by the PABX.

You can only utilize this feature if the feature

»SUB« (Subaddressing) is active for your connection and if it is supported by the ISDN terminal devices involved. Please refer to the operating instructions for your ISDN terminal devices for proper use.

Calendar

You have a set routine and are either in the office or at home at certain times during the day. But let's say that you want to take your calls in the hobby room on Sundays.

You can set a calendar in the call distribution for each team. The two team call modes Day and Night will then be switched automatically based on the data in the calendar.

For example, let's say you wish to change the authorization privileges for a certain user for after business hours.

When configuring your PABX you can specify separately for each user whether that user's authorization for external calls is to be changed over automatically. Changeover is performed in accordance with the data in the assigned calendar.

You can program two separate calendars for the PABX using your PC. It is also possible to change over have changeover between a day and night call mode performed automatically at a time you specify. Different day/night changeover times can be selected for each day of the week. A calendar consists of four switching times, which, in turn, can be specifically assigned to the individual days of the week.

Note

When a calendar is assigned, this overrides any manual changeover made for these modes in the day/night team call assignment list.

Example:

Week day	Calendar 1							
	Switching time 1		Switching time 2		Switching time 3		Switching time 4	
	Day	Night	Day	Night	Day	Night	Day	Night
Monday	09:30			18:00	18:45			24:00
Friday		14:00	Inactive		Inactive		23:00	
Saturday	09:00		Inactive		Inactive			23:00

Park

You have a standard ISDN telephone at the internal ISDN connection and are conducting a call from this phone. During the call it becomes apparent to you that you must continue this call in a different room.

You can »park« the call for around 2 minutes, unplug the telephone from the ISDN connection and then plug it back in at the internal ISDN port in the other room. After you unpark the call you can continue with your conversation.

Note

This feature is supported for ISDN telephones by the PABX at the internal ISDN connection. Please refer to the operating instructions for your ISDN telephone for proper use.

Data packet transfer (X.31)

You can connect a data terminal that operates in compliance with the X. 31 transmission standard (data transfer in D channel) to the internal ISDN connection of your PABX. For example a cash register terminal for electronic payment with ec banking cards, credit cards, ATM cards or customer cards.

You must make special settings in the Professional Configurator for the PABX system in order to use these types of terminals.

You can only use this feature if the feature »X. 31« is activated for your connection and if it is supported by the ISDN terminal devices. Please refer to the operating instructions for the terminal devices involved.

Protection of data link

You are in the middle of sending out several fax messages. The feature »Call waiting« is configured at the connection for your fax machine. If you receive a call at a different fax device at the same time, data transfer will be interfered with, or even disrupted completely by the call waiting signal.

»Call waiting« is suppressed at the analog port for fax devices to ensure correct data exchange at all times and to prevent any possible interference signal.

You can define certain types of terminal devices for analog ports in PC Configuration. As soon as you specify a different type of connection than »Telephone«, e. g., »Modem« or »fax group 3«, the call waiting function will be deactivated for that connection.

Emergency call priority

For »Emergencies«: The »Emergency call« function.

Let's assume that an emergency occurs and you must urgently call the police, fire department or another emergency

number. And to make matters worse, both external B channels of the ISDN connection are busy.

You have, however, “informed” your PABX of emergency numbers that must always be reachable in the event of emergencies. If you dial one of these emergency call numbersthe number is recognized by the PABX and a B channel “freed” automatically by the PABX for an emergency call.

You can enter up to six (6) emergency numbers during PC configuration. Emergency numbers are not affected by any call authorization parameters or call control that are configured.

For the function »Making calls with direct exchange line access« the external ISDN connection is taken and calling is permitted. If the external B channels are busy, a B channel is freed (released) and the parties conducting their call on that channel will hear a busy signal. An emergency call already in progress is not interrupted.

For the function »Making calls without direct exchange line access« the internal connection is busy and internal calls can be made. You must dial a »0« before making an external call. If all of the external B channels are busy, one B channel is disconnected and the parties conducting their call on that channel will hear a busy signal. An emergency call already in progress is not interrupted.

Note

If calls are in progress using two ISDN telephones on the same internal ISDN bus, it is not possible to initiate an emergency call from a third ISDN telephone on this bus.

Dial ranges

During configuration you can define restrictions for placing external calls for certain terminal devices.

Dialing regions are not activated in the default settings. In PC configuration you can assign each terminal device individually to call control.

The numbers listed in the Restricted Numbers table (in the Section »Restricted Numbers«) can not be dialed using the analog terminal devices included in the associated dialing region. For example, the entry of the number »0190« in the list would prevent calls being made to costly service providers.

The entries in the unrestricted numbers table (in the Section »Unrestricted numbers«) can cancel a portion of the restrictions imposed on numbers in call restriction. For example, if the number »0190123456« is entered in the unrestricted numbers table, this number may be dialed, even if all »0190« numbers have been inhibited by call restriction. If two identical numbers (identical sequence of digits and same number of digits) are entered as both barred and restricted, then these numbers can not be dialed.

If the prefix number for a different network service provider is dialed from a number that is inhibited by the dialing region, that dialing region is not active.

Note

Subscribers without authorization for external calls can obtain the authorization to make external calls to these numbers.

Another possible setting option is the regional numbers. The users can not make any domestic long-distance or international calls. Ten (10) special numbers can be configured for these calling privileges; these numbers can be used to make domestic long-distance or international calls. A special number can consist of a complete phone number or parts of a number (for example the first few digits).

Time acceptance

You can activate or deactivate the time acceptance function from the ISDN network. This feature is required, in case the ISDN network does not transmit the time correctly. In the event of a loss of power, all stored contents (program and application data) are retained in the PABX without any changes. The internal clock for the PABX system is updated automatically during the next external call (if configured). Activation of accepting the updated time is set via PC configuration.

Conducting calls with several subscribers

While you are conducting a call you can

- call a further party (inquiry call).
- accept a second call during an ongoing call (call waiting).
- Transfer a call.
- Transfer in the network (ECT).
- connect a waiting caller.
- Conduct two calls at once while switching between the calls (broker's call).
- Talk to two parties simultaneously (three-party conference call).

If you wish to utilize these functions at an external point-to-multipoint connection, you must apply for them. Ask your network service provider for details.

Note

The following sequences and codes apply to the use of analog telephones. ISDN telephones have their own (dedicated) procedures. Consult the operating instructions for your terminal devices for further information.

Inquiry call

You can call another party at any time during an ongoing call.



You are conducting a call.
You would like to call another party.



Press the R key.
You will hear the internal dial tone.



If you wish to speak to an external party, dial 0 first.

If you hear a busy signal after dialing 0, either your telephone does not have proper authorization for an external call, or the line is busy.



Dial the number of the party you wish to call.
You will hear the ringing signal in your handset.

The party will be called.
The party being called lifts up the handset of his/her phone.



Conduct your call.
To end the inquiry call press the Disconnect key on your ISDN phone.

or



With analog terminal devices you must first dial the code **R 1** the current call is then canceled and you are re-connected with the first party.



Continue with your call.



Call waiting

During an ongoing call you can accept, or refuse, a waiting call at any time.


Note

Call waiting is possible, however, for internal and external calls to analog telephones.

Accepting a call (entering into an inquiry call)

-  You are conducting a call.
A second party calls you.
You hear the call waiting signal.
- R 2** Dial this code.
-  You will be connected with the waiting party. Your first call is put on hold (see »Inquiry call«). For further procedures refer also to »Broker's call« or »Three-party conference call«.

Refusing a call



-  You are conducting a call.
A second party calls you.
You hear the call waiting signal.
- R 0** Dial the code for refusing the waiting call. The caller will then hear the busy signal.

Accepting a call


You can also accept a waiting call by hanging up the handset and ending the first call. When then lift up the handset again you will be connected with the caller who was previously waiting.

Transfer calls**Transferring calls internally without advance notice**

You can transfer calls when you dial the number of the internal party and then hang up the handset. The internal party is then called and can take the call when he/she lifts the handset.


-  You are conducting an external call.
- R** Press the R key.
You will hear the internal dial tone.
-  Dial the number of the internal party to whom you wish to transfer the call.


You will hear the ringing signal in your handset.
The party will be called.

If you hear the busy signal press the **R** key again to retrieve the call that is on hold.
-  Replace the handset. The party will be called. The party being called lifts up the handset and conducts the external call. If the called party does not lift up his/her handset you will be called back at your telephone after appr. 30 seconds.



Transferring calls with advance notice

You wish to transfer an internal or external call to another internal party and speak with that party beforehand.

-  You are conducting an internal or external call. You wish to transfer the call to another party.
- R** Press the R key. You will hear the internal dial tone.

If you hear the busy signal, press the Recall flash button again to retrieve the call.
-  Dial the number of the party you wish to call.
You will hear the ringing signal in your handset.

The party will be called.
The party being called lifts up the handset of his/her phone.

-  Conduct this internal call.
Tell your internal partner that you wish to transfer the call currently on hold to him/her.
-  Replace the handset.
The other internal party can then continue with the call.

Connecting (ECT)

During an ongoing call, you have the option of accepting a further call, or of initiating a second call yourself. The first party is put on hold during the inquiry call. You can then connect both parties with one another and you will be disconnected (from that call).

In the Professional Configurator you can define for each subscriber separately whether an external party is to be put on hold in the PABX or in the exchange.

Transfer within the PABX

The feature »Hold in the PABX« must be configured.

The two external callers will be connected via the PABX. Your PABX is not available for other external calls while an external, transferred call is in progress.

Transfer in the exchange




The feature »Hold in the exchange« must be configured.

The two external callers will be connected in the exchange. Your PABX remains fully available (for two connections) while the transferred call is in progress.

You can only utilize this function if the feature »ECT« has been activated for your ISDN connection. Ask your network service provider for details.

Connecting

Please note that ISDN terminal devices can only utilize the feature »Connect« via a special key or menu function. The following procedure applies only to analog telephones.

-  You are conducting a call with party 1.
A further call is signaled, for example by call waiting.
-  Dial this code.
Party 2 answers; you can speak with Party 2 Party 1 is put on hold.
-  You would like to connect the two parties with one another.
Dial this code.

The two parties are then connected. The charges for the connection are billed to the party who established the connection.


Connecting a waiting subscriber with several subscribers on hold

You have the option of putting several connections on hold and using a further connection (inquiry call connection) to transfer a party on hold. You can utilize this feature with a system telephone or with an ISDN telephone that support this function (refer to operating instructions for terminal device involved).

Broker`s call

The broker`s call feature allows you to switch back and forth between internal or external callers. The party that is on hold will hear the music on hold (when programmed). With analog telephones you can switch between two callers. You can terminate each specific call. During system configuration you can define whether the callers are to be put on hold in your PABX or in the exchange.

You are conducting a call and wish to speak to a further party, without the first caller being able to hear your conversation with the second caller.

- R** Press the R key.
You will hear the internal dial tone.
 -  If you wish to speak to an external party, dial 0 first.
Dial the number of the party you wish to call.
You will hear the ringing signal in your handset.
The party will be called.
The party being called lifts up the handset of his/her phone.
 - J** You are conducting the call.
The first call is put on hold.
 - R 2** Dial this code to return to your first caller; the second party is put on hold. You can then use this code to switch back and forth between the two callers.
- or
- R 0** You can end the call that is on hold.
Dial this code.
- or
- R 1** You can end the current call.
Dial this code.

- If you switch back and forth between an internal caller and an external party (broker`s call) and then hang up your handset, your call is terminated and the two callers will be connected with one another!
- If you switch back and forth between two external parties (broker`s call) and then hang up your handset, the current call is terminated and the caller on hold will call you by way of the »Recall«.
- If, during a broker`s call, you press the Recall flash button and then dial 4, the two external parties are connected with one another and your call with both of the external parties is terminated. The charges for the call that you initiated will be billed to you.

Three-party conference call

You can make three-party conference calls with external and internal callers.


The performance feature »On hold at the exchange« must be configured to conduct three-party conference calls at the exchange office with two external callers. Only one B channel of the ISDN connection is busy with two external callers.

The feature »Hold in PABX« must be configured to conduct a three-party conference call in the PABX with external or internal caller. Both B channels of the ISDN connection are used when making a three-party conference call with two external parties.

You can also include a caller from »call waiting« or »on hold« in an ongoing call.

Initiate a three-party conference call

- J** You are conducting a call with one party and wish to include a further party in the call.
- R** Press the R key.
You will hear the internal dial tone.
If you wish to speak to an external party, dial 0 first.

 Dial the number of the party you wish to call.
 You will hear the ringing signal in your handset. The party will be called.
 The party being called lifts up the handset of his/her phone.

 You would like to include this party in the first call.

R 3 Dial this code.

 Conduct your three-party conference call.

You would now like to exclude the party that you first brought into the conference call from further conversation. This caller then remains on hold in an inquiry call.

R 2 Dial this code.

 You can then continue your call with the second party. The first party is on hold.

Note

The conference is ended when you hang up your handset. A party included in the conference call can hang up at any time and the party which initiated the call can then continue the conference with the remaining callers.


System parked inquiry

You are talking on the telephone and would like to route this call to a colleague. However, you are unsure about your colleague's current location. Use the »system parked inquiry« feature to keep the caller within the PABX waiting loop. You can now use your telephone for an announcement or message signaling to your colleague that he or she has a waiting inquiry call. The numeric code of the system parked inquiry allows the colleague to accept the call from any telephone.


This procedure is possible from analog, ISDN, and system telephones. The system parked inquiry is initiated with the inquiry call feature. The called subscriber uses the inquiry call feature to dial the default numeric code (*** 5 9 6**) or one of 4 configurable numeric codes from the internal telephone number plan. If the dialed extension is not already being used for a different system parked inquiry, the subscriber will hear a positive acknowledgement signal and hangs up the telephone. If the negative acknowledgement signal is heard, the subscriber cancels the inquiry call and repeats the process for another internal extension released for the system parked inquiry. During system parked inquiry, the external subscriber will be put on hold by the system and will hear music on hold (when programmed). The telephone is now available for other uses, for example an announcement or message. If the call within the waiting loop is not accepted by a subscriber within a specified time, the initiating subscriber receives a call-back or a call-waiting signal.

The system parked inquiry is possible only from within an external or internal connection. Only one inquiry call is possible for each code. If an internal number is already being used for »System parked inquiry« you must search for an unused internal number. Only subscribers with at least an »incoming receive only authorization« can accept a call from the system parked inquiry loop of an external waiting / on hold caller; all other subscribers hear a busy signal.

Initiating a system-parked inquiry

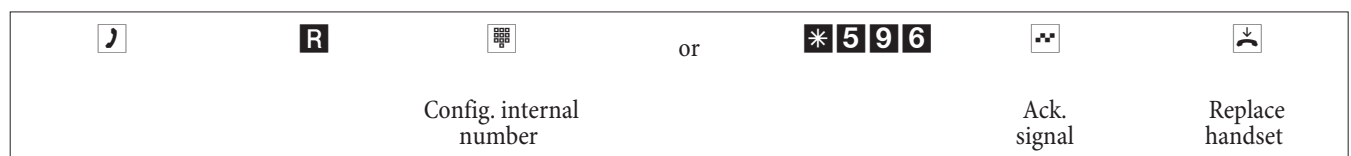

Accepting a system-parked inquiry

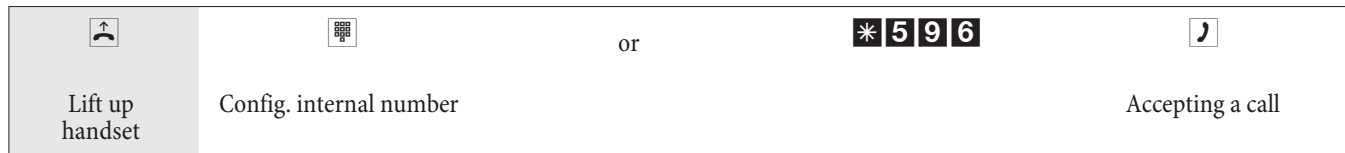

Function keys for calls on hold (park keys)

The system park inquiry feature for ICT systems has been expanded to include support for function keys on system telephones. This allows calls to be parked or unparked just by pressing the corresponding function keys.

Modified code numbers

You can program your PABX with individual code numbers for the following features. Customizing the default PABX numeric code adds an extension from the internal telephone number plan of the system.

Enter all changed code numbers in the table. Various code numbers can be entered for the »System-parked inquiry« feature.

Feature	Default code number	Changed code number
Line access digit	0 (UK 9)	
System parked inquiry (four codes)	* 5 9 6	

The operation principle of the features whose code number has been changed remains as described. You can either use the changed code number (internal extension number) or the code number given in the operating instructions (except for the line access digit).

Installation

Installation of the PABX

Before beginning the installation check the package to ensure that all items are included.

Contents:

- 1 PABX unit
- Plug-in power supply unit
- 1 ISDN connection cable (3 meters)
- 1 USB connection cable (3 meters)
- 1 Set of operating instructions
- 1 Drilling template
- 1 CD-ROM for configuration, drivers and software, documentation in pdf-format
- 1 enclosed package containing: 3 dowels and 3 screws.


Installation sequence

This section gives you step-by-step instructions on how to install your PABX. It is important that you adhere to the installation sequence given here.

- Select an installation location that is a maximum of 1.5 meters away from a 230 V AC outlet and the network termination (ISDN connection) of the service provider.
- To prevent mutual interference, do not install your PABX system in the immediate vicinity of electronic devices such as stereo equipment, electronic office equipment or microwave units.
Avoid installing your PABX near sources of excessive heat, e.g. radiators or in rooms with excessive humidity.
The ambient temperature must be between 5 and 40°C.
- Having identified the appropriate location, place the drilling template on the selected mounting location and ensure that it is perfectly perpendicular. Take care to keep the spaces as specified on the drilling template.
- Mark the drilling points on the wall using the drilling template.
- Ensure that all the contact surfaces have firm contact with the wall. ensure that there are no power lines, cables, etc. located at or under the marked drilling holes.
- Drill the three mounting holes at the marked positions. When using anchoring studs, use a 6 mm masonry drill to drill the holes and Put in the dowels.
- Screw two of the screws into the two top dowels in the wall such that there is a gap of about 5 mm between the head of the screw and the wall.

Note

Attention! You may be electrostatically charged. To ensure that you have no electrostatic charge, touch a conducting object connected to »ground« (e.g. water pipe) before you open the PABX system

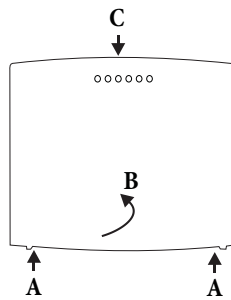

Opening the PABX: »C« is the front of the PABX system. Pull the two plastic springs marked »A« outward until the cover is released. Lift off the cover carefully toward the rear. It can then be easily lifted off. The terminal panel is then visible under the enclosure cover.

- Hang the PABX on the screws by inserting the screw heads into the rear panel mounting holes.
- After this, screw the third screw in tightly at the marked position to secure the PABX on the wall.
- Install the jacks for the ISDN terminal devices and the analog terminal devices and Connect the jacks with the PABX.
- Plug the terminal device connectors into the jacks.
- If you wish to configure your PABX system yourself via the PC, you can do this via the USB port on the PABX, or at the internal ISDN connection or the Ethernet port.
To configure your system via the internal ISDN connection, you must have an operational ISDN PC card installed in your PC. Connect your PC and PABX system via the installed ISDN jacks.
To configure the system via the PC port connect the PC port of your PABX system to the USB port of the PC using the PC connecting cord supplied with the system.
To configure the system via Ethernet connect the Ethernet port of the PC to the LAN1 port of your PABX system using a Cat.5 connecting cord.
- Close the enclosure. To close the PABX, insert the catches (on the back of the bottom of the enclosure) into the openings in the PABX enclosure cover. Press down on the cover at the front until it catches.
- Connect port »S0: EXT« to the network termination unit via the ISDN connecting cord.

Note


The mains plug for the network termination unit does not have to be plugged in to operate the PABX.

- You can now use your telephone system.

Note


Observe the installation and commissioning instructions from the splitter and DSL modem equipment manufacturers.

Connections to the PABX system

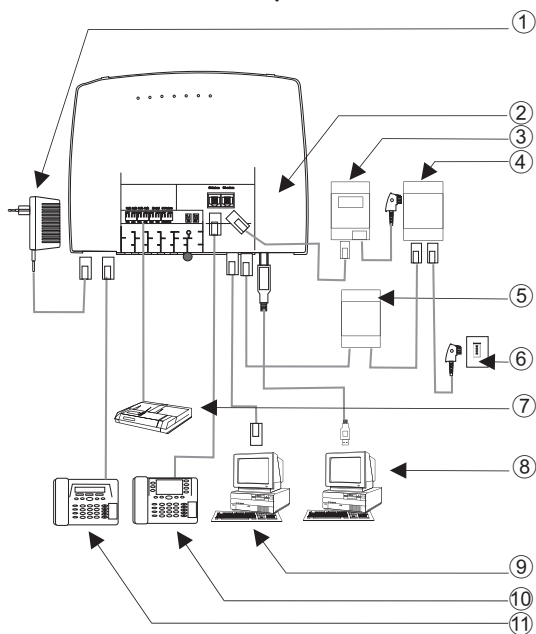


- ① Plug-in power supply unit
- ② View inside the PABX system
- ③ NT
- ④ Splitter
- ⑤ DSL modem
- ⑥ ISDN port
- ⑦ Answering machine:
- ⑧ PC via USB
- ⑨ PC via LAN
- ⑩ ISDN telephone
- ⑪ Analog telephone

View inside the PABX system

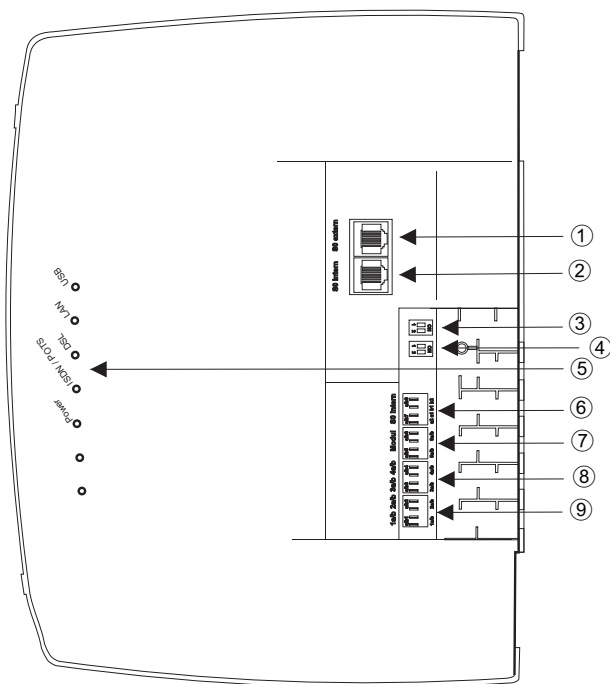

- ① S0-External-Connection RJ45
- ② S0-Internal-Connection RJ45
- ③ Switch for the terminating resistors external
- ④ Switch for the terminating resistors Internal
- ⑤ LEDs
- ⑥ Fixed internal ISDN connection
- ⑦ a/b5,a/b6 Analog connections (module)
- ⑧ a/b3,a/b4 Analog connections
- ⑨ a/b1,a/b2 Analog connections

Terminals of the PABX

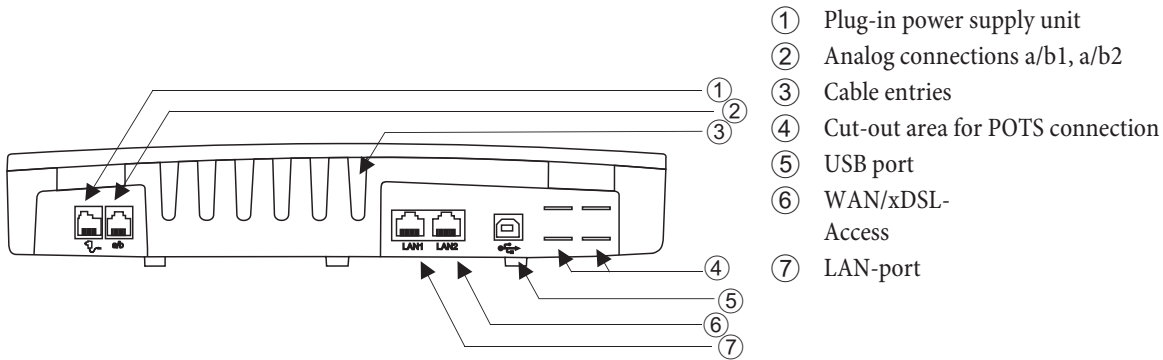

Internal ISDN connection

You can connect On ISDN terminal devices directly to the PABX system. The internal ISDN connection of the PABX provides 2.5 watts of power for connecting at least two (2) ISDN terminal devices. Further terminal devices can be installed via a hardwired ISDN bus. Please read the instructions for hard wiring in the installation manual on the CD.

Analog connections

Only analog terminal devices with tone dialing (DTMF dialing) should be connected to the analog ports. The recall flash button must execute the flash function. The functions described in the operating and configuration instructions can be used without any restrictions with these terminal devices.


Note

Flash duration detection can be set by PC configuration.

The PABX is equipped with two types of internal connections:

- Four connections a/b1...a/b4 for hard-wiring of outlets.
 After you have plugged a terminal device into the RJ12 jack of the PABX, you may not use the associated fixed connection a/b1 and a/b2.
- Two analog terminal devices can be connected using RJ12 connectors at the RJ12 jack.

Assignment of the RJ12 jack

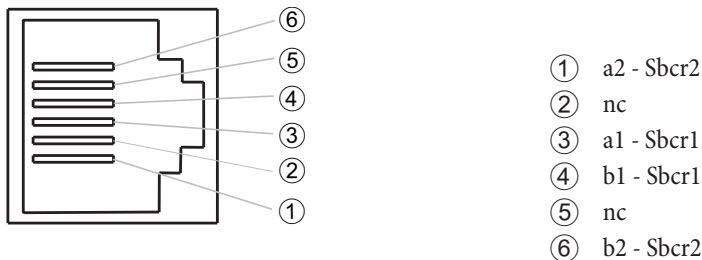

USB/PC interface

The USB port is used for linking a PC to the PABX system.

Note

The USB port of the PABX functions as a USB network card. This allows you to perform PC configuration of the ISDN router the same way as for Ethernet installation

Use the USB connecting cord supplied with the system for this. If you use a different USB connecting cord ensure that the distance between the PABX and the PC does not exceed five meters, depending on the type of USB connecting cord you are using.

The PABX system USB port is ready for operation at the PC connected to the system when the LED »USB« lights up and stays lit. PC applications that run via the USB connection can be started. The LED will blink when the USB driver is active at the PC connected to the system and data is being exchanged via the USB port.

Ethernet connection LAN1

The port designated LAN 1 is set automatically to the maximum data transfer rate (from 10 Mbits/ semi-duplex up to 100 Mbit/s full duplex) for the opposite terminal (PC). Use a network cable for this (CAT.5, 1:1 with RJ-45 connectors at both ends).

Connecting the DSL modem to the Ethernet (10BaseT) port

If you have a DSL connection you must connect your DSL modem to the WAN port of the PABX system. Use a network cable for this (CAT. 5, 1:1 with RJ-45 connectors at both ends). This cable may be included in the standard delivery scope for your DSL modem.


Note

Please be sure to use a DSL-modem with an Ethernet (10BaseT) port.

Note

Also follow the installation instructions provided by the manufacturer of the splitters, modems and NT.

Modules

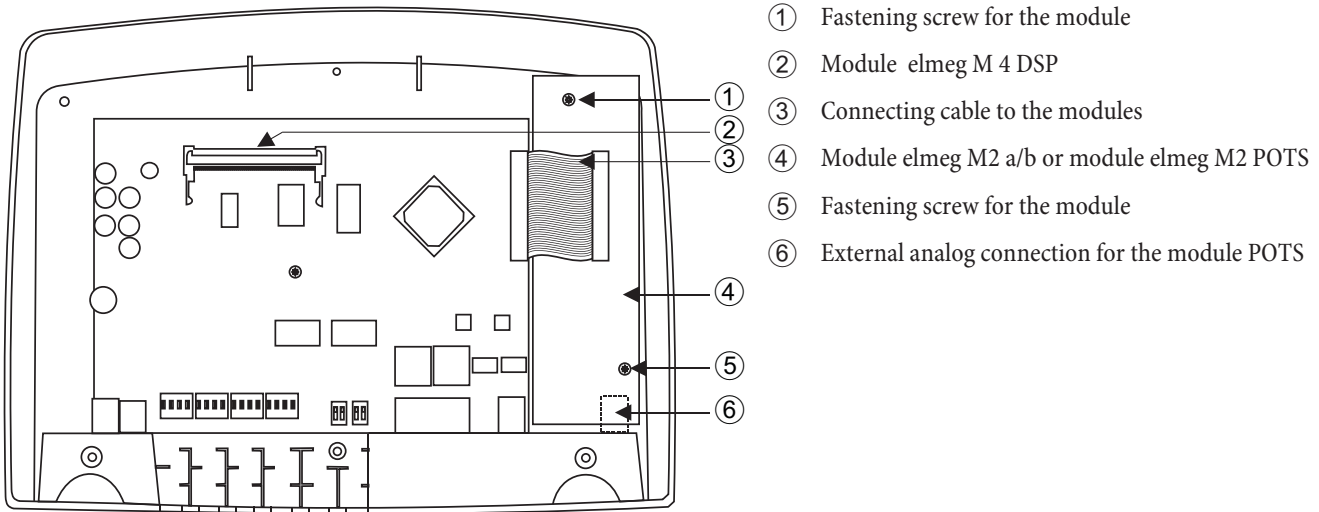

Module installation

The modules have already been taken into account for the PABX system. If a module is installed prior to initial commissioning, the numbers are automatically assigned to the connections.

Various modules can be used for the PABX systems. You should first make a backup copy of all pabx data and then reset the system to default state (code »999«). Switch the system off, then mount the modules. Restart the system.

Note


Disconnect the PABX from all analog, door terminal and ISDN connections. Attention! You may be electrostatically charged. To ensure that you have no electrostatic charge, touch a conducting object connected to »ground« (e. g. water pipe) before you open the PABX system.

Please observe that only one module can be inserted into each available PABX slot:

Slot 2 = Module elmeg M 1 POTS or module elmeg M 2 a/b.

Slot 1 = Module elmeg M 4 DSP (only elmeg T444).

Installation of the module elmeg M 1 POTS

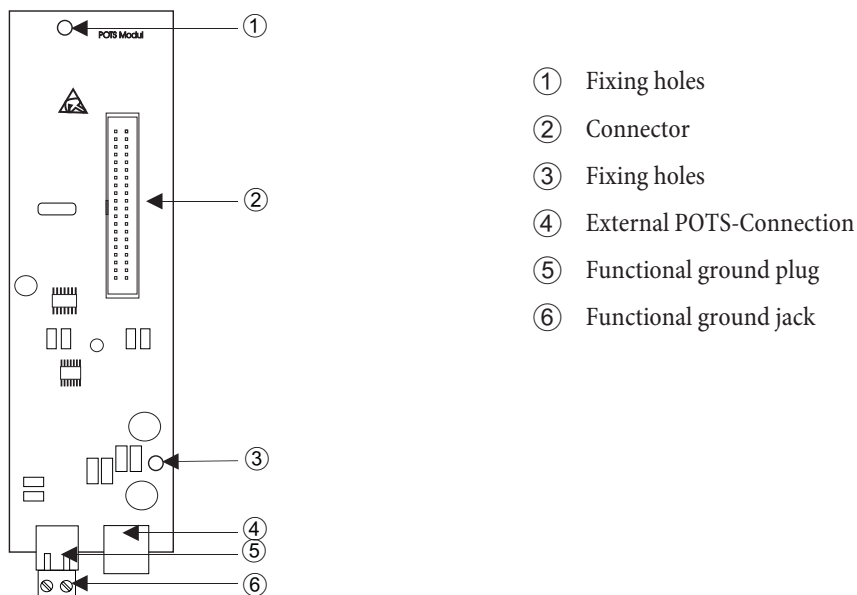

Connection to the PABX system is made using the ribbon cable provided with the system. The external analog port and connection of the functional ground is made using the ports on the module. The marked cut-out areas in the PABX housing must be removed for this. As fine overload protection is integrated into the elmeg M 1 POTS module, function grounding must be connected! The analog port can also be connected via terminals a/b5 / a/b6 to ports la and lb.

External POTS Connection



Ports La and Lb are electrically isolated from the PABX system circuit.


Functional ground

As the elmeg M 1 POTS module is equipped with a functional ground connection, there should be a »ground line« (water line, heating system line or grounding circuit connection for the building wiring system) near the installation location of the module. This connection is required for use of the module POTS. The connection to the PABX must be made with a connecting lead of at least 2.5 mm². The function grounding connection can be plugged in to the module. Both functional ground connections are connected together.

Note

If you use terminal devices that are linked with the PABX system via USB or RS232, you must install the functional grounding, as otherwise »hum loops« may be produced.


Installation of the module elmeg M 2 a/b

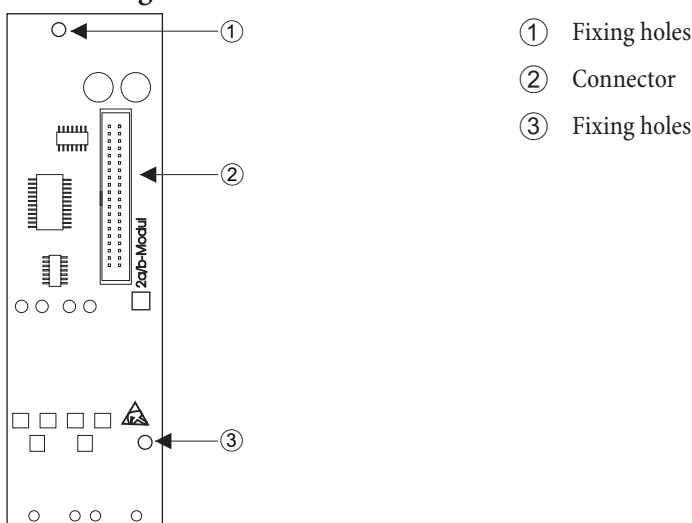

Connection to the PABX system is made using the ribbon cable provided with the system. The two analog subscribers are connected at jacks a/b5 and a/b6 on the PABX system.

Installation of the module elmeg M 4 DSP

As shown in the picture, insert the module at an angle of about 45 degrees into the socket (A) and then press it down (B) until the catches of the connector lock in place in the module. To remove the module, press both catches out at the same time and the module will snap out to the position shown at the bottom of the picture. You can then take it out by pulling out against the direction (A) shown here.

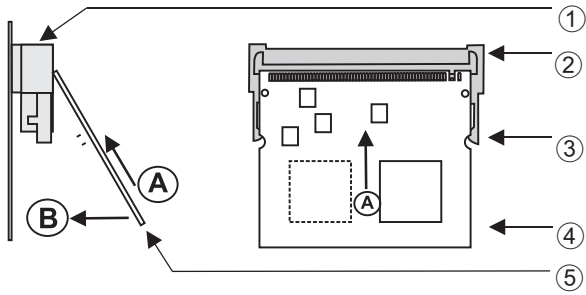

- ① Module slot
- ② Module slot
- ③ Slot catch
- ④ Module
- ⑤ Plugging direction for the installation of the module

Commissioning the phone part

Phone number plan

When you start up your PABX for the first time a number of settings are already pre-configured (default settings). This includes the internal numbers. This means that you can place calls immediately after switching on your PABX.

Internal numbers:

- Numbers 20...29 are set for the »Connection of ISDN terminal devices« on the internal ISDN bus.
- The internal numbers 10...13 are provided for analog ports, numbers 30...39 for CAPI and numbers 40...43 for DSL.
- Internal service number: The internal number 55 has been assigned as the service number. This number is used to provide access for the PC to the PABX system via the internal ISDN connection. You can configure the PABX via the internal ISDN connection and a PC with an ISDN card.
- External service number: An MSN or, with a point-to-point access, a direct dial-in number is assigned to the internal service number 55 during PC configuration. This »external service number« is the only access possible for configuring »Follow me« and »Room monitoring« from an outside location.
- Team 00: In the initial state the numbers 10, 11 and 20 are entered and enabled for Team 00 in the day/night team call allocation.

Default setting

- The external ISDN connection is set to point-to-multipoint access.
- The four-digit PIN1 (password) is set to **0000**.
- The six-digit PIN2 (password) is set to **000000**.
- Assignment of an external ISDN connection is made by entering **0**.
- The internal ISDN bus is configured as »S0 bus, internal«.
- The switchable call mode for Team 00 is set to »Day mode«.
- The group call is set for »simultaneous«.
- The switching privilege for teams is configured for no terminal device.
- All users are in Pick-up group 00.
- Accepting (pick-up) of a call is possible for all terminal devices.
- All subscribers can use the telephone directory.
- No terminal device is authorized for SMS reception.
- The analog connections are configured for telephones that use DTMF dialing and a flash key (200 ms).
- The active terminal devices are authorized for international calls.
- The dial range is not configured.
- The number of the caller is displayed (caller ID).
- The B number is transmitted to the caller.
- Call waiting for a/b terminal devices has not been configured.
- No entries in telephone directory.

- Music on hold (MOH): Melody 1 is played.
- No time or date is stored.
- The charge rate counters are set to 0.
- Up to 500 call data records can be stored for the terminal devices.
- The numbers in the call data records are shown in full length.
- Call data records for incoming calls are stored only when a project number has been assigned.
- Analog charge rate transmission is deactivated.
- Analog number transmission is activated.
- The keypad function for the external ISDN connection is not enabled for terminal devices.
- The meter pulse frequency is set to 16 kHz.
- Remote access can be initiated from any terminal device.
- Remote switching authorization (External follow me) is deactivated.
- The switchover times are set as follows in the calendar for all days of the week:
Switching Night / Day: 8:00 AM,
Switching Day / Night: 4:00 PM
- A calendar has not been assigned to the team options.
- LCR is not active.
- Call charge logging is de-activated for all subscribers.
- Initial setting for router, please refer to page 73.

Initial startup (telephone operation)

Install your PABX as described in the section »Installation »«.

Make all necessary connections, including the 230 V AC mains power supply.

Note

When you switch on the 230 V AC power supply you may not interrupt the supply of power during the initialization phase of the PABX (20 seconds!)

In its initial state, the PABX will signal an external call at the analog terminal devices and at the ISDN terminal device that has the number 20.

You must then assign the numbers (MSN and direct dial-in) to the terminal devices via PC configuration to ensure that the other connected telephones and terminal devices can all be reached by external parties.

If your PABX system is set for use at a point-to-point connection it is crucial that you enter your local area code in the Section »Dialing region« in PC Configuration. Only after doing this can you take advantage of features such as »Call forwarding« (Partial Rerouting) and »Automatic Call-back«.

Your PABX is equipped with an internal »Phone number plan« (see page 53) that can be edited. The internal numbers (or MSN extensions) have default settings in the PABX's initial state. You can change these internal numbers as you require through configuration with the PC. Consult the operating instructions for your ISDN terminal devices to find out how and with which settings the various features can be used.

Note

Your PABX supports the flash function for analog telephones. Therefore, never just briefly replace the handset or press the button in the cradle briefly with your hand, as the PABX would take this as a flash signal instead of hanging up.

Configuration using a telephone

Configuration using a telephone

Various settings are protected by PIN1 in the PABX. In the default state, this PIN 1 is set to 0000. After you begin configuration you can set the features for your system using the codes described here. The telephone being used for programming can not be reached while the system is being configured.

You will hear the positive acknowledgement signal once you successfully conclude configuration for a setting. You can then move on to configure the next setting. If you wait for more than 40 seconds between one entry and another, the PABX will terminate configuration and you will hear the busy signal. All input made up to that point which was concluded with a positive acknowledgement signal will be saved when you hang up the handset. Saving is performed for 10 seconds after you hang up the handset. During this period it is important that you do not begin a new configuration of the system, and that power is not interrupted to the system.

The following procedure must be performed one time at the beginning of configuration:

			0 0 0 0	
Lift up handset		Ack. signal	Enter PIN 1	Ack. signal

This symbol indicates that a configuration is required. Be sure to complete the »Initial programming« before entering codes.

You can set the following features:

- Setting the date and the time (see page 57)
- Cancel settings (see page 57)
- Enable or inhibit remote access (see page 57)
- Charge / Setting up call accounts (see page 22, 57)
- Activate/ de-activate LCR (see page 59)
- Changing PIN 1 or PIN 2 (see page 56)

PIN 1 / PIN 2

You can prevent misuse of your PABX by other parties by implementing various security functions. Your PABX settings can be protected using your 4-digit PIN1 (code number). Access by external parties (remote access) is protected using your 6-digit PIN2.

PIN 1 (4-digit): Security precaution against misuse of your PABX by other parties.

PIN1 is a 4-digit code number that is required when you wish to protect your system settings against unauthorized access.

PIN 2 (6-digit): Security for settings made from external telephones

For the settings:




- Call forwarding (Follow me) from external location
- Room monitoring from external location

prevent unauthorized parties from using your PABX. Only after you enter this 6-digit PIN2 are you allowed to utilize functions in your PABX that can be activated/deactivated from external telephones.

Note
Remote access using this 6-digit PIN2 is only possible when this PIN2 has been changed individually, i. e. it is no longer in its initial setting of 000000.

Changing PIN




Begin the configuration procedure (see page 55).

9 1 1 1	or	9 1 2			
Change PIN1 (4-digit)		Change PIN2 (6-digit)	Input new PIN	Input new PIN	Ack. signal

Write down your PIN and keep it in a safe place, because if you forget or lose your PIN 1 you will no longer have access for configuring the PABX.

Setting up cost monitoring

Clearing the charge counters for one or all of the users




8 5 0		or		
Code	internal number (for one) or * for all internal users			Ack. signal

Setting up / delete call accounts


Input this parameter with 3 places after the decimal point. For example

Amount: 100 Euros Enter: 100 000

Amount: 3.50 Euros Enter: 3 500

8 3 0			#	
Code	internal number	Amount max. 6 - place		Ack. signal

Deleting call accounts

8 3 0		#	
Code	internal number		Ack. signal


If you delete a call account, external calls can no longer be made from the assigned terminal device.

Charge limitation On/ Off

8 9 0		* / #	
Code	internal number	Activate / Deactivate	Ack. signal

Setting the date and the time

If your service provider does not transmit date and time data, you can enter the date and time manually.

9 3	0 1 ... 1 2	0 1 ... 3 1	0 0 ... 9 9	0 0 ... 2 3	0 0 ... 5 9	
Setting the time	Month	Day	Year	Hours	Minute	Ack. signal


Enabling/ inhibiting remote access

With your PABX you have the option of using the functions

- Call forwarding - Follow me
- Room monitoring

from an external location. You can specify the required authorization for remote access to your PABX.



Enable / inhibit the remote access authorization

7 8 0	* / #	
Code	Enable / inhibit remote access	Ack. signal

Restoring settings (Reset of the PABX system)

You can use the Reset option for your PABX to return the system to a defined initial state. This may be necessary if you wish to cancel configurations you no longer require or want, or to re-program the PABX.



Resetting settings to initial state

9 9 9		
Code	Ack. signal	Replace handset

An automatic system reset then ensues. All system and user settings will be returned to their initial state (as-delivered state).

Resetting the features for one internal subscriber or for all

You can cancel the performance features configured for the PABX system for one or all subscribers (for example, call forwarding, completion of call to busy subscriber and direct call).

9 0 0	 or 	
	internal number or * for all internal extensions	Ack. signal

Configuration by the specialized dealer

Remote access





You can also have your PABX configured by the service center at a certified dealer's. Call the service center, get their advice and tell them how you wish to have your system configured. The dealer's service center can then configure your PABX system remotely from their office. Your dealer can provide you with the number for the service center.

You can then either set up a remote access link to the service center yourself, or enable your PABX for dial-in by the service center. The dealer's service center only has access to data on your PABX when the system is enabled for remote access.

The following procedure describes remote access from analog terminal devices, but of course you can also use ISDN telephones for this.

Remote access with call to the dealer's service center

You call the service center from an analog telephone, for example, at connection 1 (internal number 10), or from a telephone at connection 2 (internal number 11). You are connected with the service technician who then explains the further procedure to you. When requested by the technician you push the Recall flash button You will hear the internal dial tone.

	R	* 7 9 2		#		
Call to service center		Number for the service center			Ack. signal	Continue call

You are then re-connected with the service technician and can continue your call. If you initiate remote access using an ISDN telephone you will have to push the Recall flash button once again, depending on the terminal device being used.



- The service technician can then load data from your PABX and conduct the configuration based on your request and needs.
- The service technician can not, however, view or edit your password, but Your system may be reset to its initial status (0000) however.
- The service technician then loads the edited data back into your PABX and ends the data transfer.

Note

This remote access link to the service center involves two connections that are charged to you.

Remote access with call to the dealer's service center

You call the service center. You are connected with the service technician who then explains the further procedure to you. You then hang up the handset and initiate the remote access procedure as follows:

 Lift up handset	* 7 9 2	 Number for the service center	#
--	----------------	--	----------

You will hear the internal music on hold once a connection to the service center has been established.

When the data have been transferred the service center will terminate the connection.

You hear the busy signal. Replace the handset.

Note

The connection is terminated immediately if you hang up the handset during an ongoing connection to the service center.

Enable the PABX for dial-in by the service center

You can enable your PABX for dial-in by the service center. The service technician can then perform a remote configuration for your system. Enabling for remote access lasts for around 30 minutes.

 Lift up handset	* 7 8 2	 Ack. signal	 Replace handset
--	----------------	--	--

The PABX system is now enabled for dial-in by the service center.

It is now possible for the service technician to dial in to your PABX, to read out (export) your configuration data, to edit this data and to transfer the data back into the PABX.

Note

No further data links can be established when your PABX has been released for dial-in by the service center.



If you wish to cancel enabling for remote access, proceed as described in »Inhibiting remote access«.

Continuous enabling of PABX for dial-in by service center



You can also have your PABX system enabled continuously for dial-in by the service center. You can only set up this release function using the WIN-Tools Professional Configurator. To activate this function you must define at least one number (max. 3 numbers) that is authorized for dial-in into the PABX.

Ending an active, incoming remote access connection

You can terminate a connection set up by the service center using the following procedure.

 Lift up handset	# 7 9 2	 Ack. signal	 Replace the handset
--	----------------	--	--

Inhibit remote access

 Lift up handset	# 7 9 9	 Ack.signal	 Replace the handset
---	---------	---	--

An existing connection to a service center is not terminated.

Commissioning an IP-phone for a DSP module

Your PABX can be equipped with a DSP-module. After your PABX system has run up it will recognize the module and you can then begin configuration at the IP phone.

Note

This short description is based on the DHCP set up DHCP in the PABX.

The elmeg IP290 is used as an example in this description.

Note

An instruction manual describing all currently available features can be found on the CD-ROM.

Initial startup

Connect the pabx to the IP telephone using the network cable. Connect the plug-in power supply unit and the telephone and switch the power on.

Language setting

Use the arrow keys to select the language . Press **OK** to confirm.

```
Select Language:
English
```

```
Select Language:
Deutsch
```

Selecting a calling tone

Use the arrow keys to select the country. Press **OK** to confirm.

```
Dial tone:
Australia
```

```
Dial tone:
Deutschland
```

Select a time zone

Select a time zone using the arrow keys . Press **OK** to confirm.

```
Dial time zone:
-10 USA (Honolulu)
```

```
Dial time zone:
+1: Deutschland (Berli
```

First log-in

A user must have been set up in the pabx. Enter your user ID (for example for MSN 22), which consists of the MSN extension, followed by an "@" and the IP_ address for the PABX.

```
ID:
22@192.168.1.250
```

Enter an ID for the MSN22 and the IP address: 192.168.1.250.

2 ABC 2 ABC * 1 1 * * 1 9 WXYZ 2 ABC * 1
* * 1 6 MNO 8 TUV * 1 * * 1 * 1 * * 2 ABC 5 JKL 0

After entering your user ID confirm it by pressing the OK key.

12/30	(22)	10:22 AM
Idle	Telbook	Lists

You will be asked to input the log-on PIN, if this security feature has been set up for your PABX.
After you have logged on successfully you will see the new number (22) in the display.

PABX and PC

A CD containing the Windows configuration program and other software and drivers is included in the PABX package.

Contents of the CD-ROM

In these operating instructions we would like to give you a brief summary of the software included in the scope of supply for the system. The software programs themselves are not described in these instructions. Should any questions or problems arise while you are using the programs you can use the online Help function for assistance. All programs are equipped with a comprehensive online Help function.

Programs for configuring the PABX

Professional Configurator:

The settings for the individual features of your PABX are made in the PABX configuration. You can configure your external MSN and assign these numbers to individual, internal users, or to a team consisting of several users (members). You can also assign a name for each individual, internal user and configure the various features separately (such as authorization privileges, exchange line access, cost logging, etc.), or you can apply the settings of one user to those for a different user. Configuration is also used to define the calendar, numbers for call control (unrestricted numbers, restricted numbers) and emergency or direct calls. You can also make general settings for the PABX, for call data logging or for remote access to the PABX system.

Charge Manager:

You can use the charge manager program for logging connection data for reading out or clearing call data records stored in the PABX and user-specific counters. The call data records that are read out can be evaluated using various sorting and filtering functions, or exported for processing in other programs.

For example: Sorting functions allow you to compile data records according to internal users, project numbers or numbers that are dialed/transferred. The filtering functions can be used to display data records containing individual properties. You can set these filtering functions to fit your specific needs.

Telephone Directory Manager:

The PABX system is equipped with an integrated telephone directory, in which you can store up to 500 numbers, with their associated names. You can access the PABX telephone directory with all phones connected with the system. System telephones can also use the PABX menu. Other telephones can use a code to dial from the telephone directory. Entries are added to the directory using the Telephone Directory Manager on the CD. The import/export function of the telephone directory manager allows imported or exported data to be edited and processed in other programs.

ControlCenter:

The Control Center monitors the activities of the router for establishing and severing a connection. It indicates for instance: the provider used for the current connection, the type of connection (ISDN or DSL), the IP address, the duration, the port, the up- or downloaded data volume. You can also terminate an ongoing connection or establish a new one.

Download Manager:

Using this program you can load new system software via your PC into the PABX. You can load new software via the integrated USB port, or via the Ethernet port »LAN1« of your PABX system. If an ISDN card is already installed in your PC you can also update the system software via the internal ISDN connection of the PABX.

TAPI-Configurator:

Using TAPI Configuration you can adapt the TAPI driver for a program that uses that driver. You can also check which MSN is assigned to which terminal device, define new line names and can set the dialing parameters.

First configure the PABX. Then, you must configure the TAPI interface. Use the program »TAPI Configuration« in the start menu.

LCR Professional

Both provider and routing tables can be prepared and edited individually using this new LCR procedure. This LCR procedure can be configured using the Web-based PC program supplied with the system.

You can activate/de-activate the LCR procedure using either the »Professional Configurator«, or a code sequence on the telephone.

Application programs

Adobe Acrobat Reader:

Program for viewing and printing PDF documents.

Drivers

USB driver (Universal Serial Bus)

Recognition and control for the PABX system after being connected to the USB port of your PC. The USB driver is installed as a virtual network card that uses the TCP/IP protocol.

TAPI in the LAN:

The package includes a program called »TAPI for LANs« for use in your network. This software can be installed on any PC in the network. This gives you the possibility of running your TAPI application from a central location via an interface, i. e. the PABX system. There is no ISDN card required for the PCs. Please note that software used for the TAPI application may require certain license agreements with the software manufacturer. The program »TAPI in LAN« does not require a license to run.

CAPI in LAN:

The package includes a program called »CAPI for LANs« for use in your network. This software can be installed on any PC in the network. This gives you the possibility of running your CAPI application from a central location via an interface, i. e. the PABX system. There is no ISDN card required for the PCs. Please note that software used for the CAPI application may require certain license agreements with the software manufacturer. The program »CAPI in LAN« does not require a license to run.

Installation instruction for Windows 98

If you have Windows 98 installed on your PC you must observe the following installation instructions for the USB driver. Keep the original Microsoft Windows 98 CD handy.

Initial installation

Connect your PC to the USB port of the PABX system via the USB cable and switch on both devices. Insert the elmeg CD supplied with the system. The Windows 98 hardware assistant is then started.

Installing the driver:

- A »Composite USB device« is then recognized.
- Click »Next«
- Select »Search for the best driver for your device. (Recommended)« and then click »Next«
- Select »CD-ROM drive« and then click »Next«
- Select »Updated driver (recommended)«.
- Select »elmeg USB Remote NDIS Network Device« and click »Next«
- Click »Next« once again to install the USB driver.
- Press the »Finish« button

Note

When the installation has been performed correctly, the following entry will appear in the device manager under the list of network cards: »elmeg Txxx USB Remote NDIS Network Device«.

Removing the default driver

If you have not installed the elmeg USB driver, the standard driver for »Composite USB device« will be installed by Windows. This is indicated by an entry in the device manager under »Universal serial bus controller«. You must first remove this standard driver before you install the new elmeg USB driver as explained under »Installation«.

- Removing the driver:
- Open the »Device manager«
- Remove the entry »Composite device« under »Universal serial bus controller«.
- Remove the entry »elmeg« under »Other components«
- Then unplug the USB connector from the device and plug it in again. The device is recognized anew.
- Install the new driver

CAPI driver (Common ISDN Application Programming Interface):

Interfacing of the pbx to programs that provide data communication services.

Important for Installation of the CAPI driver

Note

The CAPI driver is not required for accessing the Internet.

Before installing the new drivers be sure to remove any existing CAPI drivers in your system (such as the drivers for an installed ISDN card), as Windows only supports one installed CAPI.

Refer to the operating instructions for the device concerned, or for the operating system, for details on removing drivers.

You can also use other programs that access the CAPI drivers for the PABX system. Refer to the operating instructions for the software packages concerned for detailed information.

Note

In some special circumstances it may be necessary to also physically remove the ISDN card from the PC in addition to removing the drivers.

TAPI driver (Telephony Application Programming Interface)

Interfacing to programs that provide computer-aided telephony.

For ex. Windows dialing assistant

Note

Special drivers must be installed if you wish to use the configuration software via the USB port of your PABX.

Installing programs from the CD

System requirements:

- IBM or 100% compatible PC.
- Pentium or comparable processor, min. 233 MHz clock rate and MMX-technology.
- One of the following operating systems has to be installed: Windows, 2000, ME, XP or Windows Vista (32 bit).
- RAM for Windows: ME min. 64 MB, 2000, Windows XP (32 bit), min. 128 MB, Windows Vista (32 bit) min. 512 MB.
- You also need a VGA graphics adapter, approx. 65000 colors, a resolution of at least 800x600 pixels.
- The PC has to have a CD ROM drive.
- The required free disk space for installation is 40 MB.
- The PC should have at least one free USB port.
- A network card must be installed to perform configuration via Ethernet.
- To configure your system via the internal ISDN connection, you must have an operational ISDN PC card installed in your PC.
- Internet Explorer Version 6.00 or higher must be installed to use the »WEB- LCR«.

Installation instructions:

- Start up your PC.
- Insert the CD ROM supplied with the system in the CD ROM drive of your pcs.
- Wait a moment until the program starts automatically. If the autostart option is not activated in your PC you can start the file »setup. exe« directly from the main directory of the CD using Windows Explorer (double click on the file), or using the option »Run« in the Windows start menu.

When the file is started the welcome screen of the CD is displayed.

Configuration with a PC

You can program your pabx over the LAN, USB or via the internal ISDN connection.

- Use the USB connecting cord supplied with the system to connect the USB ports of the PABX and the PC. Configuration of the PABX through the USB port requires a Windows operating systems that supports USB. (as of 08/2002: Windows 98 / ME / XP / 2000).

or with elmeg T444

- Use a Cat. 5 Ethernet cable to connect one of the Ethernet ports of your pabx with the PC.

or

- Connect your PC with the installed ISDN PC card to the internal ISDN bus using an ISDN connecting cord. If you have an ISDN card with CAPI 2.0 installed in your PC you can also conduct PC configuration via the internal ISDN connection of the PABX. This type of configuration is possible starting with the Windows 98 / Windows NT4 operating systems.

Professional Configurator

Using this program you can configure the features for your PABX as you require. The configuration of the PABX system also allows you to first read out the configuration of the system that you performed using the »Web Configurator«. You can then complete these settings step by step and import them into the PABX. You should also store your configuration on your PC.

Description of the router functions

The PABX system provides all functions required for high-performance Internet access for individual PCs, or for an entire LAN, via xDSL or ISDN. A firewall integrated into the PABX, together with NAT (network address translation) provides the necessary security, while the DHCP server and DNS proxy functions ensure that configuration effort is kept to a minimum, both for the PABX system and for your PCs.

Internet access for all of the PCs connected to the PABX system is provided via one single connection (SUA - single user account); only one set of access data is required from your Internet service providers (ISP). You can configure more than one ISP.

System Requirements for Windows

System requirements:

- IBM or 100% compatible PC
- Pentium or comparable processor, min. 233 MHz clock rate
- min. 64 MB RAM
- VGA graphics adapter, approx. 65,000 colors, a resolution of at least 1024x800 pixels.
- CD ROM drive
- Free USB-port
- Windows 98 / ME / XP / 2000 operating system
- Min. 130 MB free hard disk space for installation
- For network operation, or DSL via Ethernet, a 10 / 100 Mbit/s installed network card

Initial Commissioning and Minimum Configuration

You can connect PC to the PABX system either via Ethernet or USB.

Once you have linked your PC to the PABX system you must select an ISP and, where required, enter you access data. And before you know it you're surfing the Internet.

Connecting the DSL modem to the Ethernet (10BaseT) port

If you have a DSL connection you must connect your DSL modem to the LAN port of the PABX system. Use a network cable for this (CAT. 5, 1:1 with RJ-45 connectors at both ends). This cable may be included in the standard delivery scope for your DSL modem.

Note

Please be sure to use a DSL-modem with an Ethernet (10BaseT) port.

Connecting a pcs via USB

At present, only Microsoft Windows operating systems are supported for connection of a PC to the PABX system via the USB port.

Connect your PC to the PABX system using the USB cable supplied with the PABX system. When both devices (PABX and PC) are switched on, the PC will recognize the linked PABX system and installation of a device driver is then started. Then, just follow the instructions shown on the screen.

When you have successfully completed the connection and configuration the LED marked »USB« on the PABX system lights up; when data is being exchanged via the USB port this LED will flicker in the rhythm of data exchange.

The USB driver supplied with the system (RNDIS) is located in the device manager of the Windows control panel as a virtual network adapter. Communication between the PABX system and the PC connected via USB is effected via the TCP-IP protocol.

Note

Please keep the WIN-Tools CD for the PABX system handy when installing the device driver.

Connection of a PC through Ethernet or Fast Ethernet

Regardless of the operating system (Linux, MAC OS, MS-Windows, Palm-OST,...) Or the type of device (PC, MAC, PDA, Webpad) that you are using you can utilize the PABX system Internet access function when the devices are connected via Ethernet or Fast Ethernet. The PABX system is provided with the interface LAN 1. The port designated LAN is set automatically to the maximum data transfer rate (from Mbits/ semi-duplex up to 100 Mbit/s full duplex) for the opposite terminal (PC).


Use a standard Cat. 5 network cable for this connection. If connection has been implemented successfully, the LED marked »LAN« on the PABX lights up; when data is being exchanged via the corresponding port, this LED flickers in the rhythm of data transfer.

For further information about the LED indicator, refer to the section »Display / LEDs« on page 3.

Connecting several PCs via Ethernet

You can connect a PC directly to the LAN 1 ports and another one to the USB port. If you wish to connect more than two PCs you will need a hub or switch.

Spatial conditions may require that a hub or switch be connected using a longer network cable (max. length: See Technical Data) for connection at the LAN 1 port and the PCs then linked using the hub / switch.

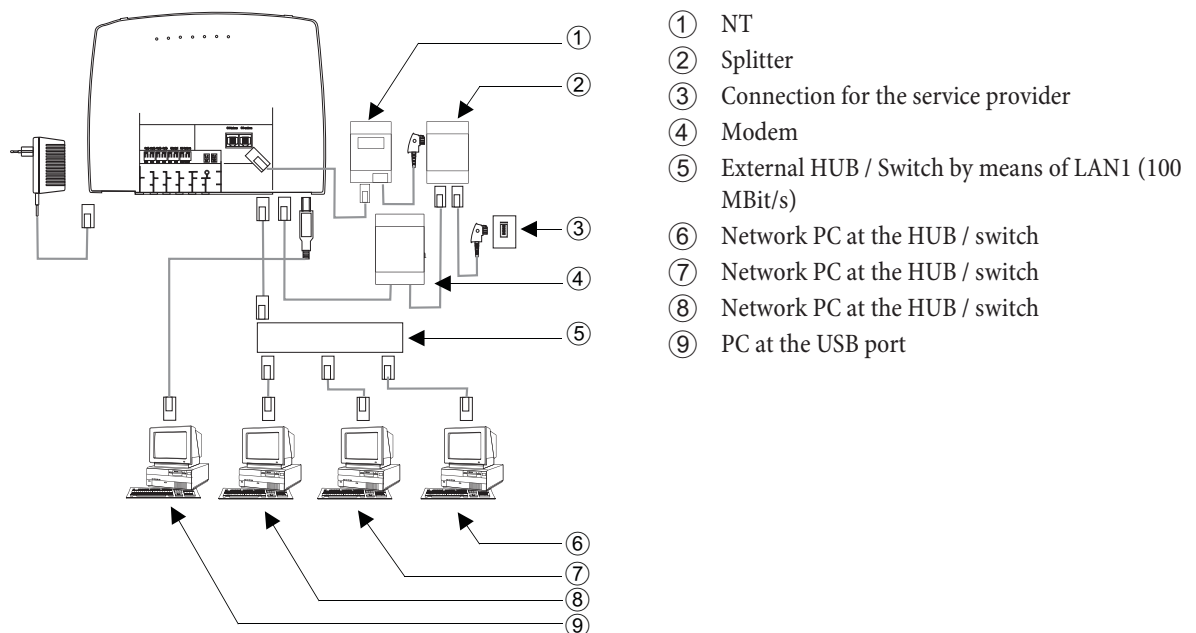

Configuring the PCs

IP addresses

After you connect a PC IP addresses must be assigned. When doing this you must ensure that the IP addresses assigned to the PCs and the PABX systems are in the same IP network. This also applies if you wish to utilize common resources among several PCs in a LAN (for example released directories, network drives, network printers). All PCs located within the network require an IP-address.

In its initial status the PABX is configured with the IP address 192. 168. 1. 250 and the DHCP server integrated into the PABX is activated, meaning that any PCs that are connected must be set to receive their IP address automatically. This mode is recommended to dispense with the complicated, manual configuration of the IP addresses for the pcs that would otherwise be required.

Note

If you are already using a network and wish to use the PABX as the DHCP server you may have to transfer other parameters via DHCP to the pcs.

Note

Only change these parameters if your existing network explicitly demands this. Arbitrarily changed parameters may result in a complete loss of all network functions.

You can configure the following parameters:

Default TTL

If you can not reach certain sites in the Internet (a »ping« is answered with the message »destination unreachable«) it may be meaningful to increase the »TTL« parameter (default is 64) and specify that all PCs configured via DHCP to be re-assigned configuration from the DHCP server (or simply restart your pcs).

MTU

The »MTU« parameter is used for defining the data packet size used in the LAN. Only packets with a maximum »payload« of 1452 bytes can be transported via a DSL Internet portal (when the PPPoE protocol is used, for example with T-Online. Packets in the PABX system should not be first split up and reply packets not re-assembled. It is therefore expedient to use an »MTU« of 1452 bytes to achieve the greatest possible data throughput rate for the DSL connection. This may, however, result in the data transfer rate in the LAN being reduced slightly.

DHCP lease time

The lease time is the time (in seconds) for which a LAN client receives an assigned IP address before that address is fetched and returned to the DHCP server address pool. A LAN client can extend the lease time automatically.

Default gateway

You should enter 0.0.0.0 (place holder for the PABX system IP address) as the »default gateway« if Internet access is to be provided via the PABX system.

Domain Suffixes

You should only configure the parameters »Domain Names« and »DNS server« when you are operating a DNS server within the LAN.

Netbios Name Servers

The »Netbios Nameserver« parameter is used for the name definition for Windows PCs when you use a WINS server in the LAN. This parameter should only be configured when you operate a WINS server in the LAN.

Time Servers

The parameter »Time Servers« is used for announcing the IP address for the »Time lease« when your PCs direct (Windows XP, Linux) the NTP (Network Time Protocol).

DNS Servers

DNS queries from computers in the LAN are normally forwarded to one or more external DNS servers by the DNS proxy. The addresses for the external DNS servers can be obtained dynamically, or can be permanently configured in the router. Addresses can be input at three DNS servers to reduce online time.

DHCP server and IP addressing

PCs can be provided with a major portion of the configuration required for LAN and Internet access via the DHCP (Dynamic Host Configuration Protocol). The DHCP server integrated into the PABX is capable of supplying corresponding configurations to up to 100 PCs (clients). IP addresses are dynamically allocated to the clients. The DHCP server task of the PABX system is activated in the initial status of the PABX.

You can configure the integrated DHCP server under »Network address allocation«.

You can configure the first IP address assigned by the DHCP server. The required number of IP addresses is assigned to the PCs (DHCP clients) in ascending order. There are always 4 additional IP addresses reserved for DHCP servers for PCs integrated into the LAN via Bluetooth (see Page 51) or RAS (see Page 77). If the integrated DHCP server is activated the 4 IP addresses which come after the configured DHCP address range are used for RAS clients.

When the DHCP servers are de-activated the 4 IP addresses that come after the set DHCP start address will be used for RAS clients.

If you select a configuration in which some computers receive their IP addresses via DHCP, while others use set (manually configured) IP addresses, the following criteria must be fulfilled:

- All IP addresses must belong to the same IP network, meaning that the network part of the IP address (and with it, the netmask) must be identical. Example:
- IP address for the PABX: 192.168.1.250
- IP-netmask of the PABX: 255.255.255.0
- Network part of the IP addresses: 192.168.1.xxx
- First usable IP address: 192.168.1.1
- (netmask: 255.255.255.0)
- Last usable IP address: 192.168.1.254
- (netmask: 255.255.255.0)
- First IP-address via DHCP: 192.168.1.50 (as per configuration)
- Last IP address through DHCP: 192.168.1.69 (as configured)
- Number of IP addresses by DHCP: 20
- IP addresses for RAS per DHCP (4 reserved)

first IP address:	:
192.168.1.70	
last IP-address:	192.168.1.80
- One IP address may not be used by more than one client at any one time; with regard to the example given above this means that the IP addresses 192.168.1.2 to 192.168.1.49 and 192.168.1.81 to 192.169.1.249 and 192.168.1.251 to 192.169.1.254 can be used for PCs which have manually configured IP addresses.

The configurable parameters for the DHCP server that you can select using the button »Advanced« allow you the option of also using the DHCP server in the existing LAN environment.

Configuration of the Internet Service providers (ISP)

An Internet Service Provider provides you with an »entrance portal« to the Internet. A distinction is made between ISPs with whom you have a contract (for example T-Online) and Internet-by-call providers that bill you through your phone bill (for example Freenet).

The type of access is independent of the tariff charges; this can be based on actual time, volume or be a flat rate.

You can set up a connection to the Internet with your PABX system as follows:

- Dial-up connections via ISDN (using PPP protocol, with one or two ISDN B channels, i. e. at 64 kBit/s or 128 kBit/s).
These types of connections require access data with the number to be dialed, the user name and password and, in some cases, other information such as the IP address of the name server and any information about the data compression method that is used (VJH).
- Using xDSL (for example ADSL - T-DSL) in conjunction with a DSL modem that is compatible with your ISP via PPPoE.
These connections require your user name and password as access data.
- Via xDSL (e.g. SDSL) in conjunction with a DSL modem that is compatible with your ISP with a set, public IP address. These connections require the public IP address that you have been assigned, the IP address of the next gateway (next hop) and the IP address for the name server of your provider.

Internet-by-Call

The Professional Configurator of the PABX system contains a list of Internet-by-call ISPs from which you can select a provider. The advantage here is that you can set up an Internet connection immediately without first having to agree to a contract. (The requisite access data are already contained in the configuration software for the Internet-by-call ISPs that are listed). You can change this configuration when you decide to conclude a contract with a provider for example (at present required for all DSL providers).

- Fallback configuration for several ISPs »Internet always works«
- You can configure more than one IPS in your PABX system.
- You have one DSL connection that is not always available.
Here, you can configure the PABX system so that it automatically attempts to set up an Internet connection via DSL. If this attempt is unsuccessful Internet connection via ISDN can be programmed using a different ISP.
- You are using a provider that is not always available (some Internet-by-call providers have very reasonable rates, but their access nodes are overloaded due to heavy traffic during peak times). Here you can simply configure several Internet-by-call providers. The PABX system will automatically attempt to set up a connection with one of the configured ISPs.

You can easily change the order of the ISPs with which the Internet connection is to be set up (»Fallback order« down / up). You can also set the number of and intervals between these attempts at setting up an Internet connection for each ISP that has been configured. When the waiting period between the attempts expires and when the configured number of actual attempts is reached and no connection has been established, the next ISP in the list is selected.

Connection to the Internet is always set up automatically by the PABX system when a data packet is to be sent to the Internet. This occurs automatically when you enter `http://www.bintec-elmeg.com` in your browser for example.

Note

Billing of the costs is made through the telephone bill from your network provider.

Discontinuing an Internet connection

- Click on the symbol for the »ControlCenter« in the task bar and select »Terminate connection to provider«.
- After a set time (which can be defined), during which there is no data traffic to the Internet, the connection is terminated automatically. You can activate/de-activate this function in the configuration.

Note

If you set the parameter »Terminate on inactivity« too high, this may result in considerable costs for time-based charges.

If you have a flat rate charge with your ISP you can set the parameter »Terminate on inactivity« to. In this case the PABX system will not automatically terminate the Internet connection, but will re-establish the connection if required (for example after being disconnected by the ISP). If you have configured several ISPs, make sure that you make this setting for the correct ISP entry in the ISP list!

Using a fallback

Let's assume you have a DSL connection with the Deutsche Telekom AG (German Telecom) and have selected T-Online as your ISP.

You have configured three ISPs:

- 1. Internet access through T-DSL (T-online). The PABX system will use the PPPoE protocol at the WAN port. Enter your access data (mark the ISP in the list, field »Edit«, field »Access data for T-Online«)
- 2. Internet access via ISDN (T-Online). The PABX system will use an ISDN dial-up connection (and the PPP protocol). Enter the same access data (mark the ISP in the list, field »Edit«, field »Access data for T-Online«).
- 3. Internet access using an Internet-by-call provider. The PABX system will use an ISDN dial-up connection (and the PPP protocol). When you select an Internet-by-call provider from the defined list, the corresponding parameters are already configured (»Access data«, »Number«).

If there is a disturbance with the DSL connection, the PABX system will, after a configured time period keep attempting to set up the Internet connection for the number of times configured in the field »Number of connection attempts«. You can activate/de-activate this function in the configuration. You can set the intervals between the attempts using the parameter »Time between attempts« in the configuration item Network Internet. You can set the number of attempts and the interval between these attempts separately for each ISP that has been configured.

After that, the PABX system will use the next ISP configured in the list for attempting to set up a connection.

If the connection is disrupted and an attempt is to be made later to re-establish the connection, this cycle is restarted beginning with the first entry in the list.

Firewall

When you use NAT, the PCs connected to the PABX are well protected against attacks from the Internet.


If you wish to have additional security you can also use the integrated package Filter Firewall. A firewall acts as a logical wall for data packets between the Internet and the LAN which has »holes« for certain packets (firewall rules, also known as filters), allowing these packets to pass through the wall. In the initial status the firewall is configured such that all data can pass through that are sent in the direction of the Internet.

Note

An exception to this rule is the »Netbios filter: This filter prevents the forwarding of Netbios name queries from Windows PCs to the Internet. As the names of the Windows PCs within the LAN are not known in the Internet, it is not meaningful to establish an Internet connection for forwarding the name query (this could result in considerable costs, as these name queries occur frequently, meaning that the Internet connection would practically never be terminated).

The filters are described by rules whose configuration requires expert knowledge about the TCP/IP protocol family. The firewall of your PABX system can be easily configured using a Filter Wizard in which you need to indicate (in plain text) whether you wish to allow defined applications access to the Internet.

To start the Filter Wizard in the configuration item »Network filters« click the button »Filter Wizard«. The following mask is then displayed after a warning that starting the Filter Wizard will delete all filters that have been configured up to this time:

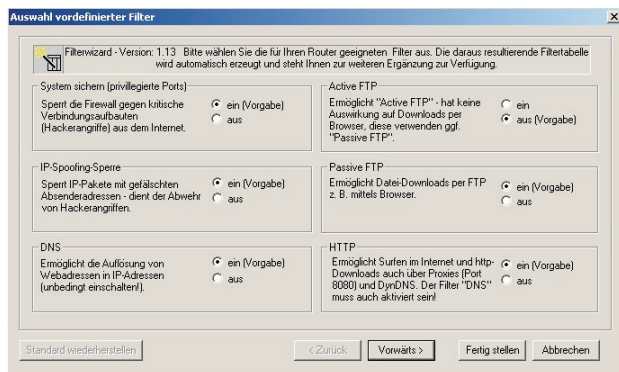

The Filter Wizard can be restarted at any time to load a modified (edited) configuration into the PABX system. Click the button »Send configuration data« to transfer and activate the filters. After the data is sent the new configuration is activated in the PABX system and any ongoing Internet connection is terminated.

The connection is re-established however as soon as a data packet must be routed to the Internet which the firewall lets pass in accordance with its configuration.

Note

Note that when you click the button Send, the entire configuration for the PABX system will be overwritten. It is strongly recommended to read out the configuration for the PABX system and storing it in a file prior to changing the filter configuration.

We recommend following the instructions given by the Filter Wizard, unless you establish that one of the applications you are using can not set up a connection to the Internet. In this case, please check whether the Filter Wizard has a corresponding filter available. Elmeg regularly generates an updated database for the Filter Wizard, which is available at the www.elmeg.de Web site.

Please note that all filters that are generated with the Filter Wizard are based on packets being discarded, with the exception of those for which an appropriate rule exists. The more filters you configure for the PABX system, the more computing time is required for processing of these filters. This could slightly reduce the maximum achievable data throughput rate for the PABX system in some cases.

Information on manual configuration of firewall filter rules is given in the online Help function and in the documentation located on the CD.

Costs for Internet connections

The PABX can store up to 500 call data records. This data is not lost in the event of a loss of power.

The PABX system also generates a call date record for connections made by the router. The call data records contain detailed information about the call. For ex.: Date and time, duration of the call, number of the called party, number of the calling party, type of connection, communication costs and possible project numbers.

Note

Please note that only the network service provider is authorized for binding connection/call cost logging.

Note

You should use a virus scanner on all LAN clients to protect your personal data. Use of this type of software is indispensable for safeguarding personal data.

Dial-in into the LAN (RAS)

Using the Remote Access Server (RAS) a field representative, for example, can call into the local network from an external location and then via the local network access the Internet. Access from an external location is also possible via an ISDN connection.

External access is provided with user-name and password protection. If the call is made from an external location only, the phone number can also be monitored as an added protection feature. Access can be enabled for up to 8 users. A Windows enable (access to computer, files or printers) and Internet enable can also be configured for each user.

Note

Note that this access portal is not protected by a firewall!

A PC that dials into the local network via RAS is automatically assigned an IP address by the integrated DHCP server.

Appendix

Troubleshooting

Not every fault or malfunction is an actual PABX system error. Check your installation configuration with the aid of the following section.

Fault Description	Possible Cause	Fault Remedy
No dial tone after lifting handset.	PABX not connected to power supply properly.	Check 230 V AC outlet (for example by plugging in a lamp)
	Plug-in power supply unit / power plug not plugged in properly	Check connection between PABX and 230 V AC outlet.
	Terminal device defective.	Replace terminal device / Check terminal device at other connection
	Telephone connection faulted, Faulty installation	Check PABX / jack connections
	PABX settings faulted, ambiguous programming of PABX system	Unplug and plug the plug-in power supply unit back in. Reset the PABX to initial state.
No internal calls are received.	Station guarding (do not disturb) is active.	Deactivate station guarding (do not disturb).
	Call forwarding to another number activated (special dial tone in handset).	Cancel call forwarding.
No external calls are received.	Same causes and remedies possible as for »No incoming internal calls«.	
	PABX not connected correctly to the network termination unit of your network service provider.	Check the connection between the PABX and network termination unit.
	MSN is not entered or assigned correctly in the PABX.	Check the PC configuration for the PABX.
Note: Check to ensure that ISDN connection is functioning correctly, and that this connection has been enabled by your network service provider. Please contact your service provider.		
No outgoing, external calls possible.	No authorization for external connections.	Check the user settings in the PC configuration for the PABX.
No outgoing, external calls possible.	Call charge limit reached (Allowance account).	Check the user settings in the PC configuration for the PABX. Increase cost limit, or reset the sum counter
	External numbers classified as restricted numbers for call control.	Check the settings for dial ranges in the PC configuration for the PABX
No external connections possible to some remote terminals.	External numbers are given in the Restricted numbers list for the dialing region.	Check the settings for dial ranges in the PC configuration for the PABX

Fault Description	Possible Cause	Fault Remedy
Room inquiry not possible during an external call.	The telephone's flash key is not properly configured.	<p>Check the setting of your telephone's flash key. »Flash key«, flash interval 80-120 ms.</p> <p>Attention: Inquiry calls are not possible with pulse dialing telephones.</p>
<p>If the PABX is connected at the USB port of the PC and recognized by the PC the USB LED on the PABX will light up. If not, the USB ports of the pc are not activated / faulty, or the drivers for the PABX are not installed.</p>		
No connections can be established via the PABX's USB-port.	<p>The same causes and remedies are possible as described for the previous problems (no internal/external connections possible).</p>	
	The USB ports of the pcs are not activated or are defective.	In the system control panel (folder »System« - »Device manager«) check whether the USB ports of your pc have been activated.
	PABX drivers not properly loaded.	<p>In the system control panel (folder »System« - »Device manager«) check whether the PABX has been installed correctly. A question mark in front of the entry for the PABX indicates incorrectly installed / loaded.</p> <p>Plug the USB connector for the PABX system back into the PC or restart your PC.</p>
No automatic call-backs possible.	No pabx number has been entered with a point-to-point access.	<While configuring your pabx system with the PC, make this entry under External Numbers.
Invoicing for your Charge Manager is set too high or too low by one fixed factor.	Transfer of the currency amount is set for your ISDN connection instead of transfer of tariff data.	Apply for the procedure you wish to have, or change the tariff unit factor in the Charge Manager and in the Professional Configurator (see also Page 41).

Technical specifications

PABX:

dimensions W x H x D:	260 x 192 x 40 mm
Weight, approximately:	0.7 kg without plug-in power supply
Temperature range:	5° C...40° C
Mains voltage:	230 V~
Rated power consumption with 2 connected ISDN phones:	approx. 8 VA
Maximum power consumption:	25 VA
Frequency:	50 Hz
Protection class:	II
Connection cord length:	approx. 2 meters

ISDN connections:

Length of ISDN connection cord:	approx. 3 meters
External ISDN connection:	Protocol DSS1, Point-to-multipoint connection Protocol DSS1, Point-to-point connection
Internal ISDN connection:	DSS1 protocol, point-to-multipoint connection
ISDN interfaces:	Power appr. 2.5 W
Channel structure:	B+B+D
ISDN cable lengths with 0.6 mm Wire diameter:	Short passive bus: max. length of 120 meters
Analog ports:	
Supply (PABX):	symmetrical, 60 mA at 25 ohms
Max. length of telephone connection cables when using installation- grade cable:	0.4 mm wire diameter = 200 m 0.6 mm wire diameter = 350 m
Dialing method:	Multi-frequency calling method Pulse dialing (limited function)
Mark duration:	> 40 ms and <100 ms
Space duration:	80 ms
Ringing voltage:	U eff. appr. 35 V~
Ringing frequency:	50 Hz ± 8%
Adjustable flash interval:	100ms to 1000ms in 100ms steps (default state 200ms)

USB port:

USB cord length:	approx. 3 meters
Terminal:	Self powered terminal
Speed rating:	Full Speed

Ethernet connections:

LAN1	10/100MBit/s via RJ45 jack
------	----------------------------

LAN2

WAN / xDSL10MBit/S via RJ45 jack

Index

A

- Accepting 11
- Accepting calls
 - of calls 11
- Acknowledgement 6
- Acoustic signals. 6
- Activating the LCR procedure 31
- Adobe Acrobat Reader 65
- Addressing, extended (SUB). 36
- ADSL 74
- Allocating project numbers 23
- Analog connections. 48
- Analog terminal devices 1
- Announcement 13
- Answering machine. 12
- Area code 55
- Automatic changeover of authorization for external calls 36
- Automatic completion of call
 - delete 17
 - on busy 16
 - on no answer. 16
 - setup 16-17

B

- Block dialing (Austria) 31
- Brief description of functions 87-90
- Broker`s call 42
- Busy on busy for team call modes Day and Night32
- Busy tone 6

C

- Call data 63
- Calendar 36
- Call
 - deflecting. 20
- Call account 29
- Call allocation 32
- Call assignment 32
- Call assignments 33
- Call Control 38
- Call data records. 28,77
- Call Deflection (CD) 20
- Call distribution. 33
- Call forwarding

- from another phone (Follow me) 26
- Call modes 10
- Call pick-up
 - from answering machine: 12
- Call rerouting 25
- Call waiting 39
 - transferring 41
- Call waiting tone 6
- Calling cycles 7
- Calling several telephones (team call). . . . 17-43
- CAPI driver
 - Installation (Important note) 67
- CAPI in LAN. 66
- Cat.5. 46,49
- CD-ROM
 - contents 63
 - Installation sequence 68
- CE marks 2
- Changing PIN _ / PIN 56
- Character presentation, user-defined (UUS1) . 35
- Charge counter 56
- Charge limitation 29
- Charge Manager. 63
- Charge pulse 16kHz / 12kHz. 28
- CLIP 2,7
- code numbers, modified 44
- Collective call 17-43
- Commissioning an IP-phone. 61-62
- Commissioning of the PABX 55
- Communication data overflow 7
- Completion of call (automatic)
 - delete 17
 - on busy 16
 - on no answer. 16
 - setup 16-17
- Conference. 42
- Configuration by the specialized dealer. . . . 58
- Configuration using a telephone 55
- Configuration with a PC 69
- Connecting
 - a waiting call 41
- Connection data. 63
- Connection of the DSL Modem 49,70
- ControlCenter 63

- Controll charge 28
- Cost logging 10
- Cost registration 9
- Costs for Internet connections. 77
- D**
- Data link protection. 37
- Data packet transfer (X.31) 37
- Declaration of conformity 2
- Default gateway 72
- Default setting. 53
 - for a subscriber 58
 - for all subscribers 58
- Default settings
 - restore 57
- Description of the router functions 70
- Device type. 14
- DHCP lease time 72
- DHCP Servers 73
- Dial ranges. 38
- Dial-in into the LAN 77
- Dialing 48
- Dialing method 81
- Direct call 9
- Direct dial-in 20
- Direct exchange line access 14
- Discontinuing an Internet connection 75
- Display. 3
- DNS Server. 73
- Domain Suffixes. 72
- Download Manager. 63
- Drivers on the CD ROM 66-68
- DSP module 61-62
- E**
- ECT (Call switching) 41
- Emergency calls 37
- Emergency numbers 36
- Enable/inhibit call waiting for a further call . . 15
- Ethernet 71
- Exchange authorization 14
- Extended addressing (SUB) 36
- External call. 7
- External call-back. 7
- External dial tone. 6
- External POTS connection 51
- F**
- Fallback 75
- Fast Ethernet. 71
- Features in the ISDN network. 2
- Features without user action. 35-38
- Firewalls 76
- Flash 11,48
- Flash key. 1
- Follow me (Call forwarding)
 - authorization privileges for external Follow me 57
- Follow me (call forwarding). 9
 - canceling from an external phone 27
 - programming from an external location . . 27
- Follow me (Call forwarding). 26
 - deleting from internal location 26
 - internal configuration. 26
- Forwarding of calls 20
- Function buttons 8
- Function ground 51
- Function keys for call on hold (park keys) . . . 44
- Functional ground 51
- G**
- Gateway. 72,74
- Grounding circuit connection 51
- I**
- Information from the ISDN network (MWI). . . 35
- Inhibiting calls. 32
- Initial startup 55
- Inquiry call. 39
- Inquiry call, open 43
- Installation. 45-49
 - of programs from CD 68
 - of the CAPI driver 67
 - start 68
- Installation sequence 45
- Intercom. 8
- Internal call 7
- Internal call-back. 7
- Internal dial tone 6
- Internal ringing signal 6
- Internet Service Provider. 74
- Internet-by-Call 74
- IP addresses 72
- IP addressing 73

- IP-netmask. 73
- ÎPulse dialing 1
- ISDN port
 - internal 48
- ISP 74
- K**
- Keypad (net direct) 24
- L**
- LAN1 / LAN2 49
- Language 9
- LCR (Least Cost Routing) 57
- Least Cost Routing (LCR) 10
- LEDs of the PABX 3
- Line access authorization. 14
- Local area 38
- Location 45
- Loss of power 1
- M**
- Making Calls
 - External. 14-24
 - Internal. 13
- Making outside calls with prefix code. 15
- Malicious call identification (Tracing) 23
- Melody 54
- Modified code numbers 44
- Module elmeg M 1 POTS. 50
- Module elmeg M 2 a/b 51
- Module elmeg M 4 DSP 52
- Module installation 50
- Module installation DSP 52
- Monitoring costs
 - call account. 29
- MTU 72
- Multi-function port 24
- Multifunctional device 24
- Music on Hold. 42
- MWI (information from the ISDN network). . . 35
- N**
- Negative acknowledgement signal 6
- Net direct (Keypad). 24
- Netbios filter. 76
- Netbios name queries. 76
- Netbios Name Server 73
- Noting an external ISDN connection 18
- Number
 - defining for the next call 18
- O**
- Own number
 - defining for the next call 18
 - temporarily suppressing transmission . . . 18
- P**
- PABX and PC 63
- Pabx dimensions 81
- PABX setup 32
- PABX system description 1
- Park. 37
- Parliament. 2
- Partial Rerouting.. 2
- PC interface 49
- PC programs on the CD-ROM. 63
 - Adobe Acrobat Reader 65
- PC requirements. 68,70
- PC Requirements 68,70
- Phone number plan. 53
- Pick-up. 11
- PIN 1
 - Security precaution against misuse of your PABX by other parties 56
- PIN 1 / Changing PIN 2. 56
- PIN 1 / PIN 2. 56
- PIN 2
 - security for settings made from external telephones 56
- Pocket money account 29
- Point-to-multipoint connection. 81
- Point-to-point connection 81
- Positive acknowledgement signal. 6
- Prefix code 15
- Priority for emergency calls 37
- Professional Configurator 63
- Pulse 1
- Pulse dialing 81
- Pulse dialing method 81
- R**
- R key 48
- RAS. 77
- Reading /loading the telephone directory . . . 19
- Recall. 7

- Regional numbers 38
- Remote access 57,63
- Reset 57
 - for a subscriber's settings. 58
 - for all settings and subscribers. 58
- Resetting settings to initial state. 57
- Resetting the PABX 57
- Restricted numbers 38
- Ringing signal. 6
- Room monitoring. 21
 - authorization privileges for room monitoring from external location. 57
- Routing discrimination. 15
- S**
- Safety Information 1
- Safety notes 1-7
- Service number 53
- Setting the date and the time. 57
- Setting up cost monitoring. 56
- Slot 1 50
- Slot 2 50
- SMS (short messages) 35
- Special dial tone 6
- Specific trunk bundle selection 15-16
- Speed dialing 20
- Sub-addressing (Extended addressing) 36
- Switching call modes 33
- Switching call modes for teams 33
- Symbols 5
- System menu 9-10
- System parked inquiry 43
- System Requirements. 70
- System telephones 8-10
- T**
- Talk to two parties alternately 42
- TAPI driver 67
- TAPI in the LAN 66
- TAPI-Configuration 63
- T-DSL. 74-75
- Team call. 17-43
- Team call adding 18
- Teams 32
 - Busy on busy. 32
 - day/night assignments /call distribution 33
 - enabling / inhibiting a member's phone within a team. 32
- technical specifications 81-82
- Telephone directory 9
- Telephone directory for the PABX 19
- Telephone Directory Manager. 63
- Telephone directory of the PABX 19
- Telephone interlock. 15
- Telephone number
 - temporarily suppressing transmission 18
- Temperature range 81
- Terminals of the PABX
 - analog connections 48
 - internal ISDN connection 48
 - PC connection (USB) 49
- Three-party conference call 42
- Time acceptance. 38
- Tracing (Malicious call identification) 23
- Transfer
 - in the exchange 41
 - within the PABX 41
- Transfer calls 40
- Transfer in the network (ECT). 41
- Transferring a call. 40
- Troubleshooting. 79-82
- Trunk group 15
- Trunk group seizure 15-16
- TTL 72
- U**
- Unrestricted numbers 38
- USB driver 66
- USB port 49
- UUS1 (character presentation) 35
- V**
- Voice announcement 21
- W**
- Waiting call
 - accepting 39
- Weight 81
- Windows 95 / NT4 69
- Windows configurator 63
- X**
- X.31-Standard 37

Brief description of functions

This brief description of functions applies to the use of analog terminals. If certain functions of ISDN terminals are not possible, please do refer to the operating instructions of the respective ISDN terminal.

Pick-up of the call



Pick-up of the call

Making internal calls



Making internal calls



Internal calls with automatic line acquisition

Making outside calls



Making outside calls



Outside calls with automatic line acquisition



Sending MSN to remote parties
0 ... 9 MSN-Index



Specific trunk bundle selection (ISDN, POTS (0...4))



Specific trunk bundle selection .ISDN /, POTS, SIP-prov. (00...04), (10...19)



Telephone interlock (cancel)

Temporarily suppressing transmission of your own number (CLIR)



Temporarily suppressing transmission of your own number (CLIR)

Dialing phone numbers from the phone directory



Dialing a phone number via the speed dialing key of the PABX's phone directory

Forwarding a call (connecting)



Forwarding an internal call with prior notice



Forwarding an internal call without prior notice



Inquiry call



Terminating a room inquiry with analog terminals



Connecting external callers

Broker's call



Broker's call (room inquiry)



Broker's calls between different callers

Completion of call














Requesting automatic call-back

















Canceling automatic call-back

Three-party conference call

-     Inquiry call
-     Three-party conference call
-    Returning to Broker's call













Call waiting

-     Accepting a waiting call. The call put on hold remains
-        Accepting a waiting call. The call put on hold is terminated
-    Refusing a waiting call







































Announcement

-        Message to a party


























































Call modes

-       Activating all day call modes
-       Activating all night call modes





















Call modes for teams

-             Enabling a member's phone within a team
-             Inhibiting a member's phone within a team
-        Activating day team call assignment for all teams
-        Activating night team call assignment for all teams












Call forwarding

-           Activating »immediate« call forwarding
-           Activating call forwarding »delayed«
-           Activating call forwarding »on busy«
-          Canceling »immediate« call forwarding
-          Canceling »delayed« call forwarding
-          Canceling call forwarding »on busy«

Follow me

-           Configuring internal Follow me
-           Canceling internal Follow me

Room monitoring

-        Enabling room monitoring
-     Room monitoring from internal terminals

Inhibiting calls

-        Inhibiting internal and outside calls



Inhibiting outside calls



Inhibiting internal calls



Re-enabling all calls

Malicious call identification (MCID)

Malicious call identification (MCID)

Project numbers

Entering a project number



Project number for an external call

**Answering machine:**

Pick-up of a call from the answering machine

Multifunctional device

Multifunctional device: Telefax group 3

Keypad functions

Initiating keypad functions

For a description of the features please refer to then network operator's documentation.

System parked inquiry

Initiating a system-parked inquiry



Accepting a system-parked inquiry

bintec elmeg GmbH
Südwestpark 94
D-90449 Nürnberg

For information on support and service offerings please visit our Website at
www.bintec-elmeg.com where, you will find a Service / Support area

Subject to modifications
Ausgabe 6 / 20131218