

**Release Notes**  
**BRICKware 7.5.4**

**Purpose** This document describes new features, changes, and solved problems of BRICKware 7.5.4.

**Liability** While every effort has been made to ensure the accuracy of all information in this manual, Funkwerk Enterprise Communications GmbH cannot assume liability to any party for any loss or damage caused by errors or omissions or by statements of any kind in this document and is only liable within the scope of its terms of sale and delivery.

The information in this manual is subject to change without notice. Additional information and changes can be found at [www.funkwerk-ec.com](http://www.funkwerk-ec.com).

As multiprotocol gateways, Bintec gateways set up WAN connections in accordance with the system configuration. To prevent unintentional charges accumulating, the operation of the product should be carefully monitored. Funkwerk Enterprise Communications GmbH accepts no liability for loss of data, unintentional connection costs and damages resulting from unsupervised operation of the product.

**Trademarks** Bintec and the Bintec logo are registered trademarks of Funkwerk Enterprise Communications GmbH. Other product names and trademarks mentioned are usually the property of the respective companies and manufacturers.

**Copyright** All rights are reserved. No part of this publication may be reproduced or transmitted in any form or by any means – graphic, electronic, or mechanical – including photocopying, recording in any medium, taping, or storage in information retrieval systems, without the prior written permission of Funkwerk Enterprise Communications GmbH. Adaptation and especially translation of the document is inadmissible without the prior consent of Funkwerk Enterprise Communications GmbH.

**Guidelines and standards** Bintec gateways comply with the following guidelines and standards:

R&TTE Directive 1999/5/EG

CE marking for all EU countries and Switzerland

You will find detailed information in the Declarations of Conformity at [www.funkwerk-ec.com](http://www.funkwerk-ec.com).

**How to reach Funkwerk  
Enterprise Communications  
GmbH**

Funkwerk Enterprise Communications GmbH Suedwestpark 94 D-90449 Nuremberg Germany  Telephone: +49 180 300 9191 0 Fax: +49 180 300 9193 0 Internet: <a href="http://www.funkwerk-ec.com">www.funkwerk-ec.com</a>	Funkwerk Enterprise Communications 6 Avenue de la Grande Lande - CS 20102 33173 Gradignan cedex France  Telephone: +33 (0)1 61 37 32 76 Fax: +33 (0)1 61 38 15 51 Internet: <a href="http://www.funkwerk-ec.com">www.funkwerk-ec.com</a>
--	---

<b>1</b>	<b>Neuigkeiten und Änderungen</b>	<b>3</b>
1.1	Fehlerbereinigung	3
1.2	SNMP Browser entfernt	3
1.3	Echtzeit-Monitoring mit Wireshark	3
<b>1</b>	<b>News and Changes</b>	<b>5</b>
1.1	Error corrections	5
1.2	SNMP Browser removed	5
1.3	Realtime Monitoring with Wireshark	5



# 1 Neuigkeiten und Änderungen

**BRICKware 7.5.4** ist ein Bugfix Release. Folgende Änderungen sind vorgenommen worden:

- Fehlerbereinigung
- SNMP Browser entfernt
- Echtzeit-Monitoring mit Wireshark

## 1.1 Fehlerbereinigung

Eine Reihe von Fehlfunktionen wurde beseitigt.

Insbesondere wurden Fehler bei der Installation, die auf fehlende Installationsdateien zurückzuführen waren, beseitigt.

## 1.2 SNMP Browser entfernt

Der **SNMP Browser** wurde aus **BRICKware 7.5.4** entfernt, da er nun Bestandteil des FCI ist

Sie können den SNMP Browser des FCI aufrufen, indem Sie in die **ANSICHT** in der Kopfleiste von *Standard* auf *SNMP Browser* umstellen.

## 1.3 Echtzeit-Monitoring mit Wireshark

Wenn sie bei einem Trace das Kontrollkästchen **Launch Wireshark** aktivieren, wird automatisch ein installierter Wireshark mit den laufenden Traces geöffnet.



# 1 News and Changes

**BRICKware 7.5.4** is a bugfix release. The following changes have been made in this release:

- [Error corrections](#)
- [SNMP Browser removed](#)
- [Realtime Monitoring with Wireshark](#)

## 1.1 Error corrections

**A number of malfunctions have been removed.**

In particular problems during installation that were caused by missing installation files have been solved.

## 1.2 SNMP Browser removed

**The SNMP Browser has been removed from [BRICKware 7.5.4](#) since it is now part of the FCI.**

You can call the FCI SNMP Browser by changing the **VIEW** in the FCI top bar from *Standard* to *SNMP Browser*.

## 1.3 Realtime Monitoring with Wireshark

**If you activate the check box *Launch Wireshark when starting a trace*, an installed Wireshark is opened displaying the current traces.**