

# LICENSES

Copyright © October 5, 2004 Bintec Access Networks GmbH

Version 1.0

**Purpose** This document is part of the user's guide to the installation and configuration of Bintec gateways running software release 7.1.4 or later. For up-to-the-minute information and instructions concerning the latest software release, you should always read our **Release Notes**, especially when carrying out a software update to a later release level. The latest **Release Notes** can be found at [www.bintec.net](http://www.bintec.net).

**Liability** While every effort has been made to ensure the accuracy of all information in this manual, Bintec Access Networks GmbH cannot assume liability to any party for any loss or damage caused by errors or omissions or by statements of any kind in this document and is only liable within the scope of its terms of sale and delivery.

The information in this manual is subject to change without notice. Additional information, changes and **Release Notes** for Bintec gateways can be found at [www.bintec.net](http://www.bintec.net).

As multiprotocol gateways, Bintec gateways set up WAN connections in accordance with the system configuration. To prevent unintentional charges accumulating, the operation of the product should be carefully monitored. Bintec Access Networks GmbH accepts no liability for loss of data, unintentional connection costs and damages resulting from unsupervised operation of the product.

**Trademarks** Bintec and the Bintec logo are registered trademarks of Bintec Access Networks GmbH.

Other product names and trademarks mentioned are usually the property of the respective companies and manufacturers.

**Copyright** All rights are reserved. No part of this publication may be reproduced or transmitted in any form or by any means – graphic, electronic, or mechanical – including photocopying, recording in any medium, taping, or storage in information retrieval systems, without the prior written permission of Bintec Access Networks GmbH. Adaptation and especially translation of the document is inadmissible without the prior consent of Bintec Access Networks GmbH.

**Guidelines and standards** Bintec gateways comply with the following guidelines and standards:

R&TTE Directive 1999/5/EG

CE marking for all EU countries and Switzerland

You will find detailed information in the Declarations of Conformity at [www.bintec.net](http://www.bintec.net).

#### How to reach Bintec

Bintec Access Networks GmbH Suedwestpark 94 D-90449 Nuremberg Germany  Telephone: +49 180 300 9191 0 Fax: +49 180 300 9193 0 Internet: <a href="http://www.bintec.net">www.bintec.net</a>	Bintec France 6/8 Avenue de la Grande Lande F-33174 Gradignan France  Telephone: +33 5 57 35 63 00 Fax: +33 5 56 89 14 05 Internet: <a href="http://www.bintec.fr">www.bintec.fr</a>
--	---



**1      Menu Licenses ..... 3**  
**Index: Licenses ..... 7**



# 1 Menu Licenses

The fields of the *LICENSES* menu are described below.

**Licenses** This menu is used for activating **VPN Access** gateway features with the aid of licenses. Licenses are divided into various types:

- licenses already available in the ex works state of the device (e.g. Easy Licensing, IPSec)
- free extra licenses (e.g. STAC)
- extra licenses at extra cost (e.g. CAPI).

## Entering license data in the Setup Tool

Certain licenses are preconfigured on the gateway in the ex works state (see [“Licensed subsystems in ex works state” on page 4](#)). If the data are deleted accidentally, they can be easily recovered using Easy Licensing (see [“Mask” on page 6](#)).

You can obtain the license data for extra licenses (free or subject to extra cost) via the online licensing pages in the support section at [www.bintec.de](http://www.bintec.de). Please follow the online licensing instructions. (Please also note the information on the license card for licenses at extra cost.) You will then receive an e-mail with the following data: License key (**KEY**) and license serial number (**SERIALNUMBER**).

The subsystems available on your gateway are listed under **AVAILABLE LICENSES**:

VPN Access 25 Setup Tool		Bintec Access Networks GmbH	
[LICENSE]: Licenses		MyGateway	
Available Licenses:			
IP (builtin), OSPF, IPSEC, TUNNEL, BRIDGE			
Software License ID: V3A100103510007			
Serialnumber	Used for	Description	State
default	Software	easy licensing	ok
V3AIPS00Factory	Software	IPSEC	ok
ADD	DELETE	EXIT	

The licenses entered are also shown (**SERIALNUMBER**, **USED FOR**, **DESCRIPTION**, **STATE**).

Possible values for **STATE**:

Description	Meaning
ok	Subsystem is activated.
not ok	Subsystem is not activated.
unsupported	You have entered a license for a subsystem your gateway does not support.

Table 1-1: Possible values for **STATE**

**Ex works state** The following licenses are available on your gateway in the ex works state:

Licenses available in ex works state	Meaning
IP	IP routing
BRIDGE	Bridging
TUNNEL	Virtual Private Networking with PPTP (VPN-PPTP)
IPSEC	Virtual Private Networking with Internet Protocol Security (VPN-IPSec)
OSPF	Open Shortest Path First

Table 1-2: Licensed subsystems in ex works state

**Subsystem obtainable with free license** The following subsystems are available for the gateways after appropriate licensing (see [“Licenses” on page 3](#)):

Subsystem	Meaning
STAC	Data compression method

Table 1-3: Subsystem with free license

### Subsystem obtainable with license at extra cost

Subsystem	Meaning
CAPI	<p>Common ISDN Application Programming Interface</p> <p>A software interface standardized in 1989 that allows application programs to access ISDN hardware from the PC. Most ISDN-specific software solutions use the CAPI interface. Such communication applications enable you, for example, to use your PC to send and receive faxes or transfer data over the ISDN.</p>

Table 1-4: Subsystem with license at extra cost

### Activating extra licenses

You can activate the relevant extra licenses by adding the license information received in the **LICENSES** → **ADD** menu. Existing entries can be edited by tagging the desired list entry and selecting by pressing **Return**.

VPN Access 25 Setup Tool [LICENSE] [ADD]	Bintec Access Networks GmbH MyGateway
Serialnumber	
Mask	65535
Description	default easy licensing
SAVE	CANCEL

The **LICENSES** → **ADD/EDIT** menu consists of the following fields:

Field	Description
Serial Number	The license serial number you received on buying the license.

Field	Description
Mask	If licenses available in the ex works state have been deleted, confirm the default value: 65535. Is grayed out automatically when a <b>SERIAL NUMBER</b> is entered.
Description	Description of subsystem.
Key	License key A parameter received during online licensing, which is entered together with the license serial number. This field is shown automatically when a <b>SERIAL NUMBER</b> is entered.
Number of Licenses	(Only for IPSec) <ul style="list-style-type: none"> <li>■ <b>TOTAL</b>: Maximum number of IPSec tunnels that may be active at the same time.</li> <li>■ <b>IN USE</b>: IPSec tunnels in use at the moment.</li> </ul> These entries cannot be changed.

Table 1-5: **LICENSES** menu fields





# Index: Licenses

<b>A</b>	Available subsystems	4
<b>D</b>	Description	5
<b>E</b>	Ex works state	4
<b>H</b>	Hardware serial number	3
<b>K</b>	Key	3, 5
<b>L</b>	License data	
	Activating extra licenses	5
	License serial number	3
	PIN	3
	Serial number	3
	Software license ID	3
	License serial number	3
<b>M</b>	Mask	5
<b>O</b>	Online licensing	3, 6
<b>P</b>	PIN	3
<b>S</b>	Serial number	3, 5
	Software license ID	3

