

User's Guide
bintec R4100 / R4300
Licenses

Purpose This document is part of the user's guide to the installation and configuration of bintec gateways running software release 7.4.3 or later. For up-to-the-minute information and instructions concerning the latest software release, you should always read our **Release Notes**, especially when carrying out a software update to a later release level. The latest **Release Notes** can be found at www.funkwerk-ec.com.

Liability While every effort has been made to ensure the accuracy of all information in this manual, Funkwerk Enterprise Communications GmbH cannot assume liability to any party for any loss or damage caused by errors or omissions or by statements of any kind in this document and is only liable within the scope of its terms of sale and delivery.

The information in this manual is subject to change without notice. Additional information, changes and **Release Notes** for bintec gateways can be found at www.funkwerk-ec.com.

As multiprotocol gateways, bintec gateways set up WAN connections in accordance with the system configuration. To prevent unintentional charges accumulating, the operation of the product should be carefully monitored. Funkwerk Enterprise Communications GmbH accepts no liability for loss of data, unintentional connection costs and damages resulting from unsupervised operation of the product.

Trademarks bintec and the bintec logo are registered trademarks of Funkwerk Enterprise Communications GmbH.

Other product names and trademarks mentioned are usually the property of the respective companies and manufacturers.

Copyright All rights are reserved. No part of this publication may be reproduced or transmitted in any form or by any means – graphic, electronic, or mechanical – including photocopying, recording in any medium, taping, or storage in information retrieval systems, without the prior written permission of Funkwerk Enterprise Communications GmbH. Adaptation and especially translation of the document is inadmissible without the prior consent of Funkwerk Enterprise Communications GmbH.

Guidelines and standards bintec gateways comply with the following guidelines and standards:

R&TTE Directive 1999/5/EG

CE marking for all EU countries and Switzerland

You will find detailed information in the Declarations of Conformity at www.funkwerk-ec.com.

**How to reach Funkwerk
Enterprise Communications
GmbH**

Funkwerk Enterprise Communications GmbH Suedwestpark 94 D-90449 Nuremberg Germany Telephone: +49 180 300 9191 0 Fax: +49 180 300 9193 0 Internet: www.funkwerk-ec.com	Bintec France 6/8 Avenue de la Grande Lande F-33174 Gradignan France Telephone: +33 5 57 35 63 00 Fax: +33 5 56 89 14 05 Internet: www.bintec.fr
--	---

1	Menu Licenses	3
	Index: Licenses	7

1 Menu Licenses

The fields of the *LICENSES* menu are described below.

Licenses This menu is used for activating gateway features with the aid of licenses. Licenses are divided into various types:

- licenses already available in the ex works state of the device
- free extra licenses
- extra licenses at extra cost.

The data sheet which you can download at www.funkwerk-ec.com informs about the licences that are available on your gateway in ex works state and about additional licences available online free or at charge.

Entering license data in the Setup Tool

If the data are deleted accidentally, the licenses preconfigured on the gateway in the ex works state can be easily recovered using Easy Licensing (see “Mask” on page 5).

You can obtain the license data for extra licenses via the online licensing pages in the support section at www.funkwerk-ec.com. Please follow the online licensing instructions. Please also note the information on the license card for licenses at extra cost. You will then receive an e-mail with license key (**KEY**) and license serial number (**SERIALNUMBER**).

The functions available on your gateway are listed under **AVAILABLE LICENSES**:

R4100 Setup Tool		Funkwerk Enterprise Communications GmbH	
[LICENSE]: Licenses		MyGateway	
Available Licenses: BRIDGE, CAPI, FRAME RELAY, IP (builtin), OSPF, IPSEC(10/110), TUNNEL			
Software License ID: R4A160006150031			
Serialnumber	Used for	Description	State
default	Software	easy licensing	ok
R4A1PSRFactory	Software	IPSEC	ok
ADD		DELETE	
		EXIT	

The licenses entered are also shown (**SERIALNUMBER**, **USED FOR**, **DESCRIPTION**, **STATE**).

Possible values for **STATE**:

Description	Meaning
ok	Subsystem is activated.
not ok	Subsystem is not activated.
unsupported	You have entered a license for a subsystem your gateway does not support.

Table 1-1: Possible values for **STATE**

Activating extra licenses

You can activate the relevant extra licenses by adding the license information online received in the **LICENSES** → **ADD** menu. Existing entries can be edited by tagging the desired list entry and selecting by pressing **Return**.

R4100 Setup Tool [LICENSE] [ADD]	Funkwerk Enterprise Communications GmbH MyGateway
Serialnumber Mask Description	65535 default easy licensing
SAVE	CANCEL

The **LICENSES** → **ADD/EDIT** menu consists of the following fields:

Field	Description
Serial Number	The license serial number you received on buying the license.
Mask	If licenses available in the ex works state have been deleted, confirm the default value: 65535. Is grayed out automatically when a SERIALNUMBER is entered.
Description	Description of subsystem.
Key	License key A parameter received during online licensing, which is entered together with the license serial number. This field is shown automatically when a SERIALNUMBER is entered.

Field	Description
Number of licenses ... total, ... in use by...	This field is only displayed in the EDIT menu of IPsec and ISDN hardware licenses. The number of available licenses for the respective subsystem and the number of currently used licenses is displayed here.

Table 1-2: **LICENSES** menu fields

Index: Licenses

D	Description	5
H	Hardware serial number	3
I	in use by	6
K	Key	3, 5
L	License data	
	Activating extra licenses	4
	License serial number	3
	PIN	3
	Serial number	3
	Software license ID	3
	License serial number	3
M	Mask	5
N	Number of licenses	6
O	Online licensing	3, 5
P	PIN	3
S	Serial Number	5
	Serial number	3, 5
	Software license ID	3
T	total	6

