



Webfilter Configuration

Guide

Copyright© Version 1.3, 05/2020 Teldat, S.A.

Legal Notice

Warranty

This publication is subject to change.

Teldat, S.A. offers no warranty whatsoever for information contained in this manual.

Teldat, S.A. is not liable for any direct, indirect, collateral, consequential or any other damage connected to the delivery, supply or use of this manual.

Table of Contents

Chapter 1	What DNS can you use?	1
Chapter 2	Generic configuration.	2
Chapter 3	Banning other DNS servers	3
Chapter 4	Dynamic IP	4
Chapter 5	Multiprofile configuration	5
Chapter 6	Example: Webfilter with multiprofile, Dynamic IP and no other DNS servers . .	7

Chapter 1 What DNS can you use?

When on <http://webfilter.teldat.com>, the IP address that belongs to the DNS server you may use appears at the bottom of the website.



Chapter 2 Generic configuration

Configuring the WebFilter feature on a Teldat router is as easy as configuring the DNS server. Just enter the following commands:

```
feature dns  
; -- DNS resolver user configuration --  
    server 185.236.104.104  
    server 185.236.105.105  
exit
```

Chapter 3 Banning other DNS servers

If you want to ban all other DNS servers, create a new access-list to use on the WAN interface:

```
feature access-lists
; -- Access Lists user configuration --
access-list 100
    description FILTER_DNS_OUTPUT
    entry 1 default
    entry 1 permit
    entry 1 destination address 185.236.104.104 255.255.255.255
    entry 1 destination port-range 53 53
;
    entry 2 default
    entry 2 permit
    entry 2 destination address 185.236.105.105 255.255.255.255
    entry 2 destination port-range 53 53
;
    entry 3 default
    entry 3 deny
    entry 3 destination port-range 53 53
;
    entry 4 default
    entry 4 permit
;
    exit
;

network <WAN_INTERFACE>
; -- Generic Direct IP Encapsulation User Configuration -
    ip access-group 100 out
    exit
```

Chapter 4 Dynamic IP


WebFilter works with both dynamic and static IPs. If you have a dynamic IP, configure the DynDNS on the router:

```
feature dns-updater
; -- DNS UPDATER configuration --
    enable
;
    entry 1 protocol DynDNS system dynamic
    entry 1 interface <INTERFACE_WAN>
    entry 1 hostname <HOSTNAME>
    entry 1 servername ddns.flashstart.com
    entry 1 user <E-MAIL> password <PASSWORD>
;
exit
```

Chapter 5 Multiprofile configuration

The advanced features allow you to create multiple profiles per customer/license and associate them to a single network (IP address). WebFilter recognizes the remote network (and configuration profile) from the public IP (example: 1.2.3.4) and the port:

- Standard 53 port (default profile)
- Other ports (110, 143, 5402, 5403)

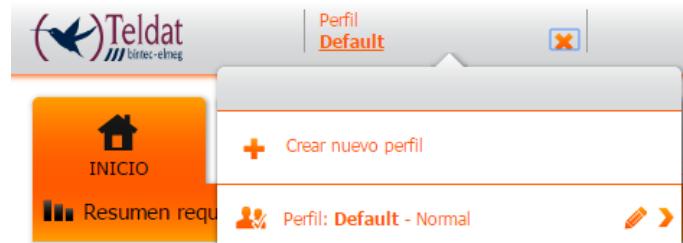


+ Create new profile

Name:	Default
Timezone:	(GMT+01:00) Madrid
Mode:	Normal
Port:	53

Edit Cancel

+ Name:	Profile2
Timezone:	(GMT+01:00) Madrid
Mode:	Normal
Port:	5402

Insert Cancel

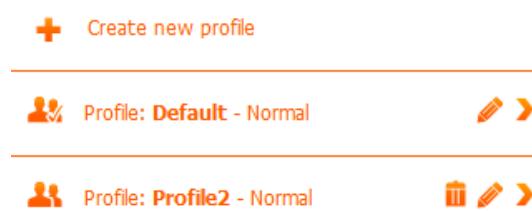

Web configuration example: there are two profiles - Default (port 53) and Profile2 (port 5402)

Whenever you want to create two or more profiles per network (same IP address), configure a different port for each profile. You should follow the foregoing configuration guidelines, as well as the following ones:

Enable the AFS functionality:

```
feature afs  
    enable  
exit
```

Change the DNS request (port 53) to the new port via NAT:

```
protocol ip  
; -- Internet protocol user configuration --  
;  
nat  
    rule 1 out <LAN_INTERFACE_PROFILE2> static  
    rule 1 translation source tcp 185.236.104.104 <PORT_PROFILE2> 185.236.104.104 53  
;  
    rule 2 out <LAN_INTERFACE_PROFILE2> static  
    rule 2 translation source udp 185.236.104.104 <PORT_PROFILE2> 185.236.104.104 53  
;  
    rule 3 out <LAN_INTERFACE_PROFILE2> static  
    rule 3 translation source tcp 185.236.105.105 <PORT_PROFILE2> 185.236.105.105 53  
;  
    rule 4 out <LAN_INTERFACE_PROFILE2> static  
    rule 4 translation source udp 185.236.105.105 <PORT_PROFILE2> 185.236.105.105 53  
;  
    exit  
;  
    exit  
;  
feature dns-updater  
    no cache enable  
exit
```

NOTE: Profile1 is still linked to port 53, you do not need any special configuration for it.

Chapter 6 Example: Webfilter with multiprofile, Dynamic IP and no other DNS servers

```
log-command-errors
    no configuration
;

add device direct-ip 1
add device eth-subinterface ethernet0/0 16
add device eth-subinterface ethernet0/0 17
set data-link at cellular1/0
set data-link nic cellular1/1
feature afs
    enable
exit
;

feature access-lists
; -- Access Lists user configuration --
access-list 100
    description DIRECT_IP_FILTER_DNS_OUTPUT
    entry 1 default
    entry 1 permit
    entry 1 destination address 185.236.104.104 255.255.255.255
    entry 1 destination port-range 53 53
;
    entry 2 default
    entry 2 permit
    entry 2 destination address 185.236.105.105 255.255.255.255
    entry 2 destination port-range 53 53
;
    entry 3 default
    entry 3 deny
    entry 3 destination port-range 53 53
;
    entry 4 default
    entry 4 permit
;
    exit
;
exit
;

user admin hash-password 3A574FAF7E28F15516BEB5C876D8B5BC
;

global-profiles dial
; -- Dial Profiles Configuration --
    profile INTERNET default
    profile INTERNET dialout
    profile INTERNET 3gpp-apn movistar.es
;
    exit
;

network cellular1/0
; -- Interface AT. Configuration --
    pin ciphered 0xBE35DF12FBFA1154
;
;

network mode automatic
network domain cstps
exit
;

network direct-ip1
; -- Generic Direct IP Encapsulation User Configuration --
    description WAN
    ip access-group 100 out
;
```

```

        ip address dhcp-negotiated

;
base-interface
; -- Base Interface Configuration --
    base-interface cellular1/1 link
    base-interface cellular1/1 profile INTERNET
;

exit

;
direct-ip
; -- Direct IP encapsulator user configuration --
    address dhcp
    authentication sent-user MOVISTAR ciphered-pwd 0xD2650CEF62FB6F55D3AC337DA700103B
exit

;
exit

;
network ethernet0/0.16
; -- Ethernet Subinterface Configuration --
    description VLAN_16
;

ip address 172.16.0.1 255.255.0.0
;

encapsulation dot1q 16
;
;
;
;
;

exit

;
network ethernet0/0.17
; -- Ethernet Subinterface Configuration --
    description VLAN_17
;

ip address 172.17.0.1 255.255.0.0
;

encapsulation dot1q 17
;
;
;
;

exit

;
;
;
;
;
;

protocol ip
; -- Internet protocol user configuration --
    route 0.0.0.0 0.0.0.0 direct-ip1
;

nat
    rule 1 out ethernet0/0.16 static
    rule 1 translation source tcp 185.236.104.104 5402 185.236.104.104 53
;

    rule 2 out ethernet0/0.16 static
    rule 2 translation source udp 185.236.104.104 5402 185.236.104.104 53
;

    rule 3 out ethernet0/0.16 static
    rule 3 translation source tcp 185.236.105.105 5403 185.236.105.105 53
;

    rule 4 out ethernet0/0.16 static

```

```
        rule 4 translation source udp 185.236.105.105 5403 185.236.105.105 53
;
rule 10 out direct-ip1 dynamic overload
rule 10 translation source interface direct-ip1
;
exit
;
exit
;
;
;
;
feature dns
; -- DNS resolver user configuration --
no cache enable
server 185.236.104.104
server 185.236.105.105
exit
;
feature dns-updater
; -- DNS UPDATER configuration --
enable
;
entry 1 protocol DynDNS system dynamic
entry 1 interface direct-ip1
entry 1 hostname ejemplo
entry 1 servername ddns.flashstart.com
entry 1 user ejemplo@teldat.com ciphered-pwd 0x5E8102555EDEC919914FD3E6D9AD48CD
;
exit
;
dump-command-errors
```