

Read Me

Release 1.16.3

elmeg IP620 und elmeg IP630

1. What is new?

-

2. Enhancements

- Unable to perform firmware update due to lack of free space.

3. Firmware Upgrade

Devices of the be.IP series operated in PABX mode, devices of the elmeg hybrid 1x0 series and elmeg hybrid 120 Gigaset Edition support the release 1.16.3 for **elmeg IP620** and **elmeg IP630**.

An upgrade to release 1.16.3 can be carried out using the user interface (the configurator) of **elmeg IP620 / elmeg IP630**. Alternatively, you can carry out the upgrade using the user interface of one of the supporting PABX devices.

Preconditions

- a be.IP series device in PABX mode, an elmeg-hybrid-1x0 series device or an elmeg hybrid 120 Gigaset Edition running system software release 10.1.21.101
- a working internet connection.

Carrying out the upgrade

Using the elmeg IP620 / elmeg IP630 configurator

1. Open the download page for **elmeg IP620 / elmeg IP630** of the bintec elmeg website.
2. Select firmware release 1.16.3 and download it to your PC.
3. Enter the IP address of your **elmeg IP620 / elmeg IP630** in the address bar of your browser and log in to your device.
4. Go to the menu **Settings -> System -> Firmware Update**.
5. In the line **User defined firmware file**, click **Browse**, navigate to the ZIP archive you have downloaded and click **Open**.
6. Click the **Load** icon in order to upload the file to the device.

The upgrade can take a while. After it has been completed, the device reboots.

Alternatively using a PABX

1. Ensure that the GUI **View is** set to *Full Access*.
2. Access the **Maintenance -> Update system phones-> elmeg OEM** menu.
You now see your **elmeg IP620 / elmeg IP630** in both of the lists. The status of your device is represented by a green icon.
3. If your **elmeg IP620 / elmeg IP630** is not shown in the lists, or its status is represented by a red icon, different reasons can be responsible. Verify that your device has been properly installed and registered.

4. Activate the option **Automatic Update from external Server** in the section **Update from external Server**.
5. Activate the Option Update immediately in the line that shows your **elmeg IP620 / elmeg IP630** with a green icon, and click **OK**.
It may take a while until the upgrade is actually carried out. After it has been completed, the device reboots.

4. Bug fixes

- Doubled ringing tone
- Provisioning is crashing when xml does not contain version field
- First global contact is displayed when voicemail is calling
- Switching between allow/don't allow packet fragmentation has no influence on HTTP packets
- No information about new voicemail-several voicemail boxes
- Wrong voice mail number is shown in Call Divert
- Call divert to voicemail is not displayed on the IDLE screen
- BLF does not show name of the key but phone number

5. Known Issues

- Bluetooth headset using USB plug not supported