



User Guide elmeg D150R

Copyright© Version 1.0, 2015 bintec elmeg GmbH

Legal Notice

Aim and purpose

This document is part of the user manual for the installation and configuration of bintec elmeg devices. For the latest information and notes on the current software release, please also read our release notes, particularly if you are updating your software to a higher release version. You will find the latest release notes under www.bintec-elmeg.com.

Liability

This manual has been put together with the greatest possible care. However, the information contained in this manual is not a guarantee of the properties of your product. bintec elmeg GmbH is only liable within the terms of its conditions of sale and supply and accepts no liability for technical inaccuracies and/or omissions.

The information in this manual can be changed without notice. You will find additional information and also release notes for bintec elmeg devices under www.bintec-elmeg.com.

bintec elmeg devices make WAN connections as a possible function of the system configuration. You must monitor the product in order to avoid unwanted charges. bintec elmeg GmbH accepts no responsibility for data loss, unwanted connection costs and damage caused by unintended operation of the product.

Trademarks

bintec trademarks and the bintec logo, artem trademarks and the artem logo, elmeg trademarks and the elmeg logo are registered trademarks of bintec elmeg GmbH.

Company and product names mentioned are usually trademarks of the companies or manufacturers concerned.

Copyright

All rights reserved. No part of this manual may be reproduced or further processed in any way without the written consent of bintec elmeg GmbH. The documentation may not be processed and, in particular, translated without the consent of bintec elmeg GmbH.

You will find information on guidelines and standards in the declarations of conformity under www.bintec-elmeg.com.

How to reach bintec elmeg GmbH

bintec elmeg GmbH
a Teldat Group Company
Südwestpark 94, D-90449 Nürnberg, Deutschland,
Telefon: +4991196730, Fax: +499116880725
Internet: www.bintec-elmeg.com

Overview of handset



- 1 LED light / Visual call signal
(→ [page 32](#), → [page 32](#))
- 2 Display in idle status
- 3 Status bar (→ [page 37](#))
Icons display current settings and operating status of the phone
- 4 Side keys (→ [page 16](#))
- 5 Display keys (→ [page 16](#))
- 6 End call key, on/off key
End call, cancel function, go back one menu level (press **briefly**), back to idle status (press and **hold**), switch handset on/off (press and **hold** in idle status)
- 7 Message key (→ [page 17](#))
Access to the calls and message lists;
Flashing: new message or new call
- 8 Profile key (→ [page 32](#))
- 9 Hash key
Keypad lock on/off (press and **hold** in idle status);
Toggles between upper/lower case and digits
- 10 Connection socket for headset (→ [page 8](#))
- 11 Microphone
- 12 Star key
With an open connection: switch from pulse dialling to tone dialling (press **briefly**);
When inputting text: Open special characters table
- 13 Key 1
Select network mailbox (press and **hold**)
- 14 Recall key
- Consultation call (flash)
- Insert a dialling pause (press and **hold**)
- 15 Answer call key / Handsfree key
Dial number displayed;
Accept call; switch from earpiece to handsfree mode;
Open the redial list (press **briefly**); start dialling (press and **hold**);
- 16 Control key / Menu key (→ [page 15](#))

Please note

The product images are depicted schematically and may differ from the actual appearance of the product.

Contents

Overview of handset	3
Safety precautions	5
Getting started	6
Understanding the operating steps in the user guide	14
Getting to know your phone	15
Making calls	19
Adjusting the telephone settings	22
Restoring phone to default setting	27
ECO DECT	27
Multiple handsets	28
Phonebook (Address book)	29
Call list	31
Sound profiles	32
Spot LED	32
Calendar	33
Alarm clock	34
Baby monitor	35
Display icons	37
Menu tree	39
bintec elmeg support	40
Appendix	42
Index	45

Safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone.



Use only the power adapter indicated on the device.



Use only **rechargeable batteries** that correspond to the **specification** (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.

If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your elmeg product see **Technical data**).



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your handset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



The base and charger are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



If you give your phone to a third party, make sure you also give them the user guide.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



To prevent loss of hearing, avoid listening at high volume over long periods of time.

Please note

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!

Getting started

Checking the contents of the package

- ◆ One handset,
- ◆ One charging cradle incl. power adapter,
- ◆ One battery cover (rear cover for the handset),
- ◆ One locking disc for the battery cover,
- ◆ Two batteries,
- ◆ One belt clip,
- ◆ One rubber cover for the headset socket.

Installing the charging cradle

The charging cradle is designed for use in closed, dry rooms in a temperature range of +5°C to +45°C.


- ▶ Set up the charging cradle on a flat, non-slip surface.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, marks on the surfaces cannot be completely ruled out.

Notes

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your phone from moisture, dust, corrosive liquids and fumes.
- ◆ Pay attention to the range of the base. This is up to 50 m inside buildings and up to 300 m in unobstructed outdoor areas. The range is reduced when **Maximum Range** is deactivated.

Connecting the charging cradle

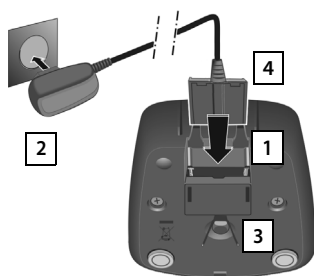

- ▶ Connect the flat plug to the charging cradle [1].
 - ▶ Plug the power adapter into the power socket [2].
- If you have to remove the plug from the charging cradle again:
- ▶ Disconnect the power adapter from the mains power supply.
 - ▶ Press the release button [3] and disconnect the plug [4].

Setting up the handset for use

The display is protected by a plastic film. Please remove the protective film!

Inserting the batteries and closing the battery cover

Caution

Use only rechargeable batteries recommended by bintec elmeg GmbH (→ [page 43](#)), as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


- ▶ Insert the batteries with the polarity in the right direction (for correct +/- direction, see diagram).

- ▶ Hold the battery cover at a slight angle and insert the bottom into the casing first **1**.
- ▶ Then press the cover **2** until it clicks into place.
- ▶ Insert the locking disc as shown (at an angle of approx. 20°) **3**. Pay attention to the arrow markings.

- ▶ Turn locking disc clockwise to the end stop **4**. The locking disc is closed once the markings on the disc are aligned with those on the cover **5**.

To **open the battery cover**, for example to change the batteries:

- ▶ Turn the locking disc anti-clockwise to the end stop **6** (approx. 20°) and remove **7**.
- ▶ Place your fingernail in the notch on the side between the cover and the casing **8** and remove the cover **9**.

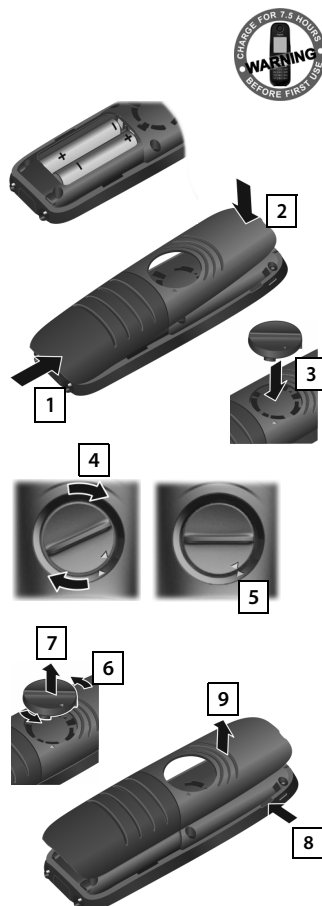

Belt clip

The handset has notches on each side to attach the belt clip.


- ◆ **To attach** — press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- ◆ **To remove** — press the centre of the belt clip firmly with your right thumb, push the fingernail of your left thumb up between the clip and the casing and pull the clip in an upward direction.



Connecting the headset




You can connect a headset to the underside of your telephone with the 2.5 mm jack connector **1**. For information on recommended headsets, see the relevant product page at www.bintec-elmeg.com.

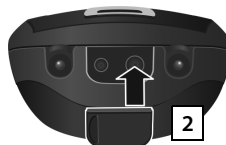

If you **do not** wish to connect a headset, please insert the rubber cover supplied **2** to guarantee the unit is still splash proof.

Charging the batteries

The batteries are supplied partially charged. Please charge completely before use. (The batteries are fully charged when the power icon  disappears from the display.)

- ▶ Charge the handset in the charging cradle for **7.5 hours**.








Notes

- ◆ The handset may only be placed in the designated base/charging cradle.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.


Changing the display language

You can also change the display language via the menu:

 ▶  ▶ **OK** ▶  **Language** ▶ **OK** ▶  **Select language** ▶ **Select**
or, if you do not understand the language currently set, go to:

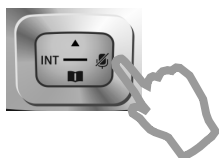

▶ Press right on the control key.

 



▶ Press keys  and  **slowly** one after the other.

Example



The language selection display appears.
The current language (e.g. English) is selected.

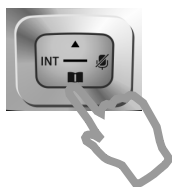

▶ Press the down control key  ...

Example




... until the language you wish to use is displayed e.g. French.

▶ Press the **right** key, directly under the display, to select the language.

Example



▶ Press and **hold** the End call key  to return to idle status.

Registering the handset

The registration process depends on the base. You must initiate registration on the handset **and** on the base. Both must be carried out **within 60 secs**.

- ▶ **On the base:** Press and **hold** (min. 3 secs) the Registration/paging key.
- ▶ **On the handset,** press the display key **Register**.
Or:
☎ ▶ ⚙ ▶ OK ▶ 🔄 **Registration** ▶ OK ▶ **Register Handset** ▶ OK


Display shows: **Searching for a base in registration mode**. The connection to the base will be established; this may take some time.

- ▶ Enter the system PIN if required (factory setting: **0000**). ▶ **OK**

When registering, the display screen shows: **Handset is registering**


After registering successfully, the display screen shows: **Handset registered**

Your handset can be registered on up to four bases. To see how to use your handset with multiple bases and de-register a handset, refer to the user guide for the base.

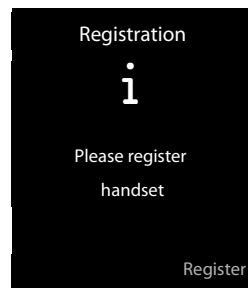

Setting the date and time


Set the date/time so that the correct date and time can be assigned to incoming calls, and so that you can use the alarm.

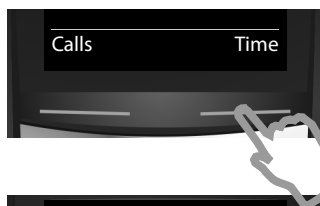

- ▶ Press the key **Time** below the display screen to open the input field.


(If you have already set the date/time, open the input field via the menu:

▶ ▶ **OK** ▶ **Date/Time** ▶ **OK**)


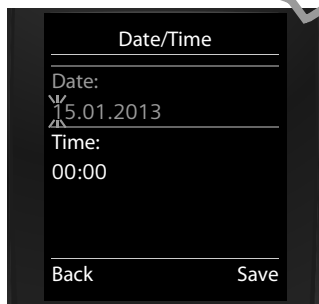


The submenu **Date/Time** is shown on the display.


- ▶ The active input position flashes.
Enter the day, month and year as an 8-digit number via the keypad,
e.g. for 14.10.2013.

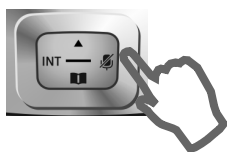


Press the **right** or **left** control key to change the input position, e.g. to correct an entry.

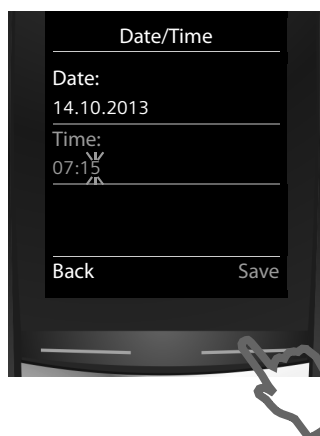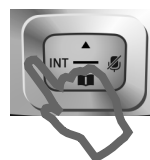

- ▶ Press the **down** control key to switch to the time input field.
- ▶ Enter the hours and minutes in 4-digit format via the keypad e.g., for 07:15 am. Change the input position with the control key if necessary.
- ▶ Press the key **Save** below the display screen to save the entry.

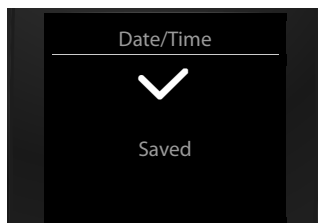

Display shows: **Saved**. You will hear a confirmation tone.

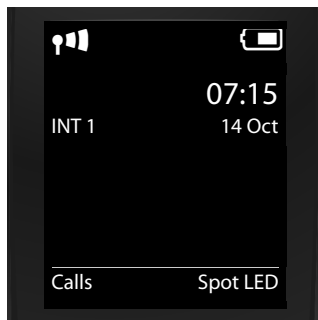

You will automatically return to idle status.

Your phone is now ready for use.

What would you like to do next?

After successfully setting up the phone, you can make calls straight away, customise your phone according to your requirements or firstly familiarise yourself with the operation.

Setting ringtones

Assign specific tunes to internal and external calls, reminders (→ [page 24](#)), wake-up calls (→ [page 34](#)) and to certain callers (→ [page 29](#)).

Protecting yourself against unwanted calls

Set your phone up so that it doesn't ring if there is an anonymous call or use the time control (→ [page 25](#)).

Adjusting your phone to your surroundings

Use 3 sound profiles to adjust your phone to a quiet or loud background (→ [page 32](#)).

Register an existing elmeg handset and add it to the phonebook

Use available handsets to continue calling from your new base. Transfer directory entries from these handsets to your new handset (→ [page 30](#)).

Configuring ECO DECT settings

Reduce the transmission power (emissions) of your phone (→ [page 27](#)).

If you have any questions about using your phone, please read the tips on troubleshooting (→ [page 40](#)) or contact our Customer Service team (→ [page 40](#)).


 
 
Understanding the operating steps in the user guide

The keys on your elmeg handset are set out in these operating instructions as follows:

 /  /  Answer call key / Menu key / End call key

 to  Number / Letter keys

 /  Star key / Hash key

 /  /  Message key / Recall key / Profile key










Overview of display icons (→ [page 37](#)).

Example: Activating/deactivating Auto Answer

Illustration in the user guide:


 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** (☑ = activated)

Follow this procedure:

- ▶ : With the handset in idle status, press the **right** control key to open the main menu.
- ▶ : Navigate to the  icon using the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Settings**.
- ▶  **Telephony**: Scroll to the entry **Telephony** with the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Telephony**.
- ▶ **Auto Answer**: The activate/deactivate auto answer function is selected.
- ▶ **Change** (☑ = activated): Press the display key **Change** or the middle of the control key  to alternate between activating or deactivating (☑ = activated, ☐ = deactivated).

Getting to know your phone

Switching the handset on/off

- ▶ Press and **hold** the End call key  in idle status to switch the handset on or off.


Locking/unlocking the keypad

The keypad lock prevents any accidental use of the phone. If you press a key when the keypad is locked, a message is displayed.

- ▶ Press and hold the  key to lock or unlock the keypad.

If a call is signalled on the handset, the keypad automatically unlocks, and you can accept the call. It then locks again when the call is finished.





Control key

In the description below, the side of the control key (up, down, right, left, middle) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".




The control key allows you to navigate within menus and entry fields. In idle status or during an external call, it has the following functions:



When the handset is in idle status

-  Open the phonebook.
-  or  Open the main menu.
-  Open list of handsets.

During an external call

-  Open the phonebook.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Functions when pressing the centre of the control key

 

The key has different functions, depending on the operating situation.

- ◆ **In idle status**, it opens the main menu.
- ◆ **In submenus, selection and entry fields**, the key takes on the function of the display keys **OK, Yes, Save, Select** or **Change**.

Note

These instructions demonstrate opening the main menu by pressing the right of the control key and confirming the functions by pressing the appropriate display key. However, if you prefer, you can also press the middle of the control key.

Side keys


-  /  Press these keys on the right-hand side of the handset to set the volume for the **earpiece, ringtone, handsfree mode, alarm clock, appointments** and the **headset** depending on the situation.

Display keys

The display keys have a function preset by default in idle status, but the keys can be re-assigned (→ [page 26](#)).

The functions of the display keys change depending on the operating situation.

Example

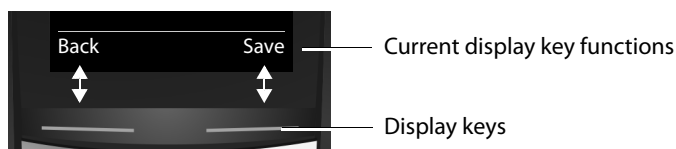

Some of the important display keys are:

- Options** Open a menu for further functions.
- OK** Confirm selection.
- Back** Skip back one menu level or cancel operation.
- Save** Save entry.

Overview of icons on the display keys ([page 38](#)).

Menu guidance


The functions of your telephone are displayed on a menu that consists of several levels. Menu overview → [page 39](#).


Main menu (first menu level)

- ▶ When the handset is in idle status, press **right** on the control key  to open the main menu.


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Use the control key  to navigate to the required function and press the display key **OK**.

Returning to idle status: **Briefly** press the display key **Back** or End call key .

Example

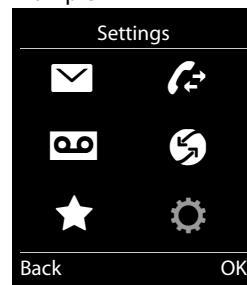

Submenus

The functions in the submenu are displayed as lists.

To access a function:

- ▶ Scroll to the function using the control key (↔) and press **OK**.

Returning to the previous menu level: **Briefly** press the display key **Back** or End call key (☎).

Returning to idle status


From any menu:

- ▶ Press and **hold** the End call key (☎).

Or:

- ▶ If you do not press a key, the display **automatically** returns to idle status after 2 minutes.

Example

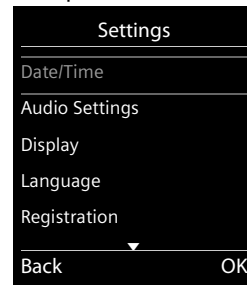

Message lists


Any messages you receive are saved in the message lists.

An advisory tone sounds as soon as a **new entry** appears on a list. The Message key also flashes. Icons for message types and the number of new messages are shown on the idle display.

New messages available:

- ◆ On the answer machine (depending on the base)/network mailbox
- ◆ In the missed calls list
- ◆ In the SMS list (depending on the base)
- ◆ In the missed alarms list

Example

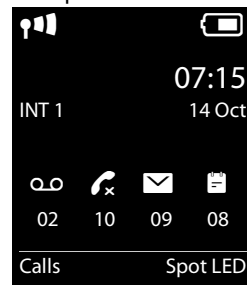

Open the message list by pressing the Message key (☑). You can access the following message lists:

- ◆ **Answer Mach.:** Answer machine list (depending on the base)
- ◆ **Mailbox:** Network mailbox (if your network provider supports this function and the number of the network mailbox has been stored.)
- ◆ **SMS:** Incoming message list
- ◆ **Missed Calls:** Missed call list (see "Call list" → [page 31](#))
- ◆ **Missed Alarms:** Missed appointments list

The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Opening the list: (↔) Select required list. ▶ **OK**

Exception: If you select the **network mailbox**, the number of the network mailbox will be selected. Lists are not opened on the display.

Entering numbers and text

If several number and/or text fields are displayed (e.g. **First Name** and **Surname** in a phonebook entry), the field is automatically activated. The following fields must be activated by navigating with the control key (↩). A field is activated when a cursor is blinking inside it.

Correcting incorrect entries


- ◆ Deleting **characters** before the cursor: press the display key **<C** briefly.
- ◆ Deleting **words** before the cursor: press and **hold** the display key **<C**.

Entering text

- ◆ **Letters/Characters:** Multiple letters and characters are assigned to each key between **0** and **9**. The characters are shown according to the key in a selection line at the bottom left of the display. The selected character is highlighted. Briefly press the key several times in succession to select the required letter/character.
- ◆ **Placing the cursor:** Letters/characters are inserted at the cursor position. You can insert the cursor by pressing the control key (↩), or (↪) in fields with multiple characters.
- ◆ **Typing lower case, upper case and numbers:** Press the hash key **#→** to switch between lower case, upper case or numbers for the **following letters**. When editing a phonebook entry, the first letter and each letter following a space is automatically in upper case.
- ◆ **Special characters:** Press the star key ***** to open the special characters table. Navigate to the character desired using the star key and press the display key **Insert** to select it.
- ◆ **Special letters:** Umlauts or other marked/diacritic characters can be selected by pressing the corresponding letter several times. See the character table → [page 44](#).

Making calls

Making an external call

▶ Enter number, **briefly** press the Answer call key .

Or:



▶ Press and **hold** the Answer call key , enter number.

You can cancel the dialling process with the End call key .

Dialling with the redial list

The redial list contains the 20 numbers last dialled with the handset. You can manage this similarly to your phone's message lists (→ [page 17](#)).

▶ Press the Answer call key  **briefly** to open the redial list.

▶  Select entry. ▶ Press the Answer call key . The number is dialled.

When a name and corresponding phone number are displayed: Press the display key **View**.

Managing entries in the redial list:



▶ Open redial list. ▶  Select entry. ▶ **Options**

You can select the following functions:

◆ **Copy to Directory** ▶ **OK**

Copy an entry to the phonebook (→ [page 29](#)).

◆ **Display number** ▶ **OK**

Copy a number into the display and edit it or add to it, then select with  or save as a new entry in the phonebook with .

◆ **Delete entry** ▶ **OK**



Delete the selected entry.

◆ **Delete all** ▶ **OK**

Delete all entries.


Dialling from the call list

 ▶  ▶ **OK** ▶  Select list. ▶ **OK**

▶  Select entry. ▶ 

▶ The number is dialled.

Notes



- ◆ You can also bring up the call list using the display key **Calls**, but you must assign a display key accordingly (→ [page 26](#)).
- ◆ You can also open the list **Missed calls** using the Message key .

Example

All calls	
  James Foster	
Today, 18:30	
 01712233445566	
11/06/2013, 18:30	
 0168123477945	
10/06/2013, 17:13	
View	Options

Dialling with the phonebook

 ▶  Select entry. ▶ 


▶ If multiple numbers are entered: Select the number with  and press the Answer call key  or OK.

▶ The number is dialled.

One touch call

 
You can set up your phone so that you can dial a specific number when you press **any key on the keyboard**. This allows children, who are unable to enter a number, to call a certain number, for example.

 ▶  ▶ OK ▶  One Touch Call ▶ OK

▶ **Activation:**  On / Off

▶ **Call to:** Enter or change the number that you wish to dial.

▶ **Save**

The activated One Touch Call appears on the idle display. The saved number is dialled by pressing any key. Press the End call key  to cancel dialling.

Ending one touch call mode:

▶ Press the display key OFF. ▶ Press and **hold** the  key.

Or:

▶ Press and **hold** the  key.


 

 
 
Accepting a call

You have the following options:

▶ Press .

▶ If **Auto Answer** is switched on (→ [page 23](#)), remove the handset from the charging cradle.

Activate/deactivate Simple Auto Answer

In addition to using the Answer call key , you can also answer a call using the keys  ... ,  and .

 ▶  ▶ OK ▶  Telephony ▶ OK ▶  Easy Acceptance ▶ **Change** (☑ = activated)


Please note: Changes are only saved permanently in **Profile Personal** (→ [page 32](#)).

Handsfree mode







If you are going to let someone listen in, you should tell the other party that this is happening.

▶ Press .

Placing the handset in the charging cradle during a call:

▶ Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

Adjusting the loudspeaker volume


- ◆ Accessing the settings **via the menu**:
 - ▶ **Earpiece:**  Volume can be set at 5 levels for the earpiece and headset.
 - ▶ **Speaker:**  Set the volume at 5 levels.
 - ▶ **Save**
- ◆ Accessing the settings **during a call** for the mode currently in use (handsfree, earpiece, headset):
 - ▶ Press side keys   (→ **page 3**) or control key  ▶ .
 - ▶ The setting is saved automatically after 2 seconds or press the display key **Save**. The screen reverts back to its previous display.

Note

Changes are only saved permanently in **Profile Personal** (→ **page 32**).

Switching the microphone on/off (muting)

If you turn the microphone off during a call, your caller can no longer hear you.

- ▶ Press  to switch the microphone on/off.

Adjusting the telephone settings

The handset and base station are preconfigured, but you can change the settings to suit your individual requirements.

The settings can be changed via the menu **Settings** whilst on a call or in idle status.

Changing the display language

☰ ▶ ⚙ ▶ OK ▶ ↻ Language ▶ OK ▶ ↻ Select languages ▶ Select (● = selected)

Setting your country and local area codes

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards). Some of these numbers are already preset. Please ensure that the prefix is correctly separated from the rest of the area code.

☰ ▶ ⚙ ▶ OK ▶ ↻ Telephony ▶ OK
 ▶ ↻ Area Codes ▶ OK ▶ ↻ Navigate to the entry field,
 delete the number using **<C** if needed ▶ Enter the number
 ▶ Save

Example

Area Codes	
International code:	00 - 49
Local area code:	0 - [8]]
< C	Save

Adjusting the handset display settings

Setting a screensaver

You can set a screensaver for the display when in idle status. You can choose from an analogue clock, a digital clock or an image.

To show the display in idle status, briefly press **☎**.

☰ ▶ ⚙ ▶ OK ▶ ↻ Display ▶ OK
 ▶ Screensaver (✓ = activated) ▶ Edit
 ▶ Activation: ☑ On / Off
 ▶ Selection:
 ☑ Digital Clock / Analog Clock / [Images]
 Or:
 ▶ View (View screensaver)
 ▶ ↻ Select screensaver ▶ OK
 ▶ Save

Example

Screensaver	
Activation	<On >
Selection:	Analog Clock
Back	Save

Setting the colour scheme

You can set the display to show a dark or a light background.

☰ ▶ ⚙ ▶ OK ▶ ↻ Display ▶ OK ▶ ↻ Colour Schemes ▶ OK
 ▶ ↻ Colour Scheme 1 / Colour Scheme 2 ▶ Select (● = selected)

Setting the display backlight

The display backlight is always lit when the handset is not in the base/charging cradle or when a key is pressed. Any **digit keys** pressed appear on the display for pre-dialling.

You can also activate/deactivate the display backlight for idle status:

 ▶  ▶ OK ▶  Display ▶ OK ▶  Backlight ▶ OK

In Charger:  On / Off

Out of Charger:  On / Off

▶ Save

Note

The handset's standby time can be significantly reduced if the display backlight is activated.

Activating/deactivating visual call

Incoming calls are signalled visually (e.g. in noisy environments).


 ▶  ▶ OK ▶  Telephony ▶ OK ▶  LED Call Signal ▶ Change = activated)

Please note: Changes are only saved permanently in **Profile Personal** (→ [page 32](#)).

Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as you remove it from the charging cradle.

 ▶  ▶ OK ▶  Telephony ▶ OK ▶ Auto Answer ▶ Change = activated)

Regardless of the setting **Auto Answer**, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

Setting earpiece profiles

You can set various profiles for the **earpiece** to optimally adapt your phone to your environment. Check which is the most comfortable for you.

 ▶  ▶ OK ▶  Audio Settings ▶ OK ▶  Earpiece Profiles ▶ OK

▶  Select profile ▶ Select (● = selected)

Earpiece Profiles: High and Low. The default is Low.

Setting the handset ringtones

Setting the ringtone volume

☰ ▶ ⚙ ▶ OK ▶ 🔄 Audio Settings ▶ OK
▶ 🔄 Ringtones (Handset) ▶ OK ▶ Volume ▶ OK

▶ For internal calls and alarms:

☰ Volume can be set at 5 levels or crescendo (increasing volume) for internal calls and anniversaries.

▶ External Calls:

☰ Volume can be set at 5 levels or crescendo (increasing volume) for external calls.

▶ Save

When the telephone rings, you can permanently change the ringtone volume using the side keys (louder) or (quieter).

Please note: Changes are only saved permanently in **Profile Personal** (→ [page 32](#)).

Setting the ring melody

☰ ▶ ⚙ ▶ OK ▶ 🔄 Audio Settings ▶ OK ▶ 🔄 Ringtones (Handset) ▶ OK
▶ 🔄 Melodies ▶ OK

▶ **Internal Calls:** ☰ Setting the volume/melody for internal calls and anniversaries.

▶ **External Calls:** ☰ Setting volumes/melodies for external calls.

▶ Save

Activating/deactivating the ringtone

Deactivating the ringtone **permanently:** Using the Profile key , set the **Profile Silent** (→ [page 32](#)). appears in the status bar.

Activating the ringtone **permanently:** Using the Profile key, set the **Profile Loud** or **Profile Personal** (→ [page 32](#)).

Deactivating the ringtone for a **current call:** Press **Silence** or .


Silent alert

Incoming calls and other messages are indicated by a silent alert.

☰ ▶ ⚙ ▶ OK ▶ 🔄 Audio Settings ▶ OK ▶ 🔄 Silent Alert
▶ Change = activated)

Please note: Changes are only saved permanently in **Profile Personal** (→ [page 32](#)). This setting is saved in the **Profile Silent**.

Example

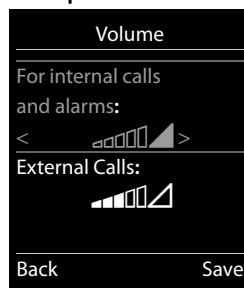

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

 ▶  ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK

▶ **Key Tones:**  **On / Off**

Tone when keys are pressed.

▶ **Confirmation:**  **On / Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received.

▶ **Battery:**  **On / Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds). There is no battery warning when the baby monitor is activated.

▶ **Save**

Please note: Changes are only saved permanently in **Profile Personal** (→ [page 32](#)).

Protection against unwanted calls

Setting time control for external calls

You can specify a time period when you do not want the telephone to ring.

 ▶  ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Time Control** ▶ OK

▶ **For external calls:**  **On / Off**

If activated:

▶ **Suspend ring. from:** Enter the start of the period.

▶ **Suspend ring. until:** Enter the end of the period.

▶ **Save**

Example

Time Control	
For external calls:	
On	
Suspend ring. from:	22:00
Suspend ring. until:	07:00
Back	Save

Note

During this period, your phone will continue to ring for numbers to which you have assigned a VIP ringtone in the phonebook.

Protection from anonymous callers

You can set your phone so that it doesn't ring for anonymous calls (callers who have withheld Calling Line Identification). The call is only signalled on the display. The setting only applies to handsets for which the setting is configured.

 ▶  ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Anon. Calls Silent** ▶ **Change** = function activated)

Quick access to numbers and functions

The **digit keys** **0** and **2** up to **9** can be assigned to a **number from the phonebook**.

The left and right **display keys** have a **function** preset by default, but the keys can be re-assigned ([page 26](#)).

You can then dial the number or start the function by simply pressing a key.


Assigning digit keys

Prerequisite: You must assign a number to the digit key.

- ▶ Press and **hold** the digit key.

Or:

Briefly press the digit key. ▶ Press the display key **QuickDial**.

- ▶ The phonebook opens. ▶  Select entry. ▶ **OK**

The entry is saved to the corresponding digit key.

Note

If you delete or edit the entry in the phonebook at a later date, this will not affect the assignment to the number key.

Selecting numbers/changing an assignment

Prerequisite: You must have assigned a number to the digit key.

When the handset is in idle status

- ▶ Press and **hold** the digit key: The number is dialed immediately.

Or:

- ▶ **Briefly** press the digit key: Press the left-hand display key with the number/name (abbreviated if necessary) to dial the number.

Or:

Press the display key **Change** to change the key assignment, or press the display key **Clear Key** to delete the assignment.

Assigning display keys

- ▶ In idle status, press and **hold** the left or right-hand display key. ▶ The list of possible key assignments is opened. ▶  Select entry ▶ **OK**

Choose from the following functions:

Baby Monitor	Set and activate the baby monitor (→ page 35).
Alarm Clock	Set and activate the alarm clock (→ page 34).
Calendar	Open calendar (→ page 33).
One Touch Call	Set up one touch call (→ page 20).
Redial	Show redial list (→ page 19).
Spot LED:	LED light (torch function) on/off (→ page 32).
More Functions...	You can also choose further functions:
Call Lists	Show call list (→ page 31).
SMS	Open SMS menu (→ page 54).

Restoring phone to default setting

You can reset individual modifications to handset settings.

The following are **not** affected by the reset:

- ◆ Date / time,
- ◆ Registration of handsets to the base and the current selection of the base,
- ◆ Entries in the calendar and phonebook,
- ◆ Redial list.

When resetting the handset (**Handset Reset**), audio and display settings will be deleted.

Resetting the handset

 ▶  ▶ OK ▶  System ▶ OK ▶  Handset Reset ▶ OK ▶ Confirm security prompt with Yes

ECO DECT

ECO DECT uses less energy and reduces transmission power.

Reducing radiation (depending on the base)

The radiation can only be reduced if your base supports this function.

Your telephone's transmission power is **automatically** reduced according to the distance to the base.

You can reduce the radiation from the handset and the base even further by




- ◆ deactivating **Maximum Range**,
- ◆ activating **No Radiation**.

For more details, see the user guide for your base station.

Multiple handsets

Making internal calls



Internal calls to other handsets registered to the same base are free of charge.


 (press **briefly**) ▶ The list of handsets is opened. Your own handset is marked <. ▶ 
Select the handset or **Call all** (group call) from the list if required. ▶ 

Holding down  immediately starts a call on **all** registered handsets.


Internal consultation/internal transfer

You receive a call from an **external** participant and would like to transfer the call to an **internal** participant or wish to consult him/her.


 ▶ The list of handsets is opened. ▶ If more than two handsets are registered to the base, select one handset or **Call all**. ▶  or **OK**

Holding a consultation call: You are speaking to the internal participant and are returning to your external call: ▶ **Options** ▶  **End active call** ▶ **OK**

Transferring an external call: You have two options to transfer the call:

- ▶ Wait until the participant called answers, then hang up:
Press the End call key .



Or:


- ▶ Hang up before the participant calls: Press the End call key .

If the participant called does not answer or does not transfer the call, end the consultation with **End**.

Establishing a conference call/call swapping


You are taking a call while a second call is being held. Both callers are indicated on the display.

- ▶ **Call swapping:** You can switch between both participants using .
- ▶ **Establishing a three-way conference call:** Press **Conf**.
Ending a conference call: Press **End Conf**. You are reconnected with the external participant. You can switch again between both participants using .

Each of the callers can end their participation in the conference call by pressing the End call key .

Accepting/rejecting call waiting

If you get an external call while conducting an internal call, you will hear the call waiting tone. If the number is transferred, you will see it or the name of the caller on the display.

- ▶ **Rejecting a call:** ▶ Press the display key **Reject**.
- ▶ **Accepting a call:** ▶ Press the display key **Accept**. You are now speaking to the new caller. The previous call is placed on hold.
Ending the current call and returning to the call on hold:
▶ **Options** ▶  **End active call** ▶ **OK**.

Phonebook (Address book)

In a **phonebook entry**, you can store first names and surnames, up to three numbers, an anniversary with a reminder, and caller melody.

You can create the directory (with up to 200 entries) individually for each of your handsets. You can also send lists/entries to other handsets (→ [page 30](#)).

Length of the entries



3 numbers: Max. 32 digits each
 First name and surname: Max. 16 characters each


Managing directory entries

Opening phonebook

Press the key  in idle status or, depending on the situation, the display key .

Creating a new entry


- ▶ Open directory. ▶  <New Entry> ▶ OK
- ▶ Switch between the input fields using  and enter the relevant components of the entry (names, numbers, anniversary, ringtone).
 Navigate downwards to display further components.
- ▶ Press the display key **Save**.

To create an entry, you must enter at least one number. If you have assigned a caller melody, the entry in the phonebook is supplemented with the symbol .

Example

New Entry	
First Name:	Robert
Surname:	
Phone (Home):	Abc
< C	Save


Displaying/changing an entry

- ▶ Open phonebook. ▶  Select the desired entry.
- ▶ **View** ▶ Display all components of the entry. ▶ **Edit**
- Or:
- ▶ **Options** ▶  **Edit entry** ▶ OK

Deleting an entry

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options** ▶  **Delete entry** ▶ OK

Delete **all** entries in the directory:

- ▶ Open phonebook. ▶ **Options** ▶  **Delete List** ▶ OK

Defining the order of the contacts entries

You can define whether the entries are to be sorted by first name or surname.

▶ Open phonebook. ▶ **Options** ▶ Press **Sort by Surname** or **Sort by First Name**.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:



Space | Digits (0-9) | Letters (alphabetical) | Other characters

Displaying the number of entries that are available in the directory


▶ Open phonebook. ▶ **Options** ▶  **Available Memory** ▶ **OK**

Selecting a phonebook entry, searching in the phonebook

▶ Open phonebook.

▶ Scroll to the name you are searching for using . **Holding down**  scrolls continuously upwards or downwards through the phonebook.

Or:

▶ Enter the first few letters (max. 8 letters) using the keypad. The display jumps to the first name that begins with these letters. If necessary, scroll on to the desired entry using .

Transferring an entry/phonebook to another handset

Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

You can transfer the entire directory, an individual entry or several individual entries.

Notes

- ◆ An external call interrupts the transfer.
- ◆ Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.
- ◆ When transferring an entry between two vCard handsets:
 - If the recipient does not yet have an entry with that name, a new entry is created.
 - If there is already an entry with that name, this entry is expanded with the new numbers.
 - If the entry contains more numbers than the recipient permits, a further entry is created with the same name.
- ◆ If the recipient is not a vCard handset: A separate entry is created and sent for each number.
- ◆ Your handset receives entries from a non-vCard handset: Entries with numbers that are already stored are discarded, otherwise a new entry is created.

Transferring individual entries

- ▶ Open phonebook. ▶ Select the desired entry. ▶ **Options**
- ▶ **Copy Entry** ▶ **OK** ▶ **to Internal** ▶ **OK** ▶ Select the recipient handset. ▶ **OK**

Transferring the entire directory

- ▶ Open phonebook. ▶ Select the desired entry. ▶ **Options**
- ▶ **Copy List** ▶ **OK** ▶ **to Internal** ▶ **OK** ▶ Select the recipient handset. ▶ **OK**

Transferring a displayed number to the phonebook

- ▶ The number is displayed or highlighted.
- ▶ Press display key or **Options** ▶ **Copy to Directory**. ▶ **OK**
 - ▶ **<New Entry>** ▶ **OK** ▶ Select number type. ▶ **OK**
 - ▶ Complete the entry. ▶ **OK**

Or:

- ▶ Select entry. ▶ **OK** ▶ Select number type. ▶ **OK**
 - ▶ The number is entered or an existing number is overwritten (answer the prompt using Yes/No).

- ▶ **Save**

Call list

Your telephone stores calls in various lists. Opening the lists:

- ◆ **Missed calls list:** Message key ▶ **Missed Calls**: ▶ **OK**
- ◆ **List selection:** ▶ ▶ **OK** ▶ Select list. ▶ **OK**

The last 20 entries are displayed in the call list.

List entry

The following information is displayed in the list entries:

- ◆ The list type (in the header row)
- ◆ Icon for the type of entry:
 - (Missed calls), (Accepted calls), (Outgoing calls)
- ◆ Caller's number. If the number is stored in the phonebook, name and number type are displayed instead (Phone (Home), Phone (Office), Phone (Mobile)). For missed calls, the number of missed calls from this number is also shown in square brackets.
- ◆ Date and time of call (if set).

- ▶ Select entry. ▶ **Options**

▶ **View:** All available information is displayed, e.g. the corresponding number when a name is displayed.

- ▶ **Options:** You can delete the entry or transfer the number to the phonebook (→ [page 31](#)).


Calling back a caller from the call list:

- ▶ Select entry. ▶ Press the Answer call key .

Example

All calls	
James Foster	
Today, 18:35	
01712233445566	
11/06/2013, 18:30	
0168123477945	
10/06/2013, 17:13	
View	Options

 
Sound profiles


You can call up the 3 sound profiles that are adapted for your handset to your surroundings consecutively by using the  key. The profile is switched immediately without a prompt. By default, **Profile Personal** is activated.

 ▶ **Profile Loud** ▶  ▶ **Profile Silent** ▶  ▶ **Profile Personal**

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Silent alert(→ page 24)		On	like Profile Personal	Off
Ringer (→ page 24)		On	Off	On
Ringtone volume (→ page 24)	Internal	5	Off	3
	External	5	Off	3
Handset volume (→ page 21)	Handset	5	3	3
	Handsfree	5	3	3
LED light for a call (→ page 23)		Yes	No	No
Simple Auto Answer (→ page 20)		Yes	No	No
Advisory tones (→ page 25)	Key click	Yes	No	Yes
	Confirmation tone	Yes	No	Yes
	Battery tone	Yes	Yes	Yes

When switching to **Profile Silent** you can activate an alert tone by pressing the **Beep** display key.  appears in the status bar.

Changes in **Profile Loud** and **Profile Silent** only apply provided that the profile is not changed (by pressing the  Profile key). Changes to **Profile Personal** are stored permanently for this profile.

The set profile remains set when switching the phone off and back on.

Spot LED

You can use your telephone as a torch.

Activating/deactivating the torch function

Press the **Spot LED** display key (→ [page 26](#)).

Or:


 ▶  ▶ **OK** ▶ **Spot LED** ▶ **OK**

After 2 minutes the function is automatically deactivated or press the **OFF** display key.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be highlighted.

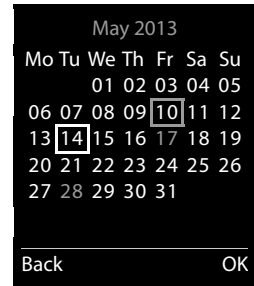

Saving appointments to the calendar

Prerequisite: Date and time are set (→ [page 11](#)).

▶ ▶ **OK** ▶ **Calendar** ▶ **OK**

▶ Select the desired day. ▶ **OK**

- ◆ Appointments that have already been stored are shown.
<New Entry> ▶ **OK** opens the window to enter an additional appointment.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

Activation: **On/Off**

The following information can be added:

- ◆ **Date:** The selected day is preset. Enter new data to change.
 - ◆ **Time:** Time (hour and minute) of the appointment.
 - ◆ **Text:** Appointment name (e.g. dinner, meeting).
 - ◆ **Signal:** Select the melody of the reminder signal or deactivate the acoustic signalling.
- ▶ **Save**

Signalling of appointments/anniversaries

Anniversaries are transferred from the phonebook and displayed as an appointment. An appointment/anniversary is displayed in idle status and signalled for 60 seconds with the selected ringtone.

You can deactivate the reminder call:

- ▶ Press **OFF** to acknowledge and end the reminder call.


When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.

During the reminder call you can turn the ringtone volume (up) or (down) continuously using the side keys.




Displaying missed appointments/anniversaries


The following appointments and anniversaries are stored in the **Missed Alarms** list:

- ◆ The appointment/anniversary call was not acknowledged.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the head of the list.

To open the list: ▶ Message key  ▶  **Missed Alarms** ▶ OK

Or via the menu:  ▶  ▶ OK ▶  **Missed Alarms** ▶ OK

▶  scroll in the list if required

Information about the appointment/anniversary is displayed. You can:

▶ Delete an appointment/anniversary: **Delete**

Displaying/changing/deleting stored appointments

 ▶  ▶ OK ▶  **Calendar** ▶ OK ▶  Select the desired day. ▶ OK ▶ The appointment list is displayed. ▶  Select the desired appointment.

▶ **View:** Display appointment settings, change, if required using **Edit**.

Or:

▶ **Options:** Change settings or delete appointments.

– **Edit entry** ▶ OK

– **Delete entry** ▶ OK

– **Activate/Deactivate** ▶ OK

– **Delete all Appoints.** ▶ OK ▶ Confirm prompt with **Yes**.

All appointments for the **selected day** are deleted.

Alarm clock


Prerequisite: Date and time are set (→ [page 11](#)).


You can activate/deactivate and set the alarm clock as follows:

▶ Changing the settings:


– **Time:** Set the hour and minute for the wake-up time (time setting → [page 11](#)).

– **Occurrence:**  **Daily/Monday-Friday**


 
– **Volume:**  Volume can be set at 5 levels or crescendo (increasing volume).

– **Melody:**  Select a ringtone for the alarm call.


▶ Press the display key **Save**.

When the alarm clock is activated, the icon  and the alarm time is displayed in idle status.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone.

During the sounding of the alarm you can turn the volume  (up) or  (down) continuously using the side keys.

Example

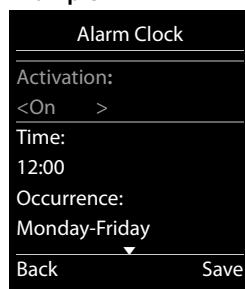

Deactivating the alarm call/repeating after a pause (snooze mode)

Prerequisite: One alarm call sounds.

▶ **Deactivating until the next alarm call:** Press **OFF**.

Or:

▶ **Snooze mode:**

Press **Snooze** or any key. The wake-up call is deactivated and then repeated after 5 minutes.

Or:

Press nothing. The alarm call is deactivated after 60 seconds and then repeated after 5 minutes. After the fourth repetition, the alarm call is deactivated for 24 hours.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The baby monitor alarm to an external number is cancelled after approximately 90 seconds.

In baby monitor mode, incoming calls are only signalled on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and pressing the middle of the control key.

You can answer the baby monitor alarm using the **Two Way Talk** function. Deactivate/activate the speaker of the handset with this function.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.

Caution

Ensure the following points:

- ◆ The handset should be positioned 1 to 2 metres away from the baby. The microphone must be pointed towards the baby.
- ◆ Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger.
- ◆ The baby monitor is activated 20 seconds after switching on.

Please always check the functionality when you switch on:

- ◆ Test the sensitivity.
- ◆ Check the connection if you are forwarding the baby monitor alarm to an external number.
- ◆ Make sure that the answer machine at the target number is switched off.

Activating/deactivating and setting the baby monitor

 ▶  ▶ OK ▶  Baby Monitor ▶ OK

▶ **Activation:**  On/Off


▶ Setting the baby monitor:

- **Send alarm to:**  **Internal** (at least 2 handsets are registered)/ **External**

If **Internal** is selected:

▶ **Handset:** Press the **Change** display key. ▶  Select handset. ▶ OK

If **External** is selected:

 
▶ **Number:** Enter the number directly or select from the phonebook (press the display key ).

- **Two Way Talk:**  On/Off
- **Sensitivity:**  High/Low

▶ **Save**

The target number is displayed in idle status when the baby monitor alarm is activated. The baby monitor is deactivated using the **OFF** display key.

Cancelling the baby monitor alarm

Cancelling during a baby monitor alarm: Press .


Deactivating the baby monitor remotely

Prerequisites: The baby monitor alarm is forwarded to an external destination number. The recipient's phone supports tone dialling.

▶ Accept the baby monitor alarm and press the   keys.

The call is ended. The baby monitor is deactivated and the handset is in idle status.

Baby monitor acti-

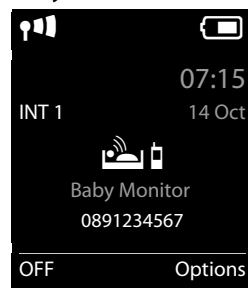

Display icons

Icons in the status bar

The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength (No Radiation off) 76% - 100% 51% - 75% 26% - 50% 1% - 25% Red: no connection to the base
	No Radiation activated: white, if Maximum Range is on; green, if Maximum Range is off
	Profile Silent activated (The ringtone is switched off)
	"Beep" ringtone activated
	Key lock

Icon	Meaning
	Battery charge status: White: charged over 66% White: charged between 34 and 66% White: charged between 11 and 33% Red: charged below 11% Flashes red: battery almost empty (approx. 5 minutes talktime remaining)
	Battery is charging (current charge status): 0% - 10% 11% - 33% 34% - 66% 67% - 100%



Menu icons



	SMS
	Call Lists
	Answer Machine

	Select Services
	Additional Features
	Settings









Display key icons

The following icons indicate the current function of the display keys according to the operating situation:

  




Icon	Action
	Last number redial
	Deleting text

Icon	Action
	Opening phonebook
	Copy number to the phonebook

Display icons for signalling of

 	Establishing a call (outgoing call)		Connection established		No connection established/ connection terminated
	External call		Internal call		Reminder call for anniversary
	Reminder call for appointment		Alarm call		

Other display icons

	Information		(Security) prompt		Please wait...
	Action complete (green)		Action failed (red)		

Menu tree

Opening the main menu: Press  whilst the telephone is in idle status.

Note

Not all functions described in this user guide are available in all countries or with all network providers.

 **Call Lists** (depending on base)

 **Answer Machine** (depending on base)

 **Select Services** (depending on base)

 **Additional Features**

Spot LED	→ page 32
Calendar	→ page 33
Baby Monitor	→ page 35
One Touch Call	→ page 20
Missed Alarms	→ page 34

 **Settings**

Date/Time	→ page 11	
Audio Settings	Handset Volume	→ page 21
	Earpiece Profiles	→ page 23
	Advisory Tones	→ page 25
	Silent Alert	→ page 24
	Ringtones (Handset)	→ page 24
Display	Screensaver	→ page 22
	Colour Schemes	→ page 22
	Backlight	→ page 23
Language	→ page 22	
Registration	Register Handset	→ page 10 (further submenus depending on base)
Telephony	Auto Answer	→ page 23
	Easy Acceptance	→ page 20
	LED Call Signal	→ page 23
	Area Codes	→ page 22 (further submenus depending on base)
System	Reset Handset	→ page 27 (further submenus depending on base)




 
bintec elmeg support

Questions? For rapid assistance, refer to this user guide or visit www.bintec-elmeg.com. The trade outlet will be happy to help with further questions relating to your elmeg D150R.

Questions and answers

If you have any queries about the use of your telephone, suggested solutions are available on our web-site at www.bintec-elmeg.com.

The table below also lists steps for troubleshooting.

<p>You are not sure whether your device is equipped with an integrated answer machine.</p> <ul style="list-style-type: none"> ▶ Open the answer machine menu:  ▶  ▶ OK <p>Your device is equipped with an integrated answer machine if the submenu Activation is available.</p>
<p>The display is blank.</p> <ol style="list-style-type: none"> 1. The handset is not activated. <ul style="list-style-type: none"> ▶ Hold down . 2. The battery is empty. <ul style="list-style-type: none"> ▶ Charge the battery or replace it (→ page 7). 3. The key and display lock is activated. <ul style="list-style-type: none"> ▶ Hold down the hash key .
<p>"No Base" flashes on the display.</p> <ol style="list-style-type: none"> 1. The handset is outside the range of the base. <ul style="list-style-type: none"> ▶ Move the handset closer to the base. 2. The base is not activated. <ul style="list-style-type: none"> ▶ Check the base power adapter. 3. The base's range is reduced because Maximum Range is deactivated. <ul style="list-style-type: none"> ▶ Activate Maximum Range (→ page 27) or reduce the distance between the handset and base.
<p>"Please register handset" or "Place handset in base" flashes on the display.</p> <p>The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than six DECT registrations).</p> <ul style="list-style-type: none"> ▶ Register the handset again (→ page 10).
<p>Your settings are not accepted.</p> <ul style="list-style-type: none"> ▶ Ensure that you have set the Profile Personal before you make changes to the device settings (→ page 32).
<p>The handset does not ring.</p> <ol style="list-style-type: none"> 1. The ringtone is deactivated. <ul style="list-style-type: none"> ▶ Activate ringtone (→ page 24). 2. Call forwarding is set. <ul style="list-style-type: none"> ▶ Deactivate call forwarding. 3. The phone does not ring if the caller has withheld his number. <ul style="list-style-type: none"> ▶ Activate the ringtone for unknown calls (→ page 25). 4. The phone does not ring during a specific period or for certain numbers. <ul style="list-style-type: none"> ▶ Check time control for external calls (→ page 25).
<p>The other party cannot hear you.</p> <p>The handset is "muted".</p> <ul style="list-style-type: none"> ▶ Activate the microphone again (→ page 21).

The caller's number is not displayed.

1. **Calling Line Identification (CLI)** is not approved for the caller.
 - ▶ The **caller** should ask the network provider to enable Calling Line Identification (CLI).
2. **Caller display (CLIP)** is not supported by the network provider or is not enabled for you.
 - ▶ Caller display (CLIP) is enabled by the network provider.
3. Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.
 - ▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.
 - ▶ Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, phone number identification, caller ID, etc. in the system's user guide or ask the system manufacturer.

You hear an error tone when keying an input.

Action has failed/invalid input.

- ▶ Repeat the process.
Read the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set to pulse dialling.

- ▶ Set your PABX to tone dialling.

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

We, bintec elmeg GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

www.bintec-elmeg.com



Disposal

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Appendix

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

Your handset is splash proof.

If it comes into contact with water, knock the water out of the microphone opening and remove any water on the handset with an absorbent cloth. Your handset is ready for use.

If your handset comes into contact with a larger amount of liquid take the following steps:

- 1** Disconnect the power supply.
- 2** Remove the batteries and leave the battery compartment open.
- 3** Allow the liquid to drain from the device.
- 4** Pat all parts dry.
- 5** Place the device in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6** Do not switch on the device again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology: 2 x AAA NiMH

Voltage: 1.2 V

Capacity: 800 mAh

Handset operating times/charging times

The operating time of your elmeg handset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	310 * 160 **
Talktime (hours)	14
Operating time for 1.5 hours of calls per day (hours) *	125 * 100 **
Charging time in charging cradle (hours)	7.5

* **No Radiation** deactivated, **without** display backlight in idle status

** **No Radiation** activated, **without** display backlight in idle status

General specifications

DECT

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex method	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 μ s
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity

Character charts

Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2 ^{acc}	a	b	c	2	ä	á	à	â	ã	ç
3 ^{acc}	d	e	f	3	ë	é	è	ê		
4 ^{acc}	g	h	i	4	ï	í	ì	î		
5 ^{acc}	j	k	l	5						
6 ^{acc}	m	n	o	6	ö	ñ	ó	ò	ô	õ
7 ^{acc}	p	q	r	s	7	ß				
8 ^{acc}	t	u	v	8	ü	ú	ù	û		
9 ^{acc}	w	x	y	z	9	ÿ	ý	æ	ø	å
0 ^{acc}	␣ ¹⁾	.	,	?	!	← ²⁾	0			

- 1) Space
- 2) Line break

Index

- A**
- Address book, see Phonebook
 - Advisory tones 25
 - Alarm clock 34
 - Anniversary 29
 - displaying missed 34
 - Anonymous calls off 25
 - Answer call key 3
 - Answer machine
 - answer machine list 17
 - Appointment
 - displaying missed 34
 - Area code
 - setting own area code 22
 - Assigning number key 26
 - Authorisation 41
 - Auto Answer 23
 - simple 20
- B**
- Baby monitor 35
 - Backlight, display 23
 - Base
 - setting up 6
 - Base station
 - changing the settings 22
 - Battery
 - charging 8
 - charging status 37
 - display 3
 - icon 3
 - inserting 7
 - Birthday, see Anniversary
 - Broken display 5
- C**
- Call
 - accepting 20
 - accepting automatically 23
 - external 19
 - internal 28
 - transferring (connecting) 28
 - transferring internally (connecting) 28
 - Call lists 31
 - deleting an entry 31
 - Call protection 25
 - Call signal, visual 23
 - Call waiting
 - external during an internal call 28
 - internal during an external call 28
 - Calling
 - external 19
 - internal 28
 - Care 42
 - Care of the device 42
 - Caring for your telephone 40
 - Changing
 - display language 9
 - Changing the phone settings 22
 - Changing the settings 22
 - Character charts 44
 - Charge status indicator 3
 - Charge status of the batteries 37
 - Charging cradle (handset)
 - connecting 6
 - setting up 6
 - Charging time of handset 43
 - Colour scheme 22
 - Connecting the headset 8
 - Consultation call
 - internal 28
 - Contact with liquid 42
 - Contents of the package 6
 - Control key 3, 15
 - Correcting incorrect entries 18
 - Correction of incorrect entries 18
 - Customer Care 40
- D**
- Deactivating
 - baby monitor 36
 - Default setting 27
 - Dialling
 - from the call list 19
 - using speed dial 26
 - using the redial list 19
 - with directory 20
 - Directory
 - saving entry 29
 - Display
 - backlight 23
 - broken 5
 - changing display language 9
 - colour scheme 22

- Display
 - missed appointments/anniversaries... 34
 - network mailbox message 17
 - phonebook memory..... 30
 - screensaver 22
 - setting..... 22
 - setting the backlight..... 23
- Display icons 37
- Display keys 3, 16
 - assigning 26
 - icons 38
- Disposal 42
- E**
- Earpiece profile..... 23
- Earpiece volume..... 21
- ECO DECT..... 27
- Emergency numbers
 - not possible..... 5
- End call key 3
- End call/End key..... 19
- Ending a conference call 28
- Entering special characters 18
- Entering special letters 18
- Entering text 18
- Entering umlauts 18
- External call
 - transferring internally (connecting) ... 28
- External calls
 - time control for ringtone 25
- F**
- Factory settings 27
- Field strength 37
- G**
- Getting started 6
- H**
- Handset
 - advisory tones 25
 - changing the settings..... 22
 - colour scheme 22
 - connecting the charging cradle..... 6
 - display backlight 23
 - display language 9, 22
 - earpiece volume 21
 - idle status..... 17
 - list 15
 - muting 21
 - registering 10
- Handset
 - restoring to default setting 27
 - screensaver 22
 - setting..... 22
 - setting up..... 7
 - speaker volume 21
 - switching on/off..... 15
 - transferring a call 28
 - use as a baby monitor..... 35
 - using multiple..... 28
- Handsfree mode..... 20
- Handsfree volume 21
- Hash key 3
- Headset socket 8
- Hearing
 - prevent loss of 5
- Hearing aids..... 5
- Help 40
- I**
- Icon
 - alarm clock 34
- Icons
 - displaying new messages 17
 - on display keys..... 38
 - status bar 37
- Idle status
 - returning to..... 17
- Incoming message list (SMS)..... 17
- Incoming SMS message list..... 17
- Internal
 - making calls 28
- Internal call 28
 - call waiting 28
- Internal consultation call 28
- K**
- Key
 - assigning to a function or number 26
 - Profile key 3
- Key 1 (fast access)..... 3
- Keys
 - Answer call key..... 3
 - control key..... 3, 15
 - display keys..... 3, 16
 - End call key 3
 - End call/End key..... 19
 - fast access 3
 - Hash key..... 3
 - Message key 3

- Keys
 - On/off key 3
 - profiles 32
 - Recall key 3
 - side key 16
 - Star key 3
- L**
- Language
 - display 9
- LED light 3, 32
- Liquid 42
- List
 - accepted calls 31
 - answer machine 17
 - call lists 31
 - handsets 15
 - incoming SMS message list 17
 - missed calls 31
 - outgoing calls 31
- List entry 31
- Locking/unlocking the keypad 15
- Loss of hearing 5
- Lower/upper case 18
- M**
- Making calls
 - accepting a call 20
 - external 19
 - internal 28
- Managing the calendar 33
- Marked characters 18
- Medical equipment 5
- Melody
 - ringtone for internal/external calls 24
- Memory in the phonebook 30
- Menu
 - opening 15
 - tree 39
- Message key 3
- Message lists 17
 - opening 17
- Microphone 3
- Missed anniversaries/appointments 34
- Missed call 31
- Muting the handset 21
- N**
- Number
 - copying to the phonebook 31
- Numbers
 - entering 18
- O**
- On/off key 3
- One touch call 20
- Operating time of handset 43
- Order in the phonebook 30
- P**
- Phone
 - restoring to default setting 27
 - setting 22
- Phonebook 29
 - copying number from text 31
 - opening 15
 - order of entries 30
 - sending entry/list to handset 30
 - sending to handset 30
- Power adapter 5
- Profile key 3, 32
- Profiles 32
- Protection against unwanted calls 25
- Protection from anonymous callers 25
- Q**
- Questions and answers 40
- R**
- Range 6
 - reducing 27
- Recall key 3
- Redial list 19
- Reducing radiation 27
- Reducing transmission power 27
- Registering (handset) 10
- Restoring to default setting 27
- Restoring to factory settings 27
- Ringtone
 - changing 24
 - melody for internal/external calls 24
 - silencing for anonymous calls 25
 - time control for external calls 25
- Ringtones 24

- S**
- Safety precautions 5
 - Saving a number in the directory 29
 - Screensaver 22
 - Searching
 - in directory 30
 - Selecting an entry from the phonebook . 30
 - Sending
 - phonebook entry to handset 30
 - Service 40
 - Setting an appointment 33
 - Setting options
 - phone 22
 - Setting the date 11, 39
 - Setting the display language 22
 - Setting the time 11, 39
 - Setting up
 - handset 7
 - Side key 16
 - Signal tone, see Advisory tones
 - Silent alert 24
 - Simple Auto Answer 20
 - SMS
 - incoming message list 17
 - Snooze mode (alarm) 35
 - Sound profiles 32
 - Sound, see Ringtone
 - Speaker 20
 - Speed dial 26
 - Star key 3
 - Status bar 3
 - icons 37
 - Switching microphone (handset) on/off . 21
- T**
- Technical data 43
 - Telephone
 - operating 15
 - Three-way conference call
 - ending 28
 - Time control
 - ringtone for external calls 25
 - Torch function 32
 - Transferring an external call internally . . 28
 - Troubleshooting 40
 - general 40
- U**
- Upper/lower case 18
- V**
- Viewing network mailbox message 17
 - VIP ringtone 29
 - Visual call signal 3, 23
 - Volume
 - handset handsfree/earpiece volume . . 21
- W**
- Warning tone, see Advisory tones

Issued by

bintec elmeg GmbH
a Teldat Group Company
Südwestpark 94, D-90449 Nürnberg

© bintec elmeg GmbH

Subject to availability
All rights reserved. Rights of modifications reserved.

www.bintec-elmeg.com