



## User Guide elmeg D141

Copyright© Version 1.1, 2015 bintec elmeg GmbH

## Legal Notice

### Aim and purpose

This document is part of the user manual for the installation and configuration of bintec elmeg devices. For the latest information and notes on the current software release, please also read our release notes, particularly if you are updating your software to a higher release version. You will find the latest release notes under [www.bintec-elmeg.com](http://www.bintec-elmeg.com).

### Liability

This manual has been put together with the greatest possible care. However, the information contained in this manual is not a guarantee of the properties of your product. bintec elmeg GmbH is only liable within the terms of its conditions of sale and supply and accepts no liability for technical inaccuracies and/or omissions.

The information in this manual can be changed without notice. You will find additional information and also release notes for bintec elmeg devices under [www.bintec-elmeg.com](http://www.bintec-elmeg.com).

bintec elmeg devices make WAN connections as a possible function of the system configuration. You must monitor the product in order to avoid unwanted charges. bintec elmeg GmbH accepts no responsibility for data loss, unwanted connection costs and damage caused by unintended operation of the product.

### Trademarks

bintectrademarks and the bintec logo, artem trademarks and the artem logo, elmeg trademarks and the elmeg logo are registered trademarks of bintec elmeg GmbH.

Company and product names mentioned are usually trademarks of the companies or manufacturers concerned.

### Copyright

All rights reserved. No part of this manual may be reproduced or further processed in any way without the written consent of bintec elmeg GmbH. The documentation may not be processed and, in particular, translated without the consent of bintec elmeg GmbH.

You will find information on guidelines and standards in the declarations of conformity under [www.bintec-elmeg.com](http://www.bintec-elmeg.com).

### How to reach bintec elmeg GmbH

bintec elmeg GmbH  
Südwestpark 94, D-90449 Nürnberg, Deutschland,  
Telefon: +4991196730, Fax: +499116880725  
Internet: [www.bintec-elmeg.com](http://www.bintec-elmeg.com)

---

## **Functional differences in operation at a bintec-elmeg system**

Due to adaptations of their system software, our IP terminals and IP DECT systems can be easily put into operation and managed when connected to a bintec-elmeg system. The most important functions are set up centrally in the configuration interface of the system and are automatically transferred to the connected devices. This eliminates the need to call up the configuration interface of each device individually.

The added convenience provided by the adapted software means that there may be additional differences in the range of functions and that not all functions are available as described in the respective manual.

## Contents

<b>Overview</b> .....	<b>4</b>
<b>Safety precautions</b> .....	<b>6</b>
<b>Getting started</b> .....	<b>7</b>
<b>Using the telephone</b> .....	<b>11</b>
Getting to know your telephone .....	11
Making calls .....	14
Network services .....	18
Message lists .....	22
Call lists (depends on the base station) .....	23
Network mailbox .....	25
Set fast access for the network mailbox .....	26
<b>Directories</b> .....	<b>27</b>
Local handset directory .....	27
Online directories .....	31
<b>Additional functions</b> .....	<b>33</b>
Sound profiles .....	33
Calendar .....	34
Alarm clock .....	36
Room monitoring .....	37
Protection against unwanted calls .....	38
Resource Directory .....	40
Bluetooth .....	41
Additional functions using the PC interface .....	43
E-mail notifications (depends on the base station) .....	45
Info Centre (depends on the base station) .....	47
<b>Setting the handset</b> .....	<b>48</b>
<b>Appendix</b> .....	<b>58</b>
Service (Customer Care) .....	58
Manufacturer's advice .....	59
Technical data .....	61
Display icons .....	62
Menu overview .....	64
<b>Index</b> .....	<b>68</b>



Not all functions described in the user guide are available in all countries or from all network providers.

# Overview

**1 Display****2 Status bar**

Icons display current settings and operating status of the telephone

**3 Display keys****4 Message key**

Access to the call and message lists;  
Flashes: new message or new call

**5 End call key, On/off key**

End call; cancel function;

Go back one menu level ▶ Press **briefly**

Return to idle status ▶ Press and **hold**

Switch the handset on/off (in idle status) ▶ Press and **hold**

**6 Hash key**

Lock/unlock the keypad (in idle status) ▶ Press and **hold**

Toggle between upper/lower case and digits (when inputting text) ▶ Press **briefly**

**7 Microphone****8 Recall key**

Consultation call (flash) ▶ Press **briefly**

Insert a dialling pause ▶ Press and **hold**

**9 USB connection socket**

For data exchange between the handset and PC

**10 Star key**

Switch from pulse dialling to tone dialling (for an existing connection) ▶ Press **briefly**

Open special characters table (when inputting text) ▶ Press **briefly**

**11 Headset connection**

(2.5 mm jack)

**12 Key 1**

Select network mailbox ▶ Press and **hold**

**13 Talk key / Handsfree key**

Accept call; dial number displayed; switch between receiver and handsfree mode

Open the redial list ▶ Press **briefly**





Start dialling ▶ Press and **hold**

**14 Profile key**


 



 



 
 
 

Switch between sound profiles

**15 Control key / menu key**

## Illustration in the user guide

	Warnings, which, if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.

## Keys




 





 or 	Talk key	 or 	Handsfree key
	End call key		Number / letter keys
 / 	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		Profile key
<b>OK, Back, Select, Change, Save, ...</b>		Display keys	

## Procedures

**Example:** Switching Auto answer on/off

Illustration in the user guide:

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change**  = on)

Step	Follow this procedure
▶ 	When in idle status press the <b>centre</b> of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ <b>OK</b>	Select <b>OK</b> to confirm. The submenu <b>Settings</b> opens.
▶ 	Select the <b>Telephony</b> entry using the control key  .
▶ <b>OK</b>	Select <b>OK</b> to confirm. The submenu <b>Telephony</b> opens.
▶ <b>Auto Answer</b>	The function to switch Auto answer on/off appears as the first menu item.
▶ <b>Change</b>	Select <b>Change</b> to activate or deactivate. Function is activated  / deactivated  .

## Safety precautions

Read the safety precautions and the user guide before use.



**Comprehensive user guides for all telephones and telephone systems as well as for accessories can be found online at [www.bintec-elmeg.com](http://www.bintec-elmeg.com) in the Support category. We thereby help to save paper while providing fast access to the complete up-to-date documentation at any time.**



Use only the power adapter indicated on the device.



Use only **rechargeable batteries** that correspond to the **specification** (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your bintec elmeg product see "Specifications").



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your handset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



If you give your handset to a third party, make sure you also give them the user guide.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!

## Getting started

### Contents of the package

- One handset,
- One battery cover,
- One battery,
- One charging cradle incl. power adapter,
- One belt clip,
- Safety precautions

### Setting up the charging cradle

The charging cradle is designed for use in enclosed, dry rooms within a temperature range of +5 °C to +45 °C.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.




Never expose the telephone to heat sources, direct sunlight or other electrical devices.  
Protect your telephone from moisture, dust, corrosive liquids and vapours.

### Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the mains unit into your power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

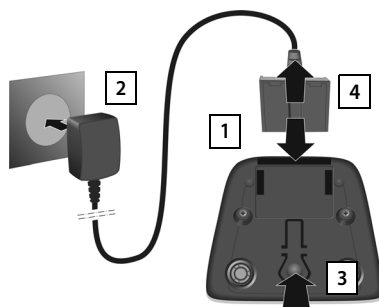




## Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**


### Inserting the battery



Only use the specified battery, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

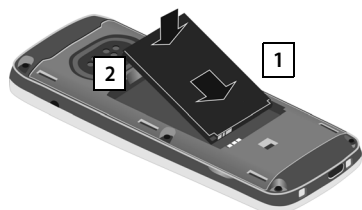


- ▶ Insert battery with the contact side pointing down **1**.
- ▶ Press the battery down until it clicks into place **2**.

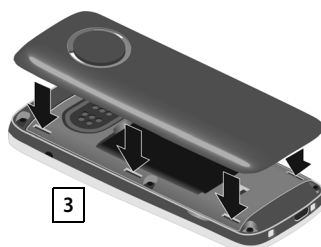


- ▶ Orientate the battery cover with the side tabs fitting into the slots on the inside of the casing **3**.
- ▶ Press the cover until it clicks into place.

### Re-opening the battery cover

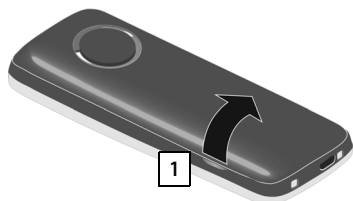


- ▶ Remove the belt clip (if attached).
- ▶ Place your fingernail in the notch underneath the battery cover and pull the battery cover up **1**.

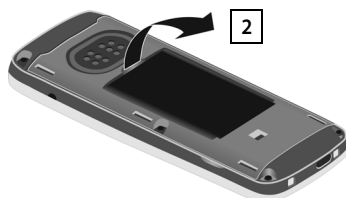


- ▶ To change the battery, place your fingernail in the recess in the housing and pull the battery up **2**.

### Charge the battery

 - ▶ Charge the battery fully prior to first use in the charging cradle or using a standard USB mains adapter.

The battery is fully charged when the power icon  disappears from the display.






The battery may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

## Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.

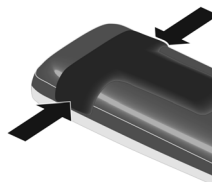

## Changing the display language

You can change the display language, if the telephone has been set to an incomprehensible language.

- ▶ Press the centre of the control key
- ▶ Press the keys **[9]** and **[5]** **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ To select a different language: ▶ Press the control key until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key



## Registering a handset

A handset can be registered to up to four base stations. The registration process depends on the base station.



Registration must be initiated on the base station **and** on the handset.

Both must be carried out **within 60 secs.**

### On the base station

 
- ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).

### On the handset

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ▶ ... use to select base station (if the handset is already registered to four base stations) ▶ **OK** ... an available base station is sought ▶ ... enter system-PIN (default setting: **0000**) ▶ **OK**


Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If not, repeat the procedure.

## Connecting the headset

- ▶ Connect the headset with 2.5 mm jack to the left side of the handset .


For information on recommended headsets, see the relevant product page at → [bintec-elmeg.com](http://bintec-elmeg.com).


The headset volume corresponds with the setting for the receiver volume (→ p. 51).

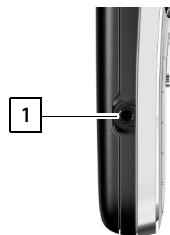

## Connecting the USB data cable

 For data exchange between the handset and PC:

- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset .

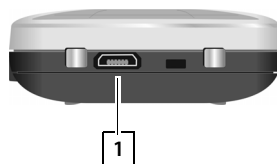

Connect the handset **directly** to the PC, **not** via a USB hub.

## Setting up the telephone for use

If you have registered the handset to a base station with a fixed line connection, you can now make calls using the fixed line network.

If the handset is registered to a VoIP base station, at least one VoIP connection must be set and assigned to the handset. If more than one connection is available, it is possible to set up send and receive connections for the handset.

Send connection: which connection is used for an outgoing call





Receive connection: which incoming calls are diverted to the handset

The settings for VoIP telephony and send and receive connections are made at the base station. For bintec elmeg IP phones there is a web configurator that can be used for making the configuration on a computer.



For some bintec elmeg IP phones, the VoIP configuration can also be made via the registered handsets. In that case the following functions are available at handset:

Setting up a VoIP connection:

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **VoIP Wizard**

Assigning a send/receive connection:

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Send Connections/Rec. Connections**

 
Further information, → user guide of the base station

# Using the telephone

## Getting to know your telephone

### Switch the handset on/off

Switch on: ▶ When the handset is switched off, press and **hold** the End call key 

Switch off: ▶ When the handset is in idle status, press and **hold** the End call key 

### Lock/unlock the keypad

The keypad lock prevents any accidental use of the telephone. If the handset is locked with a PIN (→ p. 52), you need this to unlock.

Switch on: ▶  Press and **hold**

Switch off: ▶ Press and **hold**  ▶ ... use  to enter the handset PIN (if other than 0000)

Keypad lock activated: the following symbol appears 





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

### Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

#### In idle status


Open the directory

Open the list of available online directories

Open the main menu

Open the list of available online directories  
(if available and configured)

 Press **briefly**

 Press and **hold**

 or 



#### In submenus, selection and entry fields

Confirm a function



## During a conversation

Open the directory



Open the list of available online directories



Press and **hold**

Mute the microphone



Open company directory (if available and configured)




or: Initiate an internal consultation call

Adjust the loudspeaker volume for receiver and handsfree mode



## Display keys

The display keys perform a range of functions depending on the operating situation.

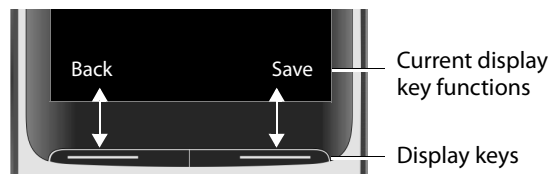

Display key icons → p. 130.

## Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.

### Selecting/confirming functions

Confirm selection using

**OK** or press the centre of the control key

One menu level back using

**Back**

Change to idle status

Press and **hold**

Switch function on/off using

**Change** on / off

Activate/deactivate option using

**Select** activated / not activated

### Main menu

In idle status: ▶ Press the **centre** of the control key ▶ ... use the control key to select a submenu ▶ **OK**

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.




The main menu functions are partially base-specific. The main menu may look different on your handset.

The example shows the menu of a handset from a elmeg DECT200M Multicell System.


Basic functions of the handset → p. 64

Example

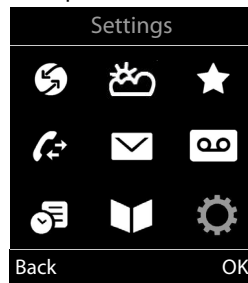

## Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**


or

▶ Press the End call key  **briefly**

## Returning to idle status

▶ Press and **hold** the End call key 

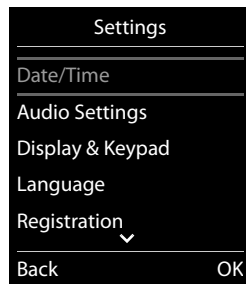

## Example





If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

## Entering text

 
 
 
### Input position


- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.



### Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

### Entering letters/characters

 Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 

When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**



The availability of special characters depends on the character set of the handset.

## Making calls



Information for Calling Line Identification: → p. 18

When the display backlight is off (→ p. 50) the display backlight is activated the first time that any key is pressed. **Digit keys** that are pressed appear in the display for pre-dialling, **other keys** have no further function.

▶ ... use to enter a number ▶ **Briefly** press the Talk key

or

▶ Press and **hold** the Talk key ▶ ... use to enter a number ... the number is dialled approximately 3.5 seconds after the last digit is entered



If several connections are available (fixed line network and/or VoIP), send and receive connections must be set for the handset (→ p. 10). If no fixed send connection is assigned, you can select the desired connection for each call.

Further information, → user guide of the base station.

## Dialling from the directory

▶ ... use to open the handset's local directory

or

▶ ... use to open the company directory (if available)

▶ ... use to select an entry ▶ press the Talk key ... the number is dialled

If multiple numbers are entered:

▶ ... use to select a number ▶ press the Talk key ... the number is dialled



For fast access (quick dial): Assign a number from the directory to the number or display keys (→ p. 54)

Select from a public directory → p. 31

## Dialling from the redial list



The redial list contains the 20 numbers last dialled with the handset.

▶ **Briefly** press the Talk key ... the redial list is opened ▶ ... use to select an entry ▶ Press the Talk key

If a name is displayed:

▶ **View** ... the number is displayed ▶ ... use to browse numbers if necessary ▶ ... when the desired number is reached press the Talk key

## Managing entries in the redial list

- ▶ Briefly press the Talk key  ... the redial list is opened ▶ ... use  to select an entry ▶ **Options** ... possible options:

Copy an entry to the directory: ▶  **Copy to Directory** ▶ **OK**


Copy the number to the display:

- ▶  **Display number** ▶ **OK** ▶ ... use **<C>** to edit or add numbers if necessary ... use  to save as a new entry in the directory

Delete the selected entry: ▶  **Delete entry** ▶ **OK**

Delete all entries: ▶  **Delete all** ▶ **OK**

Set automatic redial:






 
- ▶  **Automatic Redial** ... the dialled number is automatically dialled at fixed intervals (at least every 20 secs). The handsfree key flashes, "open listening" is activated.

The participant answers: ▶ Press the Talk key  ... the function is terminated






The participant does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.

## Dialling from the call list

The call lists (→ p. 23) contain the most recent accepted, outgoing and missed calls.


- ▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select a list ▶ **OK** ▶ ... use  to select an entry ▶ Press the Talk key 

Example

All calls	
  Frank 14/02/2014, 15:40	
 089563795 13/02/2014, 15:32	
  Susan Black 11/02/2014, 13:20	
View	Options










The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .


## One touch call

 
A predefined number is dialled by pressing any key.


Activate one touch call mode:

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **One Touch Call** ▶ **OK** ▶ ... use  to activate **Activation** ▶  **Call to** ▶ ... use  to enter the number ▶ **Save** ... the active one touch mode is shown in the idle display

Make a one touch call: ▶ Press any key ... the saved number is dialled


Cancel dialling: ▶ Press the End call key .

End one touch call: ▶ Press and **hold** the End call key .

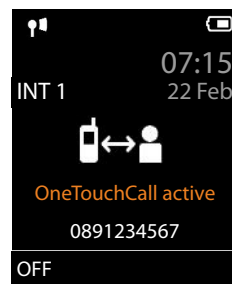





## Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key .

Accepting a call:

- Press the Talk key  or ► **Accept**
- if **Auto Answer** is activated (→ p. 51): ► Remove the handset from the charging cradle
- Accept a call on the Bluetooth headset → p. 41

Switch off ringtone: ► **Silence** ... the call can be accepted for as long as it is shown on the display

Reject a call: ► Press the End call key .

## Information about the caller



The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.



The caller's number will be transferred (→ p. 18).


 
## Accepting/rejecting call waiting

A call waiting tone indicates a call during an external call. The number or the name of the caller is displayed if the phone number is transferred.


- Reject a call: ► **Options** ►  **Reject waiting call** ► **OK**
- Accept a call: ► **Accept** ► ... speak to the new caller. The previous call is placed on hold.
- End the call, resume the on-hold call: ► Press the End call key .

## Call transfer

Connecting an external call to a VoIP connection with a second external participant (depending on the provider).

- Use the display key **Ext. Call** to establish an external consultation call ► ... use  to enter the number of the second participant ... the active call is placed on hold ... the second participant is called and picks up ► press the  key ... the call is transferred



The  key can be assigned on the base to other features.

→ user guide of the base station


---

## During a conversation



---

### Handsfree mode

Activate/deactivate handsfree mode during a call and when establishing a connection:

- ▶ Press the handsfree key 

Place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  ▶ ... Place the handset in the charging cradle ▶ ...  hold for a further 2 seconds

---

### Call volume

Applies to the current mode (handsfree, receiver or headset):

- ▶ Press  ▶ ... use  to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

---


### Muting the microphone

When the microphone is switched off, callers will no longer hear you.


Switch the microphone on/off during a call: ▶  Press.

## Network services

Network services depend on the network provider (service provider) and must be requested from that provider.



 If your telephone is connected to a PABX, network services may also be available from the PABX. Information is available from your PABX operator, where applicable.

Network services fall into two distinct groups:

- Network services that are activated when in idle status for the following call or all subsequent calls (for example, "calling anonymously"). These are activated/deactivated via the  **Select Services** menu.
- Network services that are activated during an external call, (for example, "consultation call", "swapping between two callers" and "setting up conference calls"). These are made available during an external call either as an option or by using a display key (e.g. **Ext. Call, Conference**).

You will find a description of the features on your network provider's website or at one of their store branches.

If you require assistance, please contact your network provider.

 To activate/deactivate the features, a code is sent to the telephone network.  
 ▶ After a confirmation tone from the telephone network, press .  
 It is not possible to reprogram the network services.

## Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and may be displayed on the recipient's display (CLIP = CLI presentation). If the caller's number is withheld, it will not be displayed to the recipient. The call is made anonymously (CLIR = CLI Restriction).

### Caller display for incoming calls

#### Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.






#### No Calling Line Identification

Instead of name and number, the following is displayed:

- **External:** No number has been transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

## Calling Line Identification for outgoing calls

### Deactivating Calling Line Identification for the next call

- ▶  ▶ ... use  to select  **Select Services** ▶ **OK** ▶  **Next Call Anonym.** ▶ **OK** ▶ ... use  to enter the number ▶ **Dial** ... the connection is established without Calling Line Identification

### Transferring the name from the online directory

It is also possible to display the name of the caller as stored in the online directory instead of the number.



The provider of the online directory supports this function.

The "Display caller name" function has been activated via the Web configurator. The caller has authorised Calling Line Identification and has not withheld the function.


The telephone is connected to the Internet.

The caller's number is not saved in the handset's local directory.

## Call waiting during an external call

During an **external** call, a call waiting tone indicates another external caller. If the number is being transferred, you will see the number or the name of the caller on the display.


Reject waiting caller:

- ▶ **Options** ▶  **Reject waiting call** ▶ **OK** ... the waiting caller hears the busy tone






Accept the waiting call:

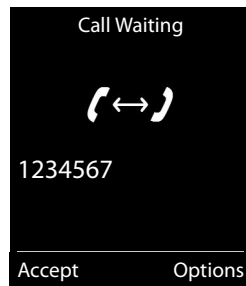- ▶ **Accept**

Once you have accepted the waiting call, you can switch between the two callers (**Call Swap**) or speak to both at the same time (**Conference**).



### Activating/deactivating call waiting

- ▶  ▶ ... use  to select  **Select Services** ▶  **Call Waiting** ▶ **OK** ... then
  - Switch on/off: ▶ **Status** : ... use  to select **On** or **Off**
  - Activate: ▶ **Send**

Call waiting is activated or deactivated for all registered handsets.



## Call divert

When diverting a call, the call is forwarded to another connection.



- ▶  ▶ ... use  to select  **Select Services** ▶ OK ▶  **Call Divert** ▶ OK ▶ ... then

Switch on/off: ▶ **Status** : ... use  to select **On** or **Off**

Enter the number for call divert:

- ▶  **Phone Number** ▶ ... use  to enter the number

Set the time for call divert:

- ▶  **When** ▶ ... use  to select the time for call divert

**All Calls:** Calls are diverted immediately

**No Answer:** Calls are diverted if no one accepts the call within several rings.

**When Busy:** Calls are diverted if the line is busy.

Activate: ▶ **Send**




Any call that has been diverted is entered in the call lists.

Depending on base: If several connections are available, a call divert can be set up for every connection.

## Calls with three participants

### Consultation calls

Make another external call during an external call. The first call is placed on hold.

- ▶ **Ext. Call** ▶ ... use  to enter the number of the second participant ... the active call is placed on hold and the second participant is called


If the second participant does not answer: ▶ **End**

### Ending a consultation call

- ▶ **Options** ▶  **End active call** ▶ OK ... the connection to the first caller is reactivated



or

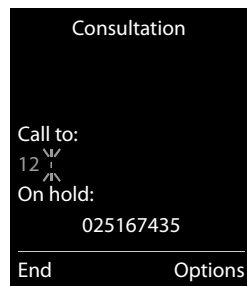- ▶ Press the End call key  ... a recall to the first participant is initiated



## Call swapping

Switching between two calls. The other call is placed on hold.


- ▶ During an external call, dial the number of a second participant (consultation call) or accept a waiting caller ... the display shows the numbers and/or names of both call participants, the current participant is marked with .
- ▶ Use the control key  to switch back and forth between participants

## Ending a currently active call

- ▶ **Options** ▶  **End active call** ▶ **OK** ... the connection to the other caller is reactivated

or

- ▶ Press the End call key  ... a recall to the first participant is initiated

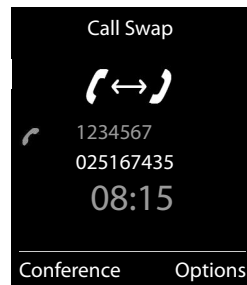

## Conference

Speaking to both participants at the same time.

- ▶ During an external call, dial the number of a second participant (consultation call) or accept a waiting caller ... then


Initiate conference call:


- ▶ **Conf.** ... all callers can hear one another and hold a conversation with one another

Return to call swapping:

- ▶ **End Conf.** ... You will be reconnected to the participant with whom the conference call was initiated


End call with both participants:

- ▶ Press the End call key 




Each of the participants can end their participation in the conference call by pressing the End call key  or hanging up.

## Message lists


Notifications about missed calls, messages on the network mailbox and missed alarms are saved in the messages list.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated → p. 23). Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:



-  on the network mailbox (→ p. 25)
-  in the missed calls list (→ p. 23)
-  in the missed alarms list (→ p. 35)

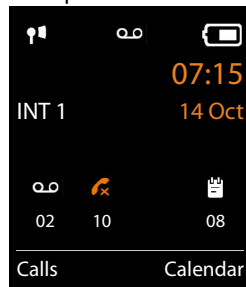Example




The icon for the network mailbox is always displayed, provided the number is saved in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Message lists that contain messages are displayed, **Mailbox:** is always displayed
  - An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.
  - An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.
- ▶ ... use  to select a list ▶ **OK** ... the calls or messages are listed
  - Network mailbox: The network mailbox number is dialled (→ p. 25).

Example

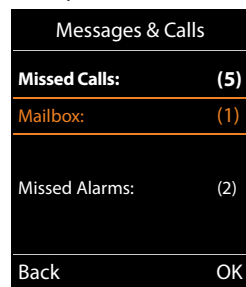


 




The messages list also contains an entry for each of the handset's answer machines, if available on the base.


## Activating/deactivating Message key flashing

Receipt of new messages is displayed by a flashing Message key on the handset. This type of alert can be activated/deactivated for each message type.

 
This setting is entered on the base for each registered handset. You can change this setting for your handset:

In idle status:



- ▶  ▶ Press keys   0  5  ... the number 9 appears in the display ▶ ... use  to select the message type:

Messages on the network mailbox ▶  

Missed calls ▶  

... the number 9 followed by the entry (e.g. 975) is displayed, the current setting for the selected message type flashes in the entry field (e.g. 0) ▶ ... use  to set the action for the arrival of new messages:

 
The Message key flashes ▶  

The Message key does not flash ▶  

- ▶ ... confirm selected setting with OK

or

- ▶ ... return to idle display without making changes: ▶ **Back**

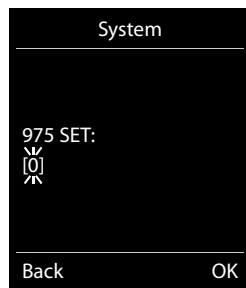







## Call lists (depends on the base station)




The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.

### List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
  -  **Missed calls,**
  -  **Accepted calls,**
  -  **Outgoing calls**
- Caller's number. If the number is stored in the directory, the name and number type ( **Phone (Home)**,  **Phone (Office)**,  **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example on a bintec elmeg base station

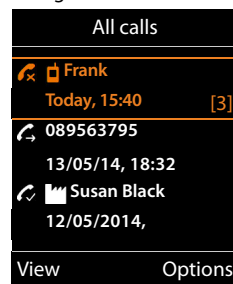




If the handset is registered to any GAP-compatible base, the call list only contains missed calls.



## Opening the call list

Via the display key: ▶ **Calls** ▶ ... use  to select the list ▶ **OK**

Via the menu: ▶  ▶ ... use  to select **Call Lists** ▶ **OK** ▶ ... use  to select the list ▶ **OK**

Via the Message key (missed calls):


▶ Press the Message key  ▶  **Missed Calls:** ▶ **OK**

## Calling back a caller from the call list

▶  ▶ ... use  to select **Call Lists** ▶ **OK** ▶ ... use  to select a list ▶ **OK** ▶ ... use  to select entry ▶ press the Talk key 



## Additional options

▶  ▶ ... use  to select **Call Lists** ▶ **OK** ▶ ... use  to select list ▶ **OK** ... possible options:

View an entry: ▶ ... use  to select entry ▶ **View**

Copy the number to the directory:

▶ ... use  to select entry ▶ **Options** ▶  **Copy to Directory**

Delete an entry: ▶ ... use  to select entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete list: ▶ **Options** ▶  **Delete List** ▶ **OK**

## Network mailbox



The PABX/provider will provide a network mailbox.  
 The network mailboxes are set up and activated on the base.  
 In order to record all calls, a network mailbox should be set up for each telephone connection.

Each network mailbox accepts incoming calls made via the corresponding line.



The network mailbox is automatically called via the corresponding connection. An automatic area code specific to the phone is **not** prefixed.

The network mailbox messages can be played back using the phone's keypad (digit codes). For VoIP, you need to use the settings of the base station to define how the digit codes are to be converted to DTMF signals and transmitted (depends on the provider).

## Activating/deactivating the network mailbox, entering a number



The telephone system allows the management of the network mailbox via the handsets.

On the handset, you can manage the network mailboxes that are assigned to one of its receive connections.

▶ ▶ ... use to select **Answer Machine** ▶ **OK** ▶ **Network Mailbox** ▶ **OK** ▶ ... use to select connection if applicable ▶ **OK** ... then

Activate/deactivate network MB:


▶ **Status** ... use to select **On** or **Off**

Enter number: ▶ **Network Mailbox** ▶ ... use to enter or amend the network mailbox number



With some VoIP providers, the phone number has already been downloaded together with the general VoIP provider data and saved to the base station.

Save settings: ▶ **Save**





## Playing back messages


▶ Press and hold 

or

 
▶ Press the Message key  ▶ ... use  to select network mailbox ▶ OK

or


▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶ **Play Messages** ▶ OK ▶ ... use  to select network mailbox ▶ OK







 Listen to announcement out loud: ▶ Press the handsfree key 


## Set fast access for the network mailbox

It is possible to call a network mailbox directly by pressing key .

### Assigning key 1, changing assignment

Settings for the fast access are device-specific. A different answer machine can be assigned to key  on each registered handset. The answer machine for the handset's receive connections are offered, e.g. **Mailbox: IP1, Answer Machine 1**.

▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Set Key 1** ▶ OK ▶ ... use  to select answer machine ▶ **Select** ( = selected)

Return to idle status: ▶ Press and hold the End call key 

If no number has yet been saved for the network mailbox:





▶ ... use  to select the line **Network Mailbox** ▶ ... use  to enter the number of the network mailbox ▶ **Save** ▶ Press and hold the End call key  (idle status)

## Directories

### Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets (→ p. 29).




#### Opening the directory

- ▶  Press **briefly** in idle status
- or
- ▶  ▶ ... use  to select  **Directory** ▶ **OK**


### Directory entries

- Number of entries: up to 500
- Information: First name and surname, up to three telephone numbers, e-mail address, anniversary with alert, VIP ringtone with VIP icon, CLIP-picture
- Length of the entries: Numbers: max. 32 digits  
First name, surname: max. 16 characters  
E-mail address: max. 64 characters



 
#### Creating an entry

- ▶  ▶  <New Entry> ▶ **OK** ▶ ... use  to switch between the entry fields and enter data for an entry:



Names/numbers:

- ▶ ... use  to enter first names and/or surnames, at least one number (personal, office, or mobile) and an e-mail address, if applicable


**Anniversary:**

- ▶ ... use  to activate/deactivate **Anniversary** ▶ ... use  to enter date and time ▶ ... use  to select type of alert (**Visual only** or a ringtone)

**Caller Melody (VIP):**


- ▶ ... use  to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the  icon.

**Caller Picture:**

- ▶ ... use  to select a picture that is to be displayed during a call from the participant (Resource Directory → p. 40).

Save entry: ▶ **Save**

Example

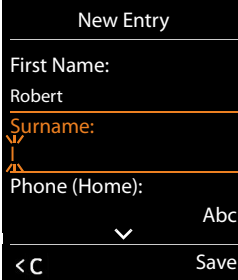


The entry is only valid if it contains at least one number.



For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.

## Searching for/selecting a directory entry

▶ ▶ ... use to browse searched names

or

▶ ▶ ... use to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use to continue browsing to the desired entry, if needed

Scroll through directory: ▶ ▶ Press and **hold**

## Displaying/changing an entry

▶ ▶ ... use to select entry ▶ **View** ▶ ... use to select the field to be changed ▶ **Edit**

or

▶ ▶ ... use to select an entry ▶ **Options** ▶ **Edit entry** ▶ **OK**

## Deleting entries

Delete the **selected** entry: ▶ ▶ ... use to select an entry ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete **all** entries: ▶ ▶ **Options** ▶ **Delete all** ▶ **OK** ▶ **Yes**

## Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶ ▶ **Options** ▶ **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

## Displaying the number of entries available in the directory

▶ ▶ **Options** ▶ **Available Memory** ▶ **OK**

## Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- From a public online directory or classified directory
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or **Options** ▶  **Copy to Directory** ▶ **OK** ... possible options:

Create a new entry:

▶ **<New Entry>** ▶ **OK** ▶ ... use  to select number type ▶ **OK** ▶ complete entry ▶ **Save**

Add number to an existing entry:

▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select number type ▶ **OK** ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with **Yes/No** ▶ **Save**

## Copying an entry/directory



The sending and receiving handset must both be registered to the same base station. The other handset and the base station are able to send and receive directory entries. The base station is **not** an elmeg DECT200M Multicell System (transfer can only be carried out by the administrator).



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

### Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the receiving handset, a second entry is created with the same name.






### The receiving handset does not support vCards:

A separate entry is created and sent for each number.

### The sending handset does not support vCards:





A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

## Copying individual entries

▶  ▶ ... use  to select the desired entry ▶ **Options** ▶  **Copy Entry** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entry is copied

Copy the next entry after successful transfer: ▶ **Yes** or **No**

## Copying the entire directory

- ▶  ▶ **Options** ▶  **Copy All** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entries are copied one after the other






## Copying a vCard using Bluetooth

Copy directory entries in vCard format, e.g. to exchange entries with a mobile phone.




Bluetooth mode is activated (→ p. 41)

The other handset/mobile phone supports Bluetooth.

- ▶  ▶ ... use  to select an entry if needed ▶ **Options** ▶  **Copy Entry / Copy All** ▶  **vCard via Bluetooth** ... the **Known Devices** list is displayed (→ p. 42) ▶ ... use  to select device ▶ **OK**

## Receiving a vCard using Bluetooth

If a device in the **Known Devices** list (→ p. 42) sends a vCard to your handset, a directory entry is automatically created and a message is shown in the display.

If the sending device is not in the list: ▶ ... use  to enter the PIN of the **sending** Bluetooth device ▶ **OK** ... the copied vCard is available as a directory entry

## Online directories

In addition to the local directory, you can use provider-specific public online directories, e.g. online directory and Yellow Pages or a company directory.



The online directories are set up and activated on the base.

### Exclusion of liability

bintec elmeg GmbH assumes no guarantee or liability for the availability of this service. The service may be discontinued at any time.

## Opening an online directory/Yellow Pages

▶ Press and hold ... the list of online directories is displayed with provider-specific names ▶ ... use to select the online directory or Yellow Pages from the list ▶ **OK**

or

Open the online directory: ▶ Dial **1#91** ▶ press the Talk key

Open the Yellow Pages: ▶ Dial **2#91** ▶ press the Talk key



Calls to the online directory are always free of charge.

## Searching for an entry

▶ Press and hold ▶ ... use to select a directory/Yellow Pages ▶ **OK** ▶ ... use to enter search criteria ▶ ... use to switch between the entry fields ▶ **Search**

**Searching for a telephone number:** ▶ Enter name and town/city

Name/category: ▶ ... use to enter the name, part of a name or the category (max. 30 characters)

Town/city: The names of towns/cities most recently entered are displayed (maximum 5).

▶ ... use to enter the name of the town/city in which the participant you are searching for lives (max. 30 characters)

▶ or select one of the displayed town/city names using

Start search: ▶ **Search** ... the search will then be started.

Town/city details unclear: ... possible town/city names are displayed ▶ ... use to select a town/city name ▶ **OK**

**Searching for a name (reverse search):** ▶ Dialling the number

Number: ▶ ... use to enter the number (max. 30 characters).

Start search: ▶ **Search** ... the search will then be started.



The selected online directory supports the number search.



**No entries found to match the search criteria given:**


- Start a new search: ▶ **New**
- Change search criteria: ▶ **Change**

Too many entries found:

- Start a refined search: ▶ **Refine**
- The number of hits appears in the display (depends on the provider).  
Display hit list: ▶ **View**







**Start a refined search**

The refined search limits the number of hits returned by a previous search using additional search criteria (first name and/or street).

- ▶ **Refine** or ▶ **Options** ▶  **Refine Search** ▶ **OK** ... the search criteria are transferred from the previous search and are entered into the corresponding fields ▶ ... edit or add search criteria, e.g. enter first name or street ▶ **Search**

**Search result (hit list)**

The first entry found is displayed. The consecutive number of the entry displayed and the hit number is visible at the top right (e.g. 1/50).

- Scroll through the list: ▶ 
- Display the full entry: ▶ **View** ... all entry information is displayed in full ▶ ... use  to scroll through the entry
- Refine search criteria and restrict hit list: ▶ **Options** ▶  **Refine Search** ▶ **OK** (→ p. 32)
- Start a new search: ▶ **Options** ▶  **New Search** ▶ **OK**
- Copy an entry to the local directory: ▶ **Options** ▶  **Copy to Directory** ▶ **OK** ▶ ... use  <New Entry> or select an existing entry ▶ **OK** ▶ **Save** ... the entry is saved, the complete name is transferred to the **Surname** field of the local directory

Example


Online Directory	1/50
Sand, Marie Elisabe ...	
0049123456789	
Parkstraße 11	
Berlin 12345	
View	Options

**Calling participants**

- ▶  Select entry ▶ Press the Talk key 

If the entry only contains one phone number, this is the one that is dialled.


A list of numbers appears if there is more than one number.

- ▶  Select number ▶ **Dial**

## Additional functions


### Sound profiles

The telephone has 3 sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**

- ▶ Use  to switch between the profiles ... the profile is changed straight away without a prompt

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Silent alert (→ p. 53)		On	Same as <b>Profile Personal</b>	Off
Ringtone (→ p. 52)		On	Off	On
Ringtone volume (→ p. 52)	Internal	5	Off	5
	External	5	Off	5
Handset volume (→ p. 51)	Receiver	5	3	3
	Handsfree mode	5	3	3
Advisory tones (→ p. 53)	Key click	Yes	No	Yes
	Confirmation tone	Yes	No	Yes
	Battery tone	Yes	Yes	Yes

Activate alert tone for an incoming call for **Profile Silent**: ▶ after switching to **Profile Silent** press the display key **Beep** ... the following icon appears in the status bar 



Changes to the settings listed in the table:

- apply in the **Loud** and **Silent** profiles as long as the profile is not changed.
- are permanently saved in the **Profile Personal** for this profile.

The set profile remains set when switching the handset off and back on.

## Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

Assign calendar call-up to a display key → p. 55.

July 2014						
Mo	Tue	We	Th	Fri	Sat	Su
	01	02	03	04	05	06
07	08	09	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31			
Back						OK

## Saving appointments to the calendar



Date and time have been set.

▶ ▶ ... use to select **Organizer** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select desired day ▶ OK ... then

Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**

Enter date: ▶ **Date** ... the selected day has been pre-set ▶ ... use to enter new date

Enter time: ▶ **Time** ▶ ... use to enter hours and minutes of the appointment

Set name: ▶ **Text** ▶ ... use to enter a description of the appointment (e.g. evening meal, meeting)

Set alarm tone: ▶ **Signal** ▶ ... use to select the melody of the reminder alarm or deactivate the acoustic signal

Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ OK ▶ ... Then enter information for the appointment.

## Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

- Acknowledge and stop the reminder: ▶ Press the display key **OFF**




During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

## Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are saved. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

### Opening the list

- ▶ Press the Message key  ▶  **Missed Alarms:** ▶ **OK** ▶ ... use  to scroll through the list if needed





or

- ▶  ▶ ... use  to select  **Organizer** ▶ **OK** ▶  **Missed Alarms** ▶ **OK**

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

- Delete an appointment/anniversary: ▶ **Delete**

## Displaying/changing/deleting saved appointments

- ▶  ▶ ... use  to select  **Organizer** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶ ... use  to select day ▶ **OK** ... the appointment list is displayed ▶ ... use  to select appointment ... possible options:

Display appointment details:

- ▶ **View** ... The appointment settings are displayed

Change appointment:

- ▶ **View** ▶ **Edit**

or ▶ **Options** ▶  **Edit entry** ▶ **OK**


Activate/deactivate appointment:

- ▶ **Options** ▶  **Activate/Deactivate** ▶ **OK**

Delete appointment:

- ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete all appointments for a day:

- ▶ **Options** ▶  **Delete all Appoints.** ▶ **OK** ▶ **Yes**

## Alarm clock



Date and time have been set.

### Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
  - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
  - Set the wake-up time: ▶ **Time** ▶ ... use to enter hours and minutes
  - Set days: ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
  - Set the volume: ▶ **Volume** ▶ ... use to set volume in 5 levels or select **crescendo** (increasing volume)
  - Set alarm: ▶ **Melody** ▶ ... use to select a ringtone for the alarm
  - Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

### Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

### Switching off /repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

## Room monitoring

When the room monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the room being monitored on or off.

In room monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the ability to press the centre of the control key.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated. The room monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the area of the room being monitored. The microphone must point towards the area of the room being monitored.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The room monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

### Activating and setting the room monitor

▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Room Monitor** ▶ OK ... then

Switch on/off:

▶ **Activation:** ... use to select **On** or **Off**

Enter destination:

▶ **Send alarm to** ▶ ... use to select **External** or **Internal**

**External:** ▶ **Number** ▶ ... use to enter the number or select a number from the directory: ▶

**Internal:** ▶ **Handset** ▶ **Change** ▶ ... use to select the handset ▶ OK

Activate/deactivate two-way talk:


▶ **Two Way Talk** ▶ ... use to select **On** or **Off**

Set microphone sensitivity:

▶ **Sensitivity** ▶ ... use to select **High** or **Low**


Save settings: ▶ **Save**

Room Monitor activated

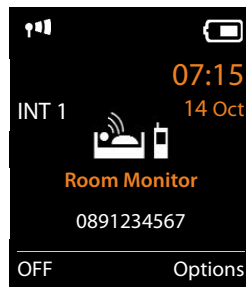

The destination number is displayed in idle display when the room monitor is activated.

## Switching off/interrupting the alarm

- Switch off the alarm: ▶ In idle status press the display key **OFF**
- Interrupt the alarm: ▶ Press the End call key  during an alarm



## Deactivating the alarm remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

If the alarm is activated via a VoIP connection, the DTMF signalling must take place via SIP info or RFC2833 (→ setting on the base station).

- ▶ Accept alarm call ▶ Press keys   ... the call is ended
- The alarm is deactivated and the handset is in idle status. The room monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.

Reactivate room monitor with the same number: ▶ ... Reactivate (→ p. 37) ▶ **Save**

## Protection against unwanted calls

### Time control for external calls





Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.


- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Ringtones (Handset)** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶ ... then

Switch on/off: ▶ use  to select **On** or **Off**

Enter time: ▶ use  to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use  to enter start and end in 4-digit format

Save: ▶ **Save**

Example

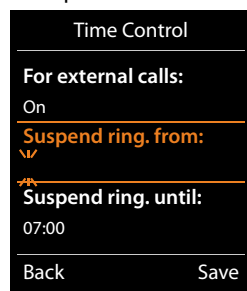




The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

---

## Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. The call is only signalled on the display.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Anon. Calls Silent** ▶ Edit ( = on)

---

## Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶ **Silent Charging** ▶ Change ( = ringtone is switched off when in charging cradle)



## Resource Directory




Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ p. 43).

### Media types:

Type	Format
<b>Sound</b> Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
<b>Picture</b> CLIP-picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.




## Manage pictures/sounds

▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶ **OK**  
... possible options:





View screensaver/CLIP-picture:

▶  **Screensavers / Caller Pictures** ▶ **OK** ▶ ... use  to select picture ▶ **View ...**  
the selected picture is displayed



Play sound:

▶  **Sounds** ▶ **OK** ▶ ... use  to select sound ... the selected sound is played  
Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ ... use  to select volume ▶ **Save**

Rename picture/sound:

▶  Select **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ ... use  to select  
sound/picture ▶ **Options** ▶ **Rename** ▶ ... use  to delete name, use  to enter  
new name ▶ **Save** ... the entry is saved with the new name

Delete picture/sound:






▶  Select **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ ... use  to select  
sound/picture ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

## Check memory

Display the available memory for screensavers and CLIP-pictures.

▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶  
**OK** ▶  **Capacity** ▶ **OK** ... the percentage of available memory is displayed

## Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology e.g. for exchanging directory entries.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset



The headset features the **Headset** or **Handsfree Profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 5 data devices (PCs, PDAs or mobile phones) for the transmission of directory entries as a vCard or for the exchange of data with the computer (→ p. 43).

In order for telephone numbers to be used further, the area codes (country and local area code) must be saved to the telephone.

Operating Bluetooth devices → user guide of the device

Access to the Bluetooth menu depends on the base station:

▶ ▶ ... use to select **Bluetooth** ▶ OK

or

▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Bluetooth** ▶ OK

### Activating/deactivating Bluetooth mode

▶ ▶ ... use to select **Bluetooth** ▶ OK ▶ **Activation** ▶  
Change = activated)

If the local area code is still not saved: ▶ ... use to enter local area code ▶ OK (→ p. 53)

When in idle status, the activated Bluetooth mode is indicated on the handset by the icon.

## Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Search for Headset / Search Data Device** ▶ **OK** ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:
  - Register device: ▶ **Options** ▶ **Trust Device** ▶ **OK** ▶ ... use to enter the PIN of the Bluetooth device to be registered ▶ **OK** ... the device is added to the list of known devices
  - Display information about a device:
    - ▶ ... use to select a device, if applicable ▶ **View** ... the device name and device address are displayed
  - Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ **OK**
  - Cancel search: ▶ **Cancel**

## Editing the list of known (trusted) devices

### Open the list

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ... the known devices are listed, an icon indicates the type of device
  - Bluetooth headset
  - Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

### Edit an entry



- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ▶ ... use to select entry ... possible options:
  - View an entry: ▶ **View** ... the device name and device address are displayed ▶ To go back, press **OK**
  - De-register a Bluetooth device:
    - ▶ **Options** ▶ **Delete entry** ▶ **OK**
  - Edit name: ▶ **Options** ▶ **Edit Name** ▶ **OK** ▶ ... use to edit name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

## Rejecting/accepting a non-registered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, a prompt will appear asking you to enter the PIN of the Bluetooth device (Bonding).

- Reject: ▶ **Briefly** press the End call key. 
- Accept: ▶ ... use  to enter the PIN of the Bluetooth device to be accepted ▶ **OK** ▶ ... Wait for PIN confirmation ... then
- Add the device to the list of known devices: ▶ **Yes**
- Use the device temporarily: ▶ **No** ... the Bluetooth connection can be used, as long as the device is located within transmission range or until it is switched off

## Changing the Bluetooth name of the handset

The handset is shown by this name on another Bluetooth device.

- ▶  ▶ ... use  to select  **Bluetooth** ▶ **OK** ▶  **Own Device** ▶ **OK** ... the name and the device address are shown ▶ **Change** ▶ ... use  to change the name ▶ **Save**

## Additional functions using the PC interface



The **Gigaset QuickSync** program has been installed on the computer.  
Free to download at → [www.bintec-elmeg.com](http://www.bintec-elmeg.com)

QuickSync functions:

- Sync the handset's directory with Outlook
  - Upload CLIP-pictures (.bmp) from the computer to the handset
  - Upload pictures (.bmp) as screensavers from the computer to the handset
  - Upload sounds (ringtone melodies) from the computer to the handset
  - Update firmware
- ▶ Connecting the handset to the computer via Bluetooth (→ p. 41) or via a USB data cable (→ p. 10).



Connect the handset **directly** to the PC, **not** via a USB hub.

## Transferring data



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- ▶ Launch the **Gigaset QuickSync** program on the computer.



The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

## Carrying out a firmware update

- ▶ Connect the telephone and the PC using a **USB data cable** (→ p. 10) ▶ Launch **Gigaset QuickSync** ▶ Establish connection to the handset
- ▶ Start firmware update in **Gigaset QuickSync** . . . Information about this can be found in the **Gigaset QuickSync** help feature

The update process may take up to 10 minutes (not including download time).

The data are first downloaded from the online update server. The time required for this depends on Internet connection speed.

The display on your telephone is switched off and the Message key  and the Talk key  will flash.

 

 



Once the update is complete, your telephone will automatically restart.

### Procedure in the event of an error

If the update procedure fails or the telephone no longer functions properly after the update, repeat the update procedure:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery (→ p. 8) ▶ Replace the battery
- ▶ Carry out the firmware update again as described above



If the update procedure fails more than once or it is no longer possible to connect to the PC, carry out the **Emergency Update**:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery (→ p. 8)
- ▶ Press and hold keys  and  at the same time with the fore-finger and middle finger ▶ Replace the battery
- ▶ Release keys  and  . . . the Message key  and the Talk key  will flash alternately
- ▶ Carry out the firmware update as described above



Always save pictures and sounds uploaded onto the handset on the PC, as they are deleted during an **Emergency Update**.

## E-mail notifications (depends on the base station)

The receipt of new e-mail messages is displayed on the handset: An advisory tone sounds, the Message key  flashes and the  icon is displayed in the idle display.




An e-mail account is set up with an Internet provider.

The name of the incoming e-mail server and your personal access data (account name, password) are stored in the phone (settings carried out via the base station).

The incoming e-mail server uses the POP3 protocol.

## Opening the incoming e-mail list

▶  ▶ ... use  to select  Messaging ▶ OK ▶  eMail ▶ OK

or: There are new e-mail messages (the Message key  flashes):

▶  press ▶  eMail ▶ OK

The phone establishes a connection to the incoming e-mail server. A list of e-mail messages that are stored there is displayed.

- New unread messages appear above old read messages.
- The following details are displayed for each e-mail: name or e-mail address of the sender (one line, abbreviated if necessary) and date and time (date and time will only display correct values if sender and recipient are located in the same time zone).
- **Bold:** New message. E-mail messages that were not present in the incoming e-mail server when the inbox was last opened are identified as "new", regardless of whether or not they have been read.

eMail Incoming	
<b>Frank.Miller@mailp.com</b>	
10.02.2014 15:40	
<b>Happy Birthday</b>	
Anna Sand	
10.02.14	10:38
Read	Delete




E-mail messages classified as spam by the provider are stored in a separate folder and are not shown in the incoming e-mail list.


Some e-mail providers allow you to change this setting: ▶ Deactivate spam protection or display spam e-mails in the incoming email list.

Other e-mail providers may send a message to the inbox when a new spam e-mail is received. The date and sender of this mail are repeatedly updated, so that it is always displayed as a new message.

## Viewing the message header and text of an e-mail


- ▶  ▶ ... use  to select  **Messaging** ▶ **OK** ▶  **eMail** ▶ **OK** ▶ ... use  to select e-mail entry ▶ **Read**

The subject of the e-mail (maximum 120 characters) and the first few characters of the text (maximum 560 characters) are displayed.

Scroll through the message: 





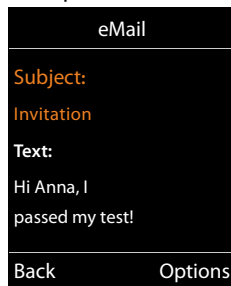

Return to inbox: ▶ **Back**

Example:




If the e-mail does not contain any standard text, the message will be displayed: **eMail can't be displayed**

## Viewing e-mail sender's address

- ▶  ▶ ... use  to select  **Messaging** ▶ **OK** ▶  **eMail** ▶ **OK** ▶ ... use  to select e-mail entry ▶ **Read** ▶ **Options** ▶  **From** ▶ **OK** ... the sender's e-mail address is displayed, over several lines if necessary (maximum 60 characters).

Return to inbox: ▶ **Back**

Example:

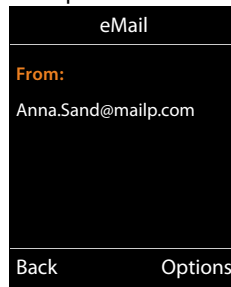

## Deleting e-mail messages

- ▶ Select message in incoming e-mail list ▶ **Delete**

or

- ▶ open message ▶ **Options** ▶  **Delete** ▶ **OK** ▶ **Yes** ... the e-mail message is deleted from the incoming e-mail server.

## Info Centre (depends on the base station)

The Info Centre provides information from the network or Internet on the handset display (e.g. company information, messages or the weather forecast). Information available in the Info Centre can also be used as a screensaver.



The Info Services are available from the base station/PABX.

## Starting Info Centre, selecting info services

- ▶ ▶ ... use to select **Info Centre** ▶ **OK** ... a list of available info services is displayed ▶ ... use to select an info service ▶ **OK**

Further information, → user guide of the base station.

## Displaying info services as a screensaver

You can configure your handset to display one of the info services from the Info Centre (e.g. weather reports, news feeds) in the idle display of the handset.



The screensaver **Info Services** is activated (→ p. 49).  
The base station provides Info Services.

The text information appears on the display approximately ten seconds after the handset returns to idle status.

Depending on the information feed selected, a display key appears on the right of the screensaver.

To open further information: ▶ Press the right display key.

To revert to idle status: ▶ Press and **hold** the End call key

## Selecting information for the screensaver

- ▶ ▶ ... use to select **Info Centre** ▶ **Screensaver** ▶ **OK** ▶ ... use to select info service ▶ **OK** ▶ enter additional settings for the info service selected if required ▶ **Save**



## Setting the handset

### Date and time

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, for example, the date and time must be set.



The date and time are taken from a time server on the Internet, provided that the phone is connected to the Internet and synchronisation with the time server is activated. Manual settings are overwritten in this case.

If the date and time have not yet been set on the handset, the display key **Time** appears.

► Press the display key **Time**

or

- ► ... use to select **Settings** ► **OK** ► **Date/Time** ► **OK** ... then
  - Set the date: ► **Date:** ... use to enter the day, month and year in 8-digit format  
e.g. 1 4 0 1 2 0 1 5 for 14/01/2015
  - Set the time: ► **Time** ► ... use to enter hours and minutes in 4-digit format  
e.g. 0 7 1 5 for 07:15
  - Save settings: ► **Save**

### Changing the language

- ► ... use to select **Settings** ► **OK** ► **Language** ► **OK** ► ... use to select language ► **Select** ( = selected)










If an incomprehensible language has been set:

- ► Press the keys **slowly** one after the other ► ... use to select the correct language ► press the right display key


## Display and keypad

### Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Display & Keypad** ▶ **OK** ▶  **Screensaver** ▶ **Edit** (= on) ... then
- Switch on/off: ▶ **Activation:** ... use  to select **On** or **Off**
- Select screensaver: ▶  **Selection** ▶ ... use  to select a screensaver (**Digital Clock / Analog Clock / Info Services / <Pictures> / Slideshow**)
- View screensaver: ▶ **View**
- Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.

-  All pictures from the **Screensaver** folder of the **Resource Directory** (→ p. 40) are available to select.

### End screensaver

- ▶ Briefly press the End call key  ... the idle display appears

### Notes on displaying Info Services



**Info Services** must be provided by the base/PABX (→ p. 47).



If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

### Activating/deactivating the information ticker



Info Services are available on the base.

The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in the idle display.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Display & Keypad** ▶ **OK** ▶  **Info Ticker** ▶ **Edit** (= on)

The ticker starts as soon as the telephone changes to idle status. If a message is shown in the idle display, the information ticker is not displayed.








## Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Large Font** ▶ **Change**  (= on)

## Colour scheme

The display may appear in a range of colour combinations.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Colour Schemes** ▶ OK ▶ ... use  to select the desired colour scheme ▶ **Select**  (= selected)

## Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Display Backlight** ▶ OK ... then

Backlight in the charging cradle:

- ▶ **In Charger:** ... use  to select **On** or **Off**

Backlight when not in the charging cradle:

- ▶  **Out of Charger** ▶ ... use  to select **On** or **Off**

Save selection: ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is activated.

## Keypad illumination

You can set the brightness of keypad illumination in 5 increments.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Key Illumination** ▶ OK ▶ ... use  to select **Brightness** (1 - 5) ▶ **Save**

## Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.


- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Auto Keypadlock** ▶ **Change**  (= on)

Keypad lock with PIN protection: ▶ Set the handset PIN (→ p. 57)

## Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as it is removed from the charging cradle.



- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** ( = on)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.

## Changing the earpiece and speaker volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.

### During a conversation

- ▶  **Handset Volume** ▶ ... use  to select volume ▶ **Save** ... the setting is saved



The setting is automatically saved after around 3 seconds without saving.

### In idle status

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ... then

For the earpiece: ▶ **Earpiece:** ... use  to set the volume

For the speaker: ▶  **Speaker** ▶ ... use  to set the volume

Save settings: ▶ **Save**



Changes are only saved permanently in **Profile Personal** (→ p. 33).

## Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Acoustic Profiles** ▶  **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ ... use  to select profile ▶ **Select** ( = selected)

**Earpiece Profiles: High or Low** (default setting)


**Handsfree Profiles: Profile 1** (default setting) ... **Profile 4**

## Ringtones

### Ringtone volume

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ ... use to select **For internal calls and alarms** or **External Calls** ▶ ... use to set volume in 5 levels or in crescendo mode (increasing volume) ▶ **Save**

Example

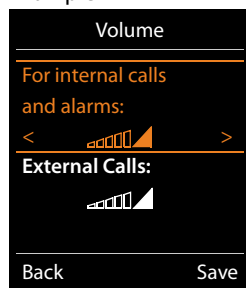

- Changes are only saved permanently in **Profile Personal** (→ p. 33).

### Ringtone melody

Set a variety of ringtones for internal and external calls for every available receive connection of the telephone (**Landline, IP1**) or set the same ringtone for **All calls**.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Melodies** ▶ OK ▶ ... use to select the connection ▶ ... use to select the ringtone/melody in each case ▶ **Save**

## Activating/deactivating the ringtone

### Deactivating the ringtone permanently

- ▶ Use the key to set **Profile Silent** (→ p. 33) ... the following icon appears in the status bar

### Activating the ringtone permanently

- ▶ Use the key to set **Profile Loud** or **Profile Personal** (→ p. 33)

### Deactivating the ringtone for the current call

- ▶ **Silence** or press the End call key

## Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:


- ▶ ... Press the Profile key to select **Profile Silent** ▶ press **Beep** within 3 seconds ... the following icon appears in the status bar

Switching off the alert tone: ▶ ... Press the Profile key to change profile

## Switching the silent alert on/off

Incoming calls and other messages are indicated by a silent alert.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Silent Alert** ▶ **Change**  (= on)

 This setting applies in **Profile Silent**. Changes are only saved permanently in **Profile Personal** (→ p. 33).

## Activating/deactivating advisory tones



The handset notifies acoustically about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then



Tone when keys are pressed:

- ▶ **Key Tones:** ... use  to select **On** or **Off**



Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶ ... use  to select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime left (every 60 seconds):


- ▶  **Battery** ▶ ... use  to select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:** ... use  to select **On** or **Off**

Save settings:


- ▶ **Save**

 There is no battery warning when the room monitor is activated. Changes are only saved permanently in **Profile Personal** (→ p. 33).





## Own area code

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards).


Some of these numbers are already preset.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Area Codes** ▶ OK ▶ Check the (pre)set area code




Edit the number:

- ▶ ... use  to select/switch entry field ▶ ... use  to change entry position ▶  ... delete digit if desired ▶ ... use  to enter digit ▶ **Save**

Example

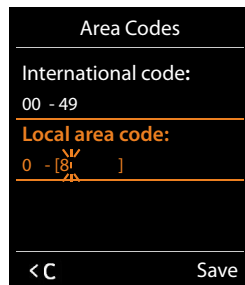

## Fast access to numbers and functions

   **Number keys:** It is possible to assign a **number from the directory** to the keys  and  to .

**Display keys:** The left and right display keys have a **function** preset by default, but the keys can be re-assigned.

You can then dial the number or start the function by simply pressing a key.

### Assigning a number to digit keys (quick dial)





A number has not yet been assigned to the number key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **Quick Dial**

The directory opens.

- ▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select a number if necessary ▶ **OK** ... the entry is saved to the digit key



If you delete or edit the entry in the directory at a later date, this will not affect the assignment to the number key.

### Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately

or

- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialled

### Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:

Change the assignment:

- ▶ ... use  to select an entry ▶ **OK** ▶ ... select a number if needed ▶ **OK**


Delete the assignment:


- ▶ **Clear Key**

## Assigning display keys, changing assignments



The available options depend on the base station. If the phone is registered to a PABX, the display keys can also be assigned via the PABX if required.

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... use  to select function ▶ **OK** ... possible options:

<b>Quick Dial</b>	Assign a number from the directory to the display key (→ p. 54)
<b>Room Monitor</b>	Set and activate/deactivate the room monitor (→ p. 37)
<b>Alarm Clock</b>	Set and activate/deactivate the alarm clock (→ p. 36)
<b>Calendar</b>	Open calendar (→ p. 34)
<b>One Touch Call</b>	Set up one touch call (→ p. 15)
<b>Bluetooth</b>	Open Bluetooth menu (→ p. 41)
<b>Redial</b>	Show redial list (→ p. 14)
<b>eMail</b>	Open the e-mail submenu for receiving and reading e-mail notifications (→ p. 45)
<b>More Functions...</b>	▶ <b>OK</b> ▶ ... use  to select other function
<b>Send Connections</b>	Set send connection for the next call (→ p. 10)
<b>Line Selection</b>	Open the connection selection menu
<b>Call Lists</b>	Show call list (→ p. 23)
<b>Withhold Number</b>	Withhold phone number identification for next call (→ p. 19)
<b>Call Divert</b>	Activate/deactivate Call Divert (→ p. 20)
<b>eMail</b>	Open the e-mail submenu for receiving and reading e-mail notifications (→ p. 45)
<b>Info Centre</b>	Start the Info Centre and open the list of available Info Services – go online (→ p. 47).
<b>Net Directories</b>	Display the list of network directories (→ p. 31)
<b>Central Net Dir.</b>	Display the company directory

### Starting a function

With the telephone in idle status: ▶ **Briefly** press the display key ... the assigned function is executed





## Additional settings/functions depending on the base station

### Registering a handset to multiple base stations

Your handset can be registered to up to four base stations. The active base station is the base station to which the handset was last registered. The other base stations remain saved in the list of available base stations.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Registration** ▶ OK ▶ **Select Base** ▶ OK

Change active base station:

- ▶ ... use  to select base station or **Best Base** ▶ **Select** ( = select)







**Best Base:** The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

Change name of a base station:

- ▶ ... use  to select a base station ▶ **Select** ( = selected) ▶ **Name** ▶ change name ▶ **Save**


... possible options:

### De-registering the handset



- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Registration** ▶ OK ▶  **De-register Handset** ▶ OK ... the handset being used is selected ▶ ... use  to select a different handset if needed ▶ OK ... enter system PIN if required ▶ OK ▶ ... Confirm de-registration with **Yes**




If the handset is still registered to other base stations, it switches to the base station with the best reception (**Best Base**).

### Changing the handset name and internal number

-  This function is only available if no company directory is configured and no name and number have been defined by the PABX.

When registering multiple handsets, they will be allocated names automatically, e.g. "INT 1", "INT 2" etc. Each handset will automatically be assigned the lowest unassigned internal number. The internal number is shown as the name of the handset on the display e.g. **INT 2**. You can change the names and the numbers of handsets. The name must not exceed 10 characters in length.

- ▶  ▶ ... the list of handsets is opened, the current handset is highlighted with < ▶ ... use  to select a handset ... possible options:







Edit name: ▶ **Options** ▶  **Rename** ▶ OK ▶ ... use  to delete the current name ▶ ... use  to enter a new name ▶ OK

Edit number: ▶ **Options** ▶  **Assign Handset No.** ▶ OK ▶ ... use  to select a number ▶ **Save**

## Changing the handset PIN

The handset is protected against unauthorised use by a PIN (default setting: **0000**). The handset PIN must be entered e.g. when deactivating the keypad lock or when entering Bluetooth connections.

Change the telephone's 4-digit PIN (default setting: **0000**):

▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset PIN** ▶ **OK** ▶ ... use  to enter the current handset PIN ▶ **OK** ▶ ... use  to enter new handset PIN ▶ **OK**

---

## Resetting the handset to the default settings

Reset any individual settings and changes that you have made.

▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Reset** ▶ **OK** ▶ **Yes** ... the handset's settings are reset

The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

## Appendix


### Service (Customer Care)

Do you have any questions? Find prompt access to support in this user guide and at [www.bintec-elmeg.com](http://www.bintec-elmeg.com). The phone retailer from whom you purchased your telephone system will be happy to assist with any further questions regarding your bintec elmeg Professional Telephone system.

### Questions and answers

#### Troubleshooting

##### The display is blank.

- The handset is not activated. ▶  Press and **hold**
- The battery is empty. ▶ Charge the battery or replace it (→ p. 8)

##### "No Base" flashes on the display.

- The handset is outside the range of the base station. ▶ Move the handset closer to the base station
- The base station is not activated. ▶ Check the base station power adapter

##### "Please register handset" flashes on the display.

- The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than 6 DECT registrations). ▶ Re-register the handset

##### Your settings are not accepted.

- The wrong profile has been set. ▶ Set **Profile Personal** ... then make changes to the device settings (→ p. 47).

##### The handset does not ring.

- The ringtone is deactivated. ▶ Activate ringtone (→ p. 48)
- Call forwarding is set. ▶ Deactivate call forwarding (→ p. 18)
- The phone does not ring if the caller has withheld his number.
  - ▶ Activate the ringtone for anonymous calls (→ p. 34).
- The phone does not ring during a specific period or for certain numbers.
  - ▶ Check the time control for external calls (→ p. 34)

##### No ringtone/dial tone from the fixed line network.

- Incorrect phone cable. ▶ Please always use the phone cable supplied or ensure that the pin connections are correct when purchasing from a retailer.

##### Error tone sounds after system PIN prompt.

- You have entered the wrong system PIN. ▶ Repeat the process, reset the system PIN to 0000 if required

##### Forgotten system PIN.

- ▶ Reset the system PIN to 0000

##### The other party cannot hear you.

- The handset is "muted". ▶ Activate the microphone again (→ p. 15)

**Some of the network services do not work as specified.**

- Features are not enabled. ▶ Contact the network provider for details.

**The caller's number is not displayed.**

- **Calling Line Identification (CLI)** is not enabled for the caller. ▶ The caller should ask the network provider to enable Calling Line Identification (CLI).
- **Calling Line Identification Presentation (CLIP)** is not supported or enabled by the network provider. ▶ Ask the network provider to enable Caller Line Identification Presentation (CLIP).
  - ▶ The telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.
  - ▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.
  - ▶ Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, telephone number identification, caller ID, ... in the system user guide or ask the system manufacturer.

**You hear an error tone when keying in (descending tone sequence).**

- Action has failed/invalid input. ▶ Repeat the process. Read the display and refer to the user guide if necessary.

**You cannot listen to messages on the network mailbox.**

- Your PABX is set to pulse dialling. ▶ Set your PABX to tone dialling.

**No time is specified for a message in the call list.**

- Date/time are not set. ▶ Set the date/time.

**Registration or connection problems with a Bluetooth headset.**

- ▶ Reset the Bluetooth headset (see headset user guide).
- ▶ Delete the registration data on the handset by de-registering the device (→ p. 37).
- ▶ Repeat the registration procedure (→ p. 38).

---

## Manufacturer's advice

---

### Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

We, bintec elmeg GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

The EC declaration of your country according to 1999/5/EC can be found at:

[www.bintec-elmeg.com](http://www.bintec-elmeg.com)

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.



---

## Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

**Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

---

## Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Technical data

### Battery

Technology: lithium ion (Li-Ion)

Voltage: 3.7 V

Capacity: 750 mAh

### Handset operating times/charging times

The operating time of your handset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours) *	200/160
Talktime (hours)	12
Operating time with 1.5 hours of calls per day (hours) *	110/85
Charging time in charging cradle (hours)	3

\* No Radiation deactivated/activated, without display backlight in idle status

## Character charts

### Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	<sup>1)</sup>	.	,	?	!	<sup>2)</sup>	0			






1) Space








 
2) Line break

## Display icons



The following icons are displayed depending on the settings and the operating status of your telephone.



### Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100%
	white, if <b>Maximum Range</b> on; green, if <b>Maximum Range</b> off
	Red: no connection to the base station
	<b>No Radiation</b> activated: white, if <b>Maximum Range</b> on; green, if <b>Maximum Range</b> off
	<b>Profile Silent</b> activated (ringtone switched off)





Icon	Meaning
	"Beep" ringtone activated
	Keypad lock activated
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	.....





### Display key icons

Icon	Meaning
	Last number redial
	Delete text




Icon	Meaning
	Open the directory
	Copy number to the directory




### Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a connection (outgoing call)
	Connection established

Icon	Meaning
	No connection established/ connection terminated
	Reminder for appointment
	Reminder for anniversary
	Alarm call


## Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...



## Menu overview

Open the main menu: ► when handset is in idle status press 



Not all functions are available on all base stations, in all countries or from all network providers.

Depending on the number and type of available functions, you can display menus at top level or in a submenu, e. g. **Audio Settings** may be in a top-level menu or the **Settings** submenu.

### elmeg D141 basic functions (always available)



**Alarm Clock**

→ p. 36



**Bluetooth**

Aktivierung

→ p. 41

Search for Headset

→ p. 42

Search Data Device


→ p. 42

Known Devices

→ p. 42

Own Device

→ p. 43

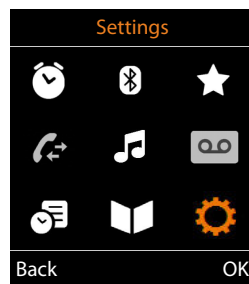

**Additional Features**

Room Monitor

→ p. 37

One Touch Call

→ p. 15

Resource Directory

Screensavers

→ p. 40

Caller Pictures

Sounds

Capacity



**Audio Settings**

→ p. 41

Handset Volume

→ p. 51

Acoustic Profiles

Earpiece Profiles

→ p. 51

Handsfree Profiles

→ p. 51

Advisory Tones

→ p. 53

Silent Alert

→ p. 53

Ringtones (Handset)

Volume

→ p. 52

Melodies

→ p. 52

Time Control

→ p. 38

Anon. Calls Silent

→ p. 39

Silent Charging

→ p. 39

 **Organizer**

- Calendar → p. 34
- Missed Alarms → p. 35

 **Directory**

→ p. 27

 **Settings**

- |                  |                    |         |
|------------------|--------------------|---------|
| Date/Time        |                    | → p. 48 |
| Display & Keypad | — Screensaver      | → p. 49 |
|                  | Large Font         | → p. 50 |
|                  | Colour Schemes     | → p. 50 |
|                  | Display Backlight  | → p. 50 |
|                  | Key Illumination   | → p. 50 |
|                  | Auto Keypadlock    | → p. 50 |
| Language         |                    | → p. 48 |
| Registration     | — Register Handset | → p. 56 |
| Telephony        | — Auto Answer      | → p. 51 |
|                  | Area Codes         | → p. 53 |
| System           | — Handset Reset    | → p. 57 |
|                  | Handset PIN        | → p. 57 |


**Example: elmeg D141 on an elmeg DECT200M Multicell System**

 **Select Services**

- Next Call Anonym. → p. 19
- Call Divert → p. 20
- Call Waiting → p. 19

 **Info Centre**

→ p. 47

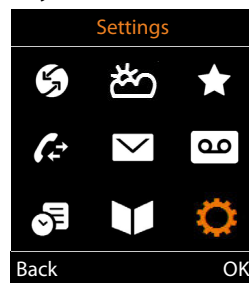

## ★ Additional Features

Room Monitor		→ p. 37
One Touch Call		→ p. 15
Resource Directory	— Screensavers	→ p. 40
	— Caller Pictures	
	— Sounds	
	— Capacity	
Bluetooth	— Activation	→ p. 41
	— Search for Headset	→ p. 42
	— Search Data Device	→ p. 42
	— Known Devices	→ p. 42
	— Own Device	→ p. 43

## ☎ Call Lists

→ p. 23

All calls
Outgoing calls
Accepted calls
Missed calls

## ✉ Messaging

eMail	→ p. 45
-------	---------

## 🗣 Answer Machine

Play Messages	→ p. 25
---------------	---------

## 📅 Organizer

Calendar	→ p. 34
Alarm Clock	→ p. 36
Missed Alarms	→ p. 35

## 📖 Contacts

Directory	→ p. 27
Online Directory	→ p. 31



**Settings**

Date/Time			→ p. 48
Audio Settings	Handset Volume		→ p. 51
		Acoustic Profiles	→ p. 51
	Advisory Tones	Earpiece Profiles	→ p. 51
		Handsfree Profiles	→ p. 51
	Silent Alert		→ p. 53
	Ringtones (Handset)	Volume	→ p. 53
		Melodies	→ p. 52
		Time Control	→ p. 52
		Anon. Calls Silent	→ p. 38
	Silent Charging		→ p. 39
Display & Keypad	Screensaver		→ p. 49
	Info Ticker		→ p. 49
	Large Font		→ p. 50
	Colour Schemes		→ p. 50
	Display Backlight		→ p. 50
	Key Illumination		→ p. 50
	Auto Keypadlock		→ p. 50
Language		→ p. 48	
Registration	Register Handset		→ p. 56
	De-register Handset		→ p. 56
	Select Base		→ p. 56
Telephony	Auto Answer		→ p. 51
	Area Codes		→ p. 53
System	Handset Reset		→ p. 57
	Handset PIN		→ p. 57

## Index

- 
- A**
- Activating/deactivating message LED .....23
  - Advisory tones ..... 53, 54
  - Alarm .....36
  - Alarm (room monitor)
    - switch off .....38
  - Alarm clock .....36
    - switch on/off .....36
  - Alert tone (beep) ..... 33, 52
  - Anniversary, see Appointment
  - Anonymous calling .....18
  - Answer machine
    - calling back a caller .....24
    - playing back messages .....26
    - set fast access .....26
  - Appointment
    - display missed .....35
    - missed .....35
    - notification .....35
    - setting .....34
  - Assigning key 1 .....26
  - Assigning number key .....54
  - Authorisation .....59
  - Automatic
    - answer .....51
    - redial .....15
- 
- B**
- Baby monitor .....37
  - Base station
    - changing .....56
    - changing name .....56
  - Battery
    - charging .....8
    - charging status .....62
    - inserting .....8
  - Beep (alert tone) ..... 33, 52
  - Best base station .....56
  - Bluetooth .....41
    - activate .....41
    - changing the device name .....43
    - copy directory (vCard) .....30
    - de-registering devices .....42
    - list of known devices .....42
    - registering devices .....42
  - Broken display .....6
- 
- C**
- Calendar .....34
  - Call
    - accepting .....16
    - anonymous ..... 19, 39
    - external .....14
  - Call divert .....20
  - Call list
    - copying a number to the directory .....24
    - delete .....24
    - delete an entry .....24
    - dialling .....15
    - entry .....23
    - opening .....24
  - Call lists .....23
  - Call swapping
    - two external calls .....21
  - Call waiting, external .....19
    - accepting/rejecting .....16
  - Call, anonymous ..... 18, 19
  - Caller display .....18
  - Calling
    - entering IP address .....14
    - external .....14
    - from online directory .....32
    - from Yellow Pages .....32
  - Calling Line Identification .....18
    - none .....18
    - switching off temporarily .....19
    - switching on/off .....19
  - Care .....60
  - Care of the device .....60
  - Changing
    - display language ..... 48, 49
    - earpiece volume .....51
    - handset PIN .....57
    - speaker volume .....51
  - Changing the device name (Bluetooth) .....43
  - Changing the name of the handset .....56
  - Charge status of the batteries .....62
  - Charging cradle (handset)
    - connecting .....7
    - setting up .....7
  - Charging time of handset .....61
  - Charging, silent .....39
  - CLI, Calling Line Identification .....18
  - CLIP, CLI Presentation .....18

- CLIP-picture
    - view in Resource Directory .....40
  - CLIP-picture, in directory .....27
  - CLIR, CLI Restriction .....18
  - Colour scheme .....50
  - Conference .....21
  - Conference call
    - end .....21
    - two external calls .....21
  - Connecting the USB data cable .....10
  - Connections with the base station .....56
  - Consultation call
    - ending .....20
    - external .....20
  - Contact with liquid .....60
  - Contents of the package .....7
  - Control key .....4, 11
  - Correcting incorrect entries .....13
  - Customer Care .....58
- 
- D**
  - De-registering (handset) .....56
  - De-registering devices (Bluetooth) .....42
  - Dialling
    - from the call list .....15
    - from the directory .....14
    - from the redial list .....14
    - IP address .....14
    - using quick dial .....54
  - Directory .....27
    - copy vCard (Bluetooth) .....30
    - copying numbers .....29
    - dialling numbers .....14
    - entry .....27
    - memory .....28
    - opening .....27, 31
    - order of entries .....28
    - saving an entry .....27
    - searching .....28
    - searching for an entry .....31
    - selecting an entry .....28
    - sending entry/list to handset .....29
    - sending to handset .....29
  - Display
    - activating/deactivating new message .....23
    - anonymous .....18
    - backlight .....50
    - broken .....6
    - changing display language .....48, 49
    - colour scheme .....50
    - directory memory .....28
    - external .....18
  - Display
    - missed appointment/anniversary .....35
    - network mailbox message .....22
    - screensaver .....49
    - setting .....49
    - unknown .....18
  - Display icons .....62
  - Display keys .....4, 12
    - assigning .....54
    - icons .....62
- 
- E**
  - Earpiece profile .....51
  - Earpiece volume .....17
  - E-mail
    - deleting .....46
    - notification .....45
    - viewing the sender's address .....46
  - E-mail list .....45
  - End call key .....4
  - Entering numbers .....13
  - Entering special characters .....13
  - Entering text .....13
  - Entering the number
    - of the network mailbox .....25
  - Entering umlauts .....13
- 
- F**
  - Fast access .....26
  - Firmware updates .....44
- 
- G**
  - Getting started .....7
- 
- H**
  - Handset
    - advisory tones .....54
    - automatic keypad lock .....50
    - changing name .....56
    - changing the number .....56
    - changing the PIN .....57
    - changing the settings .....48
    - changing to a different base station .....56
    - changing to best reception .....56
    - colour scheme .....50
    - connecting the charging cradle .....7
    - de-registering the handset .....56
    - display backlight .....50
    - display language .....48, 49
    - earpiece volume .....17, 51
    - idle status .....13
    - large font .....50

- Handset
- muting . . . . . 17
  - overview . . . . . 4
  - paging . . . . . 56
  - registering . . . . . 9
  - registering to another base station . . . . . 56
  - restoring to default setting . . . . . 54
  - searching for . . . . . 56
  - set up . . . . . 8
  - speaker volume . . . . . 17, 51
  - switch on/off . . . . . 11
  - use as a baby monitor . . . . . 37
  - use for room monitoring . . . . . 37
- Handsfree key . . . . . 17
- Handsfree mode . . . . . 17
- Handsfree profile . . . . . 51
- Hash key . . . . . 4
- Headset (Bluetooth) . . . . . 41
- Headset connection . . . . . 4, 8
- Headset socket . . . . . 10
- Hearing aids . . . . . 6
- Help . . . . . 58
- 
- I**
- Icons
- alarm clock . . . . . 36
  - displaying new messages . . . . . 22
  - indications . . . . . 62
  - on display keys . . . . . 62
  - status bar . . . . . 62
- Idle status
- returning to . . . . . 13
- Incoming message list
- opening (e-mail) . . . . . 45
- Indications, icons . . . . . 62
- Info Centre . . . . . 47
- IP address
- dialling . . . . . 14
- 
- K**
- Key 1 (fast access) . . . . . 4
- Key, assigning . . . . . 54
- Keypad lock, automatic . . . . . 50
- Keys
- control key . . . . . 4, 11
  - display keys . . . . . 4, 12
  - end call key . . . . . 4
  - fast access . . . . . 4
  - handsfree . . . . . 17
  - hash key . . . . . 4
  - menu . . . . . 11
  - message key . . . . . 4
- Keys
- on/off key . . . . . 4
  - profile key . . . . . 4
  - profiles . . . . . 33
  - recall key . . . . . 4
  - star key . . . . . 4
  - talk key . . . . . 4
- 
- L**
- Language
- display . . . . . 9
- Language, display . . . . . 48
- Large font . . . . . 50
- Liquid . . . . . 60
- List
- e-mail notifications . . . . . 45
  - known devices (Bluetooth) . . . . . 42
- Lock/unlock the keypad . . . . . 11
- Lower/upper case . . . . . 13
- 
- M**
- Making calls
- accepting a call . . . . . 16
  - external . . . . . 14
- Medical equipment . . . . . 6
- Melody
- ringtone for internal/external calls . . . . . 52
- Memory in the directory . . . . . 28
- Memory, resource directory . . . . . 40
- Menu key . . . . . 11
- Message
- deleting (e-mail) . . . . . 46
- Message key . . . . . 4
- Message lists . . . . . 22
- Microphone
- switch on/off . . . . . 17
- Missed anniversaries/appointments . . . . . 35
- Muting the handset . . . . . 17
- 
- N**
- Network mailbox . . . . . 25
- activate/deactivate . . . . . 25
  - defining for fast access . . . . . 26
  - entering number . . . . . 25
- Network MB, see Network mailbox
- Network provider . . . . . 18
- Network services, provider-specific . . . . . 18
- Notification
- incoming e-mail . . . . . 45

- Number
  - copying to the directory .....29
  - do not transfer .....19
  - saving in the directory .....27

---

- O**
- On/off key ..... 4
- One touch call .....15
- Online directory .....31
- Opening the incoming e-mail list .....45
- Operating time of handset .....61
- Overview
  - handset ..... 4

---

- P**
- Paging .....56
- PC Interface .....43
- Picture
  - as CLIP image .....40
  - as screensaver .....40
  - delete .....40
  - formats .....40
  - rename .....40
- Playing back messages .....25
- Power adapter ..... 6
- Profile key .....4, 33
- Profiles .....33
- Protection from calls
  - anonymous .....39
  - switch off ringtone when in charging
    - cradle .....39
    - time control .....38

---

- Q**
- Questions and answers .....58
- Quick dial ..... 14, 54

---

- R**
- Recall key ..... 4
- Receive connection
  - assigning .....10
- Redial list .....14
- Registering (handset) ..... 9
- Registering device (Bluetooth) .....42
- Resource Directory ..... 40, 54
  - memory .....40
  - view CLIP picture .....40
- Ring delay .....51
- Ringtone .....52
  - changing .....52
  - melody for internal/external calls .....52
  - switch off when in charging cradle .....39
  - time control .....38
- Room monitor
  - activation .....37
- Room monitoring .....37

---

- S**
- Safety precautions ..... 6
- Screensaver .....49
- Searching
  - handset .....56
- Searching in directory .....28
- Send connection
  - assigning .....10
- Sender's address (e-mail) .....46
- Sending
  - entire directory to handset .....29
- Service .....58
- Service provider, see Network provider
- Setting the date ..... 65, 67
- Setting the time ..... 65, 67
- Setting up
  - handset ..... 8
- Show new messages .....22
- Signal strength .....62
- Signal tone, see Advisory tones
- Silent alert .....53
- Silent charging .....39
- Snooze mode (alarm) .....36
- Sound
  - delete .....40
  - formats .....40
  - playback .....40
  - rename .....40
- Sound profiles .....33
- Sounds for ringtones .....40
- Speaker .....17
- Speaker volume .....17
- Star key ..... 4
- Status bar ..... 4
  - icons .....62



---

<b>T</b>	
Talk key .....	4
Technical data .....	61
Telephone	
operating .....	11
Time control for external calls .....	38
Troubleshooting	
general .....	58

---

<b>U</b>	
Update .....	44
Upper/lower case .....	13
USB connection socket .....	4

---

<b>V</b>	
Viewing network mailbox message .....	22
VIP group, classify directory entry .....	27

---

VIP ringtone .....	27
VoIP connection	
setting up .....	10
VoIP wizard .....	10
Volume	
earpiece .....	51
handset speaker volume .....	51
handset speaker/earpiece volume .....	17
speaker .....	51

---

<b>W</b>	
Warning tone, see Advisory tones	
Withheld number .....	18

---

<b>Y</b>	
Yellow Pages .....	31

---