






## Infoblatt SIM-Karte RS120wu / Info Sheet SIM-Card RS120wu

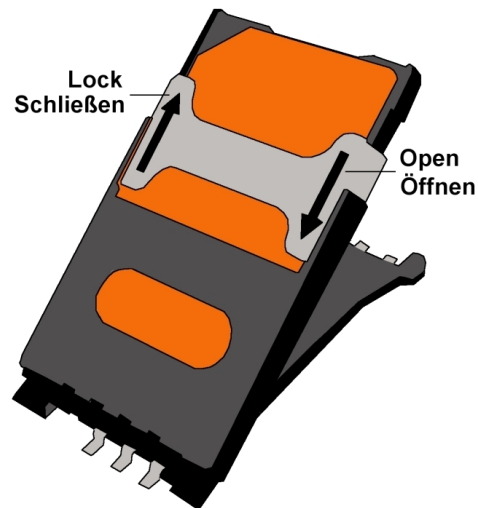

### SIM-Karte einsetzen

- **Öffnen** Sie den Kartenschacht. Schieben Sie dazu den Kartenverschluss in Pfeilrichtung , und heben Sie den Kartenschacht leicht an.
- Stellen Sie sicher, dass die Kontakte der SIM-Karte nach unten zeigen.
- Schieben Sie die SIM-Karte in den Kartenschacht, so dass sich die abgeschrägte Ecke der Karte oben links befindet.
- **Schließen** Sie den Kartenschacht. Drücken Sie dazu den Kartenschacht wieder nach unten.
- Schieben Sie den Kartenverschluss in Pfeilrichtung . Sie hören ein Klickgeräusch, wenn die Karte einrastet.

### Insert memory card

- To **open** the card slot slide the card lock in the direction indicated by the arrow  and lift the card slot slightly.
- Make sure that the contact area of the SIM card faces downwards.
- Slide the SIM card in to the card slot, so that the bevelled corner of the card is facing top left.
- To **close** the card slot push the card slot down.
- Slide the card lock in the direction indicated by the arrow . You hear a click when the card locks.