

Manual Funkwerk Dime Manager

Copyright© Version 1.2, 2010 Funkwerk Enterprise Communications GmbH

Legal Notice

Aim and purpose

This document describes a software application for the management of funkwerk devices. For the latest information and notes on the current software release, please also read our release notes, particularly if you are updating your software to a higher release version. You will find the latest release notes under www.funkwerk-ec.com .

Liability

This manual has been put together with the greatest possible care. However, the information contained in this manual is not a guarantee of the properties of your product. Funkwerk Enterprise Communications GmbH is only liable within the terms of its conditions of sale and supply and accepts no liability for technical inaccuracies and/or omissions.

The information in this manual can be changed without notice. You will find additional information and also release notes for funkwerk devices under www.funkwerk-ec.com .

Funkwerk devices make WAN connections as a possible function of the system configuration. You must monitor the product in order to avoid unwanted charges. Funkwerk Enterprise Communications GmbH accepts no responsibility for data loss, unwanted connection costs and damage caused by unintended operation of the product.

Trademarks

funkwerk trademarks and the funkwerk logo, bintec trademarks and the bintec logo, artem trademarks and the artem logo, elmeg trademarks and the elmeg logo are registered trademarks of Funkwerk Enterprise Communications GmbH.

Company and product names mentioned are usually trademarks of the companies or manufacturers concerned.

Copyright

All rights reserved. No part of this manual may be reproduced or further processed in any way without the written consent of Funkwerk Enterprise Communications GmbH. The documentation may not be processed and, in particular, translated without the consent of Funkwerk Enterprise Communications GmbH.

You will find information on guidelines and standards in the declarations of conformity under www.funkwerk-ec.com .

How to reach Funkwerk Enterprise Communications GmbH

Funkwerk Enterprise Communications GmbH, Südwestpark 94, D-90449 Nuremberg, Germany,
Phone: +49 180 300 9191 0, Fax: +49 180 300 9193 0

Funkwerk Enterprise Communications France S.A.S., 6/8 Avenue de la Grande Lande, F-33174
Gradignan, France, Phone: +33 5 57 35 63 00, Fax: +33 5 56 89 14 05

Internet: www.funkwerk-ec.com

Table of Contents

Chapter 1	Introduction	1
1.1	Possible Applications	1
1.2	Supported devices	2
1.3	System requirements	2
1.3.1	PC	2
1.3.2	System Software	3
1.4	Installation	3
Chapter 2	User interface	6
2.1	Elements	6
2.1.1	Menu bar	7
2.1.2	Device list	7
2.1.3	Main window	8
2.1.4	Device properties	14
2.1.5	Log and file window	17
2.2	Operation	19
2.2.1	Change window display	19
2.2.2	Select devices	20
2.2.3	Halting and resuming update	20
2.2.4	Filtering Syslog messages	21
Chapter 3	Tasks	22
3.1	Discover	22
3.1.1	Search for devices	22
3.1.2	Add devices manually	22
3.1.3	Display devices	23
3.1.4	Search for devices in the background	23

3.1.5	Save search results	23
3.1.6	Load search results	25
3.2	Maintenance	25
3.2.1	Display configuration files	26
3.2.2	Change the path to the configuration files	27
3.2.3	Display firmware files	28
3.2.4	Change path to the firmware files / Update firmware files.	28
3.3	Services	29
3.3.1	Open TFTP log window	29
3.3.2	Define TFTP settings	30
3.3.3	Start or stop TFTP service	30
3.3.4	Open BOOTP log window	30
3.3.5	Define parameters for a device via BOOTP	32
3.3.6	Start or stop BOOTP service	32
3.3.7	Display BOOTP devices	32
3.3.8	Install Syslog service	32
3.3.9	Uninstall Syslog service	33
3.3.10	Open Dime Syslog log window	34
3.3.11	Start or end Syslog service.	34
3.3.12	Receive and display Syslog messages	35
3.4	Settings	35
3.4.1	Open log windows for devices	36
3.4.2	Open log windows for Dime Manager	36
3.4.3	Change language.	36
3.4.4	Select TELNET Client	36
3.5	Display information	37
3.5.1	Display copyright and version	37
3.5.2	Call up help	38
3.6	Perform tasks with the task bar or with the shortcut menu	38
3.6.1	Change device parameters and password	38
3.6.2	Configure device via HTTP.	39

3.6.3	Configure device securely via HTTPS	40
3.6.4	Configure device via TELNET	41
3.6.5	Update firmware from a file	42
3.6.6	Update firmware from a web server	43
3.6.7	Update firmware from Funkwerk server	44
3.6.8	Load configuration into a device	46
3.6.9	Save configuration	47
3.6.10	Reboot device	48
3.6.11	Reset default settings	48
3.6.12	Define parameters for a device via BOOTP	49
3.6.13	Log data with trace	50
3.6.14	Log data with trace CAPI	52
3.6.15	Delete device	53
3.7	Perform tasks with drag and drop	53
3.7.1	Save configuration with drag and drop	53
3.7.2	Update firmware with drag and drop	54
3.7.3	Load configuration with drag and drop in a single device	55
3.7.4	Load configuration with drag and drop in multiple devices	56
	 Index	 57

Chapter 1 Introduction

The **Dime Manager** management tool can locate your Funkwerk devices within the network quickly and easily. The .Net-based application, which is designed for up to 50 devices, offers easy to use functions and a comprehensive overview of devices, their parameters and files.

By using SNMP multicast all of the devices in your local network can be located irrespective of their current IP address. A new IP address and password and other parameters can also be assigned. A configuration can then be initiated over HTTP or TELNET. If using HTTP, the Dime Manager automatically logs into the devices on your behalf.

System software files and configuration files can be managed individually as required or in logical groups for devices of the same type.

1.1 Possible Applications

With the **Dime Manager** you can even search for your Funkwerk devices in a private network. The devices are located using SNMP multicast. If multicast is enabled outside of the network boundaries it is also possible to locate devices in adjacent networks. The located devices are displayed in a list. A comprehensive parameter set is shown for each device.

The software recognises Funkwerk devices irrespective of whether or not a device

- has been switched on for the first time
- is already configured or
- displays an incorrect configuration.

As soon as the devices are displayed, you can manipulate the devices individually or in groups. In particular you can

- carry out a quick basic configuration
- call up the **Funkwerk Configuration Interface** directly from **Dime Manager** and configure your device as normal
- save and load configurations
- carry out a system software update
- boot devices directly from **Dime Manager** or reset devices to the factory default settings.

Comprehensive log files make your work easier. Logs are generated for the following actions:

- When using the **Dime Manager** itself

- When manipulating the device currently displayed
- When using TFTP and BOOTP.

Tasks that are required frequently, e.g. updating the system software, can be performed by drag and drop. This is particularly useful if you have several devices, for example, as the devices can be updated with a single click.

1.2 Supported devices

The **Dime Manager** program currently supports the following devices:

- **R1200, R1200w, R1200wu**
- **R3000, R3000w, R3400, R3800**
- **R4100, R4300**
- **R1202, R3002, R3502, R3802, R4402**
- **RT1202, RT3002, RT3502, RT4202, RT4402**
- **TR200aw, TR200bw**
- **R230a, R230aw, R232b, R232aw, R232bw**
- **RS120, RS120wu, RS230a, RS230aw, RS232b, RS232bw**
- **W1002, W1002n, W2002**
- **WI1040, WI1040n, WI2040, WI2040n, WI3040**
- **WI1065, WI1065n, WI2065, WI2065n, WI3065.**

1.3 System requirements

1.3.1 PC

For installation, your PC must meet the following system requirements:

- Operating system Microsoft Windows Vista (32-bit version or 64-bit version) or
- Microsoft Windows XP Service Pack 2 and above (32-bit version) with working Internet access.
- Internet Explorer Version 7 and above or
- Mozilla Firefox Version 3.0 and above
- Installed network card (Ethernet)
- Installed TCP/IP log
- High colour resolution (more than 256 colours) recommended for correct representation

of the graphics.



Note

You also require Microsoft .Net Framework.

If you are using Microsoft Windows Vista, .NET Framework is included in the program setup.

If you are using Microsoft Windows XP, the program will check before installing **Dime Manager** that .NET Framework is already installed on your PC. If a suitable version of .NET Framework is available, the installation of the **Dime Manager** program will start immediately. If there is no suitable version of .NET Framework available, the latest version will be download from the Internet.



Note

If you are using Microsoft Windows Vista, TELNET is disabled by default. If you wish to use a TELNET client, you must enable it first.

1.3.2 System Software

The **Dime Manager** locates all Funkwerk devices that are equipped with system software 7.8.7 or a new system software.

1.4 Installation


To install the **Dime Manager** program, proceed as follows:

- (1) Type www.funkwerk-ec.com in your browser.
The Funkwerk web page will open. You will find the required setup file in the download area for your device. The file is available in two language versions: German and English.
- (2) Select the file in your required language and save it to your computer.
- (3) Double-click the *setup.exe* file.
The **Funkwerk Dime Manager V1.2.1** window opens.
- (4) If a suitable version of .NET Framework cannot be found on your PC, the program will be downloaded from the Internet. To do this you must accept the license agreement for .NET Framework.
.NET Framework is then downloaded to your PC.


**Note**

Due to the large file size, downloading Microsoft .NET Framework from the Internet may take a long time depending on the bandwidth available.

- (5) The **Funkwerk Dime Manager V1.2.1** window opens again. Follow the instructions on the screen.

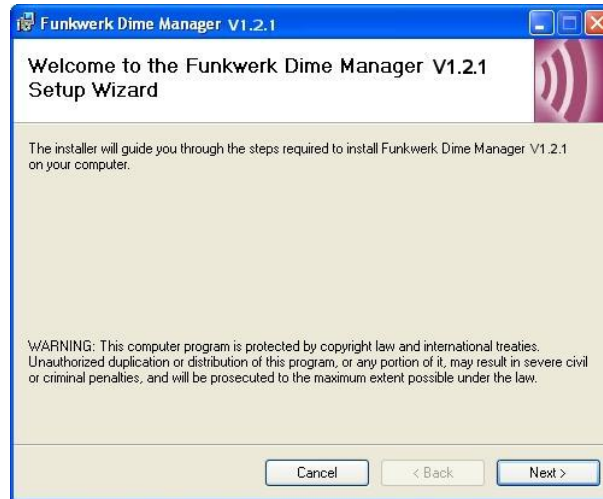


- (6) We recommend making the program accessible to all users of the PC. To do this, under *Install Funkwerk Dime Manager V1.2.1 only for the current user or for all users of this computer* leave the default setting *All users*.

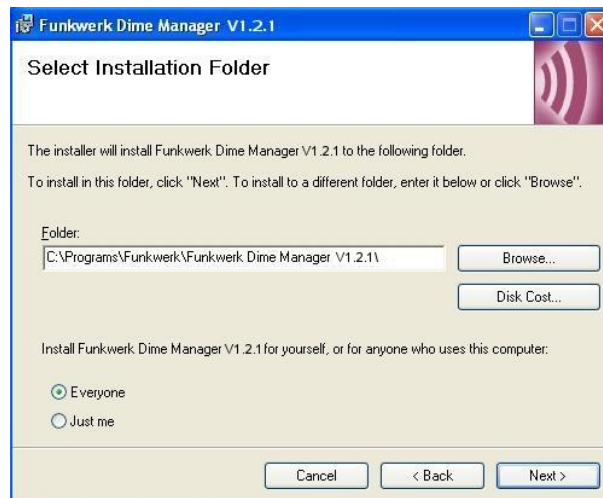

- (7) Click **Next**.

- (8) Follow the instructions on the screen.
- (9) Exit the installation by clicking **Close**.

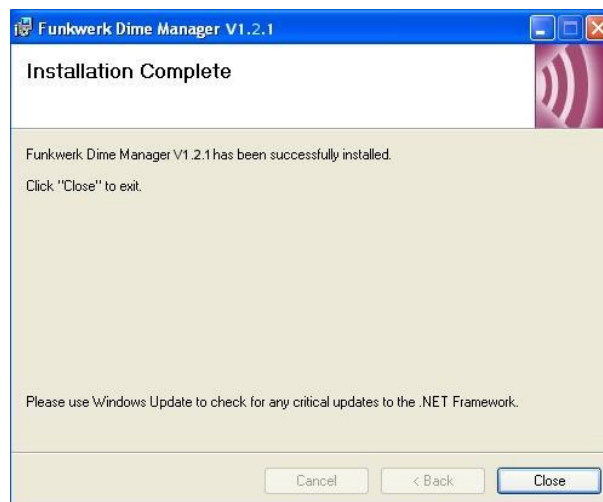

The **Funkwerk Dime Manager V1.2.1** window is closed.

- (10) If the **Windows Security Alert** window opens this means that the Windows firewall has blocked some of the functions of the **Dime Manager** program for security reasons. You will be asked *Do you want to keep blocking this program?*. Click the **Unblock** button to stop blocking the functions.



You will now have access to the **Dime Manager** program. Click **Start -> Programs -> Funkwerk -> Dime Manager -> Dime Manager** to launch the program for the first time.

The program opens in the language you selected for the installation.

Chapter 2 User interface

The **Dime Manager** program has a graphical user interface (GUI) to operate using the mouse.

When you launch the program for the first time you will see the default view.

The program automatically searches for and displays any Funkwerk devices.

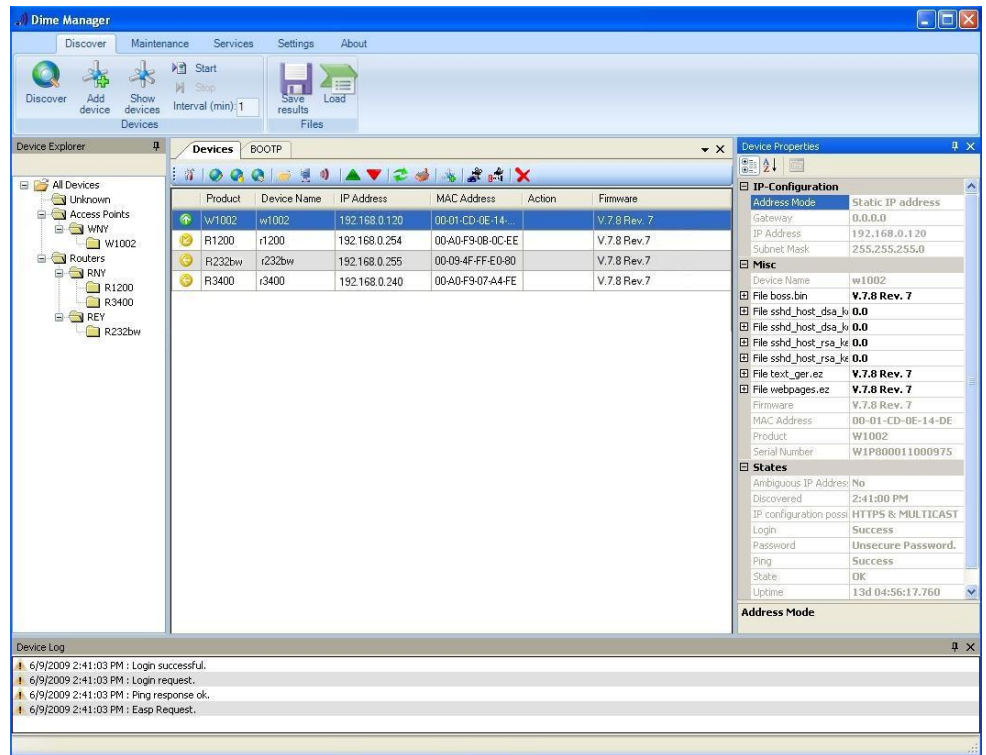


Fig. 2: Dime Manager

2.1 Elements

The **Dime Manager** program is broken down into five areas in the default view.

- The menu bars
- The device list
- The main window with the **Devices** tab, the task bar and the display field

- The device properties
- The log and file window.

The menu bar and the main window are docked and cannot be moved. The **Device list**, **Device properties** and log and file window can be undocked and moved anywhere on the screen. You can re-dock a freely positioned window.

When you end the program, the last used window layout is saved and reloaded and display the next time you start the program.

2.1.1 Menu bar

The menu bar shows the menu options available in **Dime Managers**. If you click a menu item, you will be shown icons relating to the corresponding sub-menus. Click the same menu item again to hide the icons.

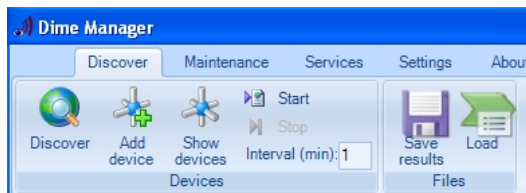


Fig. 3: Menu bar

2.1.2 Device list

The **Device list** window shows all located devices in a tree structure. Devices of the same type are grouped together into the same folder.

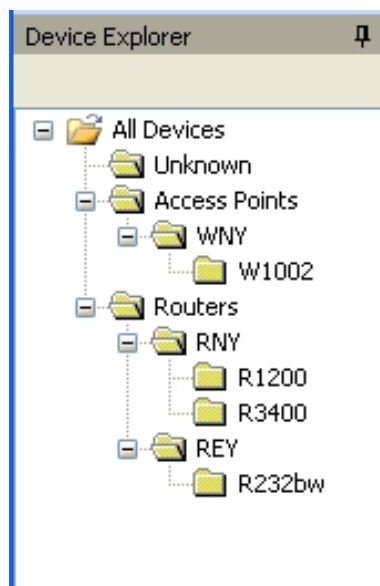


Fig. 4: Device list

You can choose any folder. The devices in this folder are displayed in the main window, i.e. by making a selection in the **Device list** window you can filter the display in the main window on the **Devices** record card.

2.1.3 Main window

The main window consists of individual tabs. Each record card consists of a tab with the title of the record card, a task bar and a display field.

The screenshot shows a window titled "Devices" with a tab labeled "BOOTP". Below the tab is a task bar with various icons. The main area contains a table with the following data:

	Product	Device Name	IP Address	MAC Address	Action	Firmware
↑	W1002	w1002	192.168.0.120	00-01-CD-0E-14-...		V.7.8 Rev.7
⌚	R1200	r1200	192.168.0.254	00-A0-F9-0B-0C-EE		V.7.8 Rev.7
⌚	R232bw	r232bw	192.168.0.255	00-09-4F-FF-E0-80		V.7.8 Rev.7
⌚	R3400	r3400	192.168.0.240	00-A0-F9-07-A4-FE		V.7.8 Rev.7

Fig. 5: Main window

2.1.3.1 Task bar / Shortcut menu

The task bar for each record card contains icons for frequently used tasks. Tooltips help you when attributing tasks and icons. You can also perform these tasks via the shortcut menu.

Task bar / Content menu on the Devices record card



Fig. 6: Task bar

In the default view the **Devices** record card offers the following tasks in the task bar and in the shortcut menu:

- IP settings
- HTTP configuration (FCI)
- HTTPS configuration (FCI) secure
- TELNET configuration (Setup)
- Firmware update from file
- Firmware update from web server
- Firmware update from Funkwerk server
- Load configuration
- Save configuration
- Device restart
- Default settings
- Configure BOOTP
- Trace interfaces
- Trace CAPI
- Delete

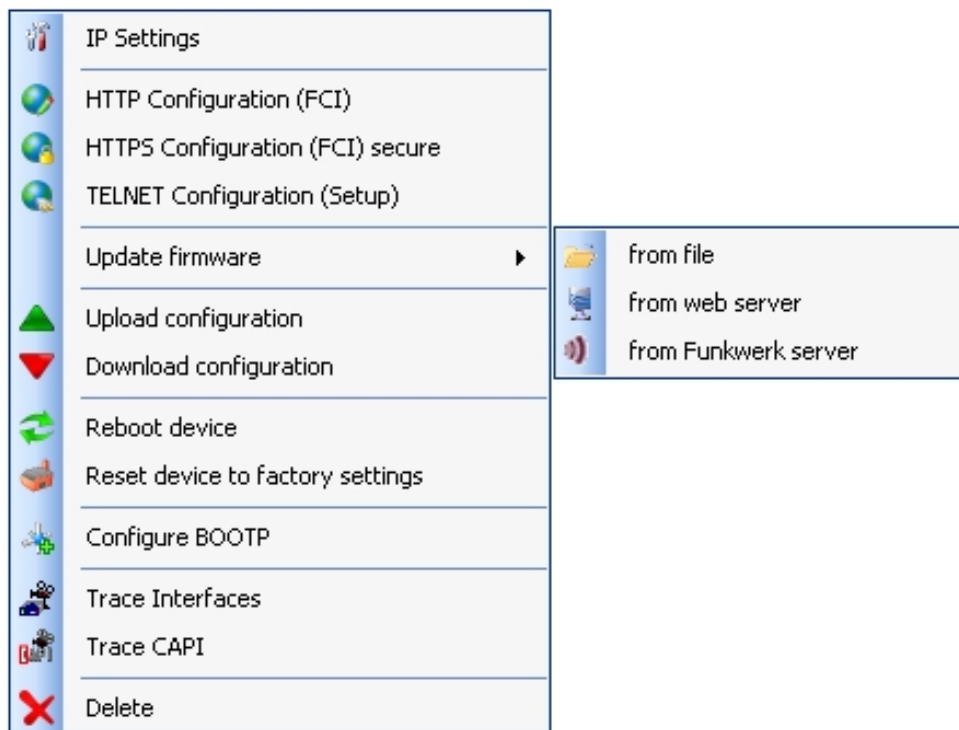


Fig. 7: Shortcut menu

Information on how to perform tasks using the task bar or the shortcut menu can be found under [Perform tasks with the task bar or with the shortcut menu](#) on page 38.

2.1.3.2 Display field

The display field is organised in rows and columns.

You can sort the values displayed in each column in ascending or descending order. Click the column header to change the sort order.

	Product	Device Name	IP Address	MAC Address	Action	Firmware
↑	W1002	w1002	192.168.0.120	00-01-CD-0E-14...		V.7.8 Rev. 7
↻	R1200	r1200	192.168.0.254	00-A0-F9-0B-0C-EE		V.7.8 Rev.7
↓	R232bw	r232bw	192.168.0.255	00-09-4F-FF-E0-80		V.7.8 Rev.7
↻	R3400	r3400	192.168.0.240	00-A0-F9-07-A4-FE		V.7.8 Rev.7

Fig. 8: Display field

Devices record card

In the default view the display field on the **Devices** record card shows the devices that the **Dime Manager** has located. By selecting a specific folder in the **Device list** window, you can filter the devices shown, i.e. only display some of the located devices.

A row is displayed for each device, which contains a parameter set with selected parameters for this device. If you move the mouse pointer over a row, you can see the device messages for this device in a tooltip. Alternatively, you can view these messages in the **Device log** log window.



Note

If not all devices are shown in the main window, it is likely that you have accidentally made a selection in the **Device list** window.

Each row on the **Devices** record card contains the following information:

- State
- Product
- Device name
- IP address
- MAC address
- Action (i.e. the last action carried out on the device)
- System Software

In the corresponding column you can use the action displayed to check whether or not a transaction is running in the background and if so its current status. The colour of the action displayed indicates the progress of the action. If the action is ongoing, the text appears in black or white depending on the background colour. If the action has been successfully completed, the text appears in green. If the action has failed, the text appears in red.

The background colour also serves as a progress bar for the transaction.

You can also check all of the actions in the **Dime Manager Log** window.

The following actions can be displayed:

- Set IP via HTTPS
- Set IP via Multicast
- Reboot device
- Set ex works settings

- Update configuration
- Load configuration
- Update firmware from file
- Internet update firmware (Url)
- Internet update firmware (Vendor)

BOOTP record card

If you have assigned devices using the BOOTP parameter, these devices are displayed on the **BOOTP** record card.

Each row on the **BOOTP** record card contains the following information:




- State
- Device name
- IP address
- MAC address
- Ignore (i.e. ignore BOOTP queries from this device)
- BOOTP configuration file (i.e. Transfer target BOOTP configuration file to the device?
The values *Yes* or *No* can be displayed.)

Device status

The status of the device is indicated by an icon in the left column of the record card.








The colours of the icons have the following meaning:

Available status icon colours

Colour	Meaning
	Indicates the status "HTTPS login successful".
	Indicates the status "configured" or "administrable".
	Indicates the status "Only located" or "Not reachable".

The following icons can be displayed:

Available status icons

Icon	Meaning
	<p>Indicates the status "administered".</p> <p>The login via HTTPS was successful. The device has a new firmware with SNMP Discovery and the option to set IP settings via HTTPS.</p> <p>Note that the device cannot necessarily be reached via Multicast.</p>
	<p>Indicates the status "administrable, old firmware".</p> <p>The login via HTTPS was successful. The IP address cannot be set via SNMP Multicast or HTTPS because the device contains old firmware. A firmware update is available and a configuration can be loaded and saved.</p>
	<p>Indicates the status "Password set, no connection".</p> <p>A secure password is set.</p>
	<p>Indicates the status "administrable, incorrect password".</p> <p>The device can be reached via its IP address. Unable to log in due to an incorrect password.</p>
	<p>Indicates the status "administrable, incorrect IP address".</p> <p>The device has been located via SNMP Multicast, but the device cannot be reached via an IP connection. The status of the password is currently unknown. The IP settings can be modified with the correct password. The device has a new firmware with SNMP Discovery.</p>
	<p>Indicates the status "located".</p> <p>The device was located with ARTEM Discovery, but it has an old firmware and cannot be reached via an IP address.</p>
	<p>Indicates the status "not connected".</p>

2.1.4 Device properties


Detailed information about the device currently selected on the **Devices** record card is displayed in the **Device properties** window.


Device Properties	
IP-Configuration	
Address Mode	Static IP address
Gateway	0.0.0.0
IP Address	192.168.0.120
Subnet Mask	255.255.255.0
Misc	
Device Name	w1002
File boss.bin	V.7.8 Rev. 7
File sshd_host_dsa_key	0.0
File sshd_host_dsa_key	0.0
File sshd_host_rsa_key	0.0
File sshd_host_rsa_key	0.0
File text_ger.ez	V.7.8 Rev. 7
File webpages.ez	V.7.8 Rev. 7
Firmware	V.7.8 Rev. 7
MAC Address	00-01-CD-0E-14-DE
Product	W1002
Serial Number	W1P800011000975
States	
Ambiguous IP Address	No
Discovered	8:20:33 AM
IP configuration possible	HTTPS & MULTICAST
Login	Success
Password	Unsecure Password.
Ping	Success
State	OK
Uptime	13d 22:35:49.000

Fig. 9: Device properties

In the default view the parameters for each device are broken down into three categories:

- **IP configuration**
- **Miscellaneous**
- **Statuses**

Alternatively, you can sort the displayed parameters alphabetically by clicking the  icon.

Click the  icon to return to the category view.

Parameters available in the IP configuration field

Field	Description
Address mode	Shows how the device is assigned an IP address. Possible values: <ul style="list-style-type: none"> • <i>Static IP address</i>: a static IP address was assigned to the device. • <i>DHCP</i>: An IP address is assigned to the device dynamically via DHCP.
Gateway	Shows the IP address of the gateway.
IP address	Shows the IP address of the device.
Subnet Mask	Displays the netmask of the device.

Parameters available in the Miscellaneous field

Field	Description
File xxx	Shows the system software files in the device flash depending on the device. For each file you can display the file name, version, date and time the file was created and the file size.
Device name	Displays the device name.
MAC address	Shows the MAC address of the device.
Product	Shows the product names, e.g. W1200 .
Serial number	Displays the serial number of the device.
System Software	Displays the version of the system software.

Parameters available in the Statuses field

Field	Description
Discovered	Shows the time at which the device was last located.
IP configuration possible	Indicates if an IP configuration of the device can be carried out. Possible values: <ul style="list-style-type: none"> • <i>HTTPS & Multicast</i>: A configuration is possible via HTTPS and Multicast. • <i>HTTPS</i>: A configuration is possible via HTTPS. • <i>Multicast</i>: A configuration is possible via Multicast.

Field	Description
	<ul style="list-style-type: none"> • <i>Not possible</i>: No configuration is possible.
<Last action on the device>	Shows the status of the action indicated on the Devices record card in the Action column by different colours.
Login	<p>Indicates whether or not login was successful.</p> <p>Possible values:</p> <ul style="list-style-type: none"> • <i>Successful</i>: Login was successful. • <i>Unsuccessful</i>: Login was unsuccessful
Ambiguous IP address	<p>Indicates if the same IP address is being used by several devices.</p> <p>Possible values:</p> <ul style="list-style-type: none"> • <i>No</i>: The IP address of the device is not being used by any other located device. • <i>Yes</i>: The IP address of the device is being used by several devices.
Password	<p>Shows the current status of the password.</p> <p>Possible values:</p> <ul style="list-style-type: none"> • <i>Insecure password</i>: The default password has not been changed. • <i>Secure password</i>: The default password has been changed. • <i>Undefined</i>: The default password for the device is not known. This password has not been changed.
Ping	<p>Indicates whether or not the device could be reached via ping.</p> <p>Possible values:</p> <ul style="list-style-type: none"> • <i>Successful</i>: The device was reached via ping. • <i>Unsuccessful</i>: The device could not be reached via ping.
Uptime	Displays the time past since the device was rebooted.
Status	Shows the current status of the device.

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> • <i>OK</i>: The device is running and has been configured correctly. • <i>Ping unsuccessful</i>: The device could not be reached via ping. • <i>Internal error: info for ID could not be found.</i>: An internal error arose while checking an ID. • <i>Login unsuccessful.</i> : Login was unsuccessful. • <i>Device does not respond.</i>: The device could not be reached. It is probably switched off. • <i>Unable to write HTTPS request</i>: The HTTPS request could not be sent to the device. • <i>Unable to read HTTPS response.</i>: An HTTPS response from the device could not be read. • <i>Incorrect file format received.</i>: The file format of sent data was incorrect. • <i>Unknown error</i>: The error that occurred could not be identified. • <i>Wrong serial number</i>: A device with a different serial number was located under the IP address. • <i>Failed</i>: A request to the device failed. • <i>The server rejected the response to the HTTPS request. (HTTPS status 403)</i>: The server failed to respond to an HTTPS request from the device.

2.1.5 Log and file window

A log window displays a list with messages. A file window displays the files in a directory. When opening the program for the first time the **Dime Manager Log** window is displayed. Several log windows and several file windows can be opened at the same time for various purposes. In the default view, you can toggle between these windows using tabs as the log and file windows are hidden automatically.

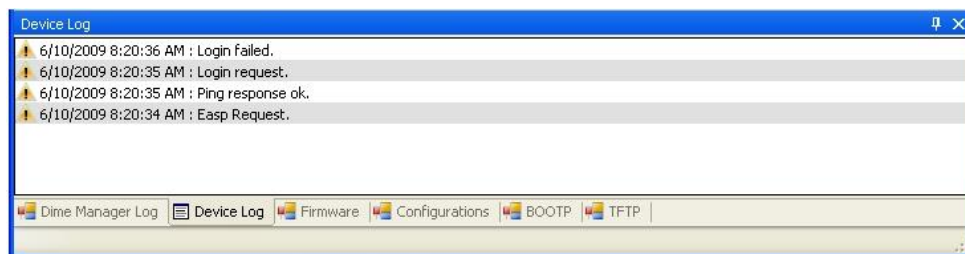



Fig. 10: Log window

The following log and file windows are available:

Available windows

Window title	Function of the window
Dime Manager Log	Shows messages for the Dime Manager.
Devices log	<p>Shows the messages for the device currently selected in the Devices window.</p> <p>You can also see the actions currently running (see also Action under <i>Display field</i> on page 10).</p> <p>Alternatively you can see the messages for the device in the tooltip in the Devices window, if you move the mouse pointer over the corresponding row.</p>
Firmware	<p>Shows the files in the firmware directory.</p> <p>You can change the path to the firmware directory in the Firmware field in the Maintenance -> Configure menu.</p>
Configurations	<p>Shows the files in the configuration directory.</p> <p>You can change the path to the configuration directory in the Configurations field in the Maintenance -> Configure menu.</p>
BOOTP	Shows messages if BOOTP is used.
TFTP	Shows messages if TFTP is used.
TRACE	Displays the logged data when Trace interfaces or Trace CAPI is launched.
Dime Syslog	Shows messages if Syslog is used.

Window title	Function of the window
	<p>Messages are continuously displayed until you halt display by clicking on the  icon, or double-clicking on the display area.</p> <p>All messages are collected; no messages are lost, whatever messages are currently being displayed.</p> <p>With display paused, messages saved up to that point can be manipulated. You can filter messages according to message priority, and according to device.</p>







2.2 Operation









2.2.1 Change window display

In the **Dime Manager** program you can change the view and content of windows using various icons.

The following icons are available:

Available icons

Icon	Meaning
	Closes the window.
	Shows which record card is available in the main window. You can toggle between the record cards that are displayed.
	<p>Indicates that the automatic hide function for the window is disabled. The window is displayed permanently.</p> <p>If you click the icon, the display switches to the  icon and the window is hidden automatically as soon as it loses focus.</p>
	<p>Indicates that the automatic hide function for the window is enabled. A tab is displayed and the window is hidden if there is no focus.</p> <p>If you drag the mouse pointer over the tab, the window is shown and you can click the icon to switch to the  icon and disable the automatic hide function.</p>

Icon	Meaning
	<p>These icons are displayed if a window is positioned freely, you click the window title and hold down the mouse button.</p> <p>You can drag the mouse pointer over an icon to show the available docking position of the window.</p> <p>When you release the mouse button, the window is docked in the position currently displayed.</p>
	<p>Shows the parameters in groups in the Device properties window.</p>
	<p>Shows the parameters sorted alphabetically in the Device properties window.</p>
	<p>Ends the currently displayed trace in the Trace window. Continuation is not possible.</p>
	<p>Pauses display update in the Trace window.</p> <p>Alternately, you can halt display by double-clicking the display area.</p>
	<p>Resumes display update in the Trace window which had previously been paused by clicking the  icon or double-clicking the display area.</p>
	<p>Deletes the displayed data in the Trace window.</p>

2.2.2 Select devices

You can select a row for a device and manipulate it in the main window. However, you can also select several devices (i.e. several rows) at the same time and, for example, update the system software for all selected devices by drag and drop with just a single click.

2.2.3 Halting and resuming update


In the **Trace** and **Dime Syslog** windows, you can halt continuous display update and resume it after a pause.

- (1) If you wish to halt display update, double click in the respective window or click the





icon.

Display is halted.

- (2) If you wish to resume display update, click the  icon.
The display is continuously updated.

2.2.4 Filtering Syslog messages

You can filter the Syslog messages in the **Dime Syslog** window.

- (1) Double-click the **Dime Syslog** window or click the  icon.
Continuous display update is halted. You can set priority of displayed messages and the device from which they are to proceed. You can combine both filtering options.
- (2) If you wish to display messages with a specific priority, select the value *LogInfo*, *LogWarn* or *LogError* in the **Message level** field.
- (3) If you wish to display messages from a specific device, select the desired device's IP address in the **Device** field.
- (4) If you wish to apply the settings selected above to the messages saved from Syslog's start until display halt, click on the  icon.
The messages are filtered. A progress bar indicates filtering process progression. At filtering conclusion, the filtered messages are displayed.



Note

You can copy or cut the filtered data, as well as paste, edit and save these in Windows standard tools.

Chapter 3 Tasks

3.1 Discover

In the **Discover** menu you can carry out all tasks related to searching for and locating a device.

You can:

- Search for devices
- Add devices manually
- Display devices
- Start a search in the background
- Save the displayed list of located devices
- Display a saved device list.

3.1.1 Search for devices

- (1) Select **Discover**->**Discover** to search for devices within a network.
The **Dime Manager** searches for devices using SNMP Multicast and displays the located devices.



Note

Devices in field offices are located if SNMP Multicast is routed, i.e. via a VPN tunnel.

3.1.2 Add devices manually


You can add any devices that are not located via SNMP Multicast manually.



Tip

If a device has a system software earlier than version 7.8.7, you can add the device manually and then carry out an update to the latest system software (see [Update firmware with drag and drop](#) on page 54, [Update firmware from a file](#) on page 42, [Update firmware from a web server](#) on page 43 or [Update firmware from Funkwerk server](#) on page 44).

- (1) Select **Discover**-> **Add device** to add device manually.
The **Add device** window opens.

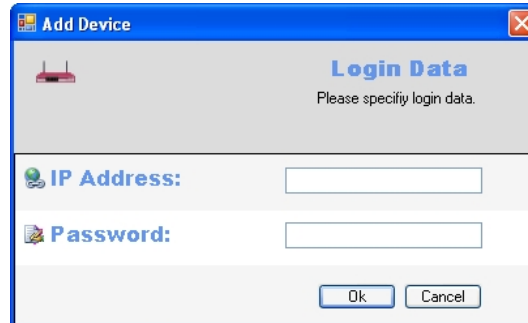

- (2) Enter the **IP address** and the **Password** for the device and click **OK**.
The **Dime Manager** displays the new device.

3.1.3 Display devices

- (1) Select **Discover** -> **Display devices** to display the main window with the **Devices** record card and the **Device properties** window. These windows are displayed automatically in the default view after the initial program start.

3.1.4 Search for devices in the background


- (1) If you wish to search for devices using an automatic search in the background, select **Discover** and define the period of time after which an automatic search should be repeated. To do this, enter the required value in minutes in the **Interval (min):** input field. The default value is one minute.
- (2) Start the search in the background by selecting **Discover** -> **Start**.
The **Start** button is greyed out and the **Stop** button is highlighted. The **Dime Manager** repeats the search for devices within the network after the specified interval.
The located devices are displayed after each search.
- (3) If you wish to stop the automatic search, click **Stop**.

3.1.5 Save search results

Here, you can save a list of devices found.


- (1) Select **Discover**->**Save results** to save the search results currently displayed. By default the search results are saved under *My Documents\Funkwerk\Dime Manager* in the *devicelist.xml* with a password.
The **Save device list** window opens.
This window opens automatically if you end the **Dime Manager** program.



- (2) If you wish to protect the search results with a password, leave the default setting *With password* and enter the required password in the **Password** field and in the **Confirm password** field.
- (3) If you wish to save the search results without a password, disable *With password*.
- (4) If you wish to change the path and the file name displayed, click the  icon.
The **Save as** window opens.
Change the path and file name as required and click **Save**.
- (5) Click **Yes**.
The device list is saved without status information. (status information is available in the corresponding log files.)

3.1.6 Load search results

- (1) Select **Discover**->**Load** to load previously saved search results.
The **Open** window opens.
The last saved file is displayed in the **File name** field by default.

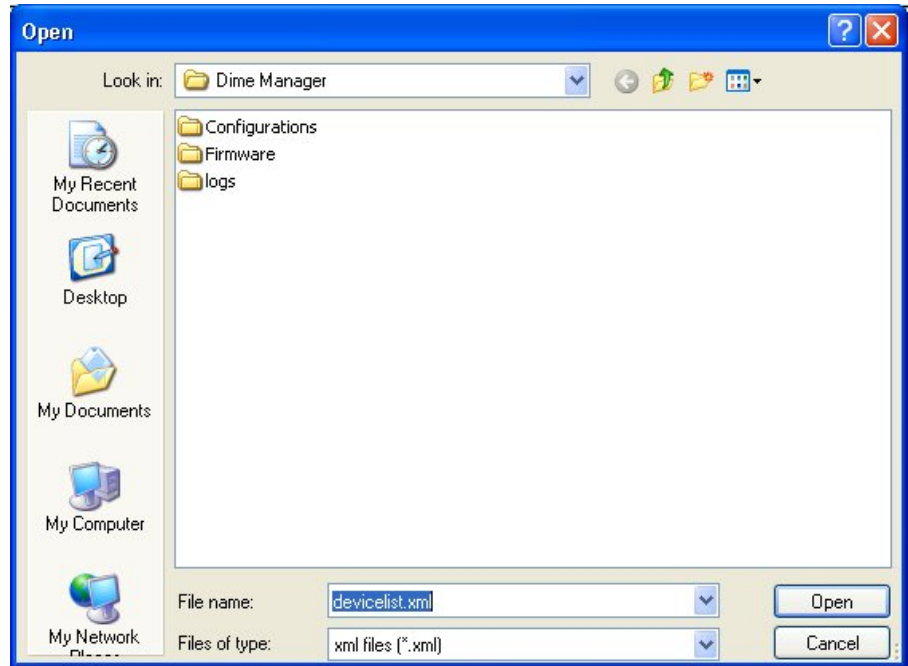

- (2) Select the required file and click **Open**.
- (3) If you wish to load a file that is protected with a password, open the **Load settings with password** window. Enter the password and click **OK**.
The file is loaded and its contents is displayed in the **Dime Manager**.

3.2 Maintenance

In the **Maintenance** menu you can prepare maintenance for a device. You can carry out maintenance for any of the devices displayed in the main window on the **Devices** record card.

You perform the actual maintenance in the main window on the **Devices** record card using the task bar or the shortcut menu (see *Perform tasks with the task bar or with the shortcut menu* on page 38) or using drag and drop (see *Perform tasks with drag and drop* on page 53).


In the **Maintenance** menu you can

- Display the window for the configuration files
- Change the path to the configuration files
- Display the window for the firmware files
- Update firmware files
- Change the path to the firmware files.

3.2.1 Display configuration files

- (1) Select **Maintenance** -> **Window** in the **Configurations** field to open the **Configurations** menu.


You can display the files that you can use for a configuration.

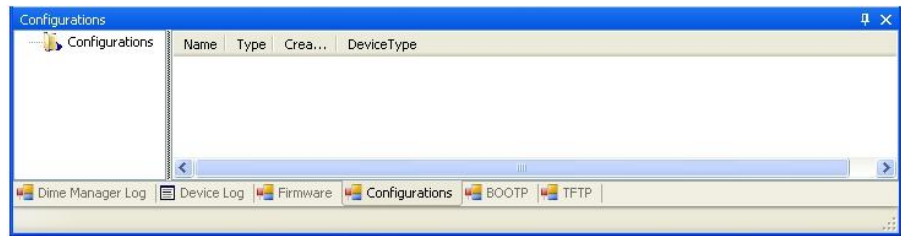


3.2.2 Change the path to the configuration files


- (1) If you wish to change the path to the configuration files that you can see in the **Configurations** menu (see *Display configuration files* on page 26), select **Maintenance > Configure** in the **Configurations** field.

The **Specify path to configuration files** window opens.

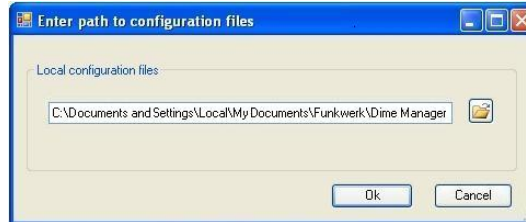

- (2) Specify in which folder the configuration files should be saved. By default they are saved to *My Documents\Funkwerk\Dime Manager\Configurations*.
- (3) If you wish to change the path, click the  icon.

The **Search for folders** window opens.

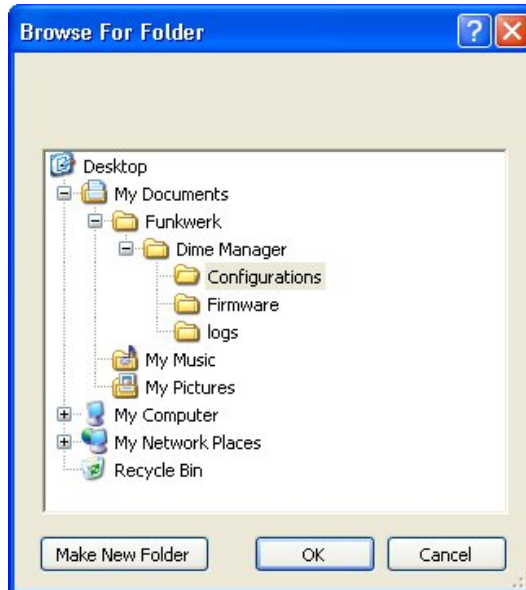


- (4) If the required folder already exists, select the folder and click **OK**.
- (5) If you wish to create a new folder, select the path under which the new folder is to be created, click **Create new folder**, enter a name for the folder and click **OK**.
- (6) Click **OK**.

The new path to the configuration files is specified.

3.2.3 Display firmware files

- (1) Select **Maintenance** -> **Window** in the **Firmware** field to open the **Firmware** menu.
You can display the files that you can use for a firmware update sorted according to device.

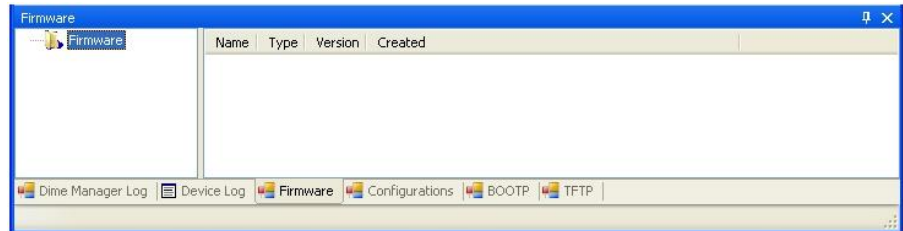

3.2.4 Change path to the firmware files / Update firmware files

- (1) If you wish to change the path to the firmware files that you can see in the **Firmware** menu (see [Display firmware files](#) on page 28) or wish to update the firmware files, select **Maintenance** -> **Configure** in the **Firmware** field.

The **Firmware information** window opens.

By default the firmware files are saved to *My Documents\Funkwerk\Dime Manager\Firmware*. You can change this path **Local firmware files** as required.



- (2) If you wish to copy the latest firmware files to your local directory, click **Update**.
The firmware files are downloaded from the Internet and copied to your directory.
- (3) If you wish to search for firmware updates and release notes on the Funkwerk home page, click the **funkwerk** logo and search for the required files.
- (4) If you wish to host a proprietary firmware web server, enter the file name and the path in the **Server address** field.
- (5) Click **OK**.

3.3 Services

TFTP, BOOTP and Syslog services are available from the **Services** menu.

TFTP is used to transfer system software or configuration files.

With BOOTP a device can be assigned an IP address and other parameters when switched on.


Using Syslog, you can display system messages for several devices in the **Dime Manager**.

In the **Services** menu you can

- Define the settings for the TFTP service
- Start and stop the TFTP service
- Define settings for a device via BOOTP
- Start and stop the BOOTP service
- Display the **BOOTP** record card
- Install and uninstall the Syslog service
- Start and stop the Syslog service
- Receive and display Syslog messages
- Open a log window for the respective service.


3.3.1 Open TFTP log window

- (1) Select **Services** -> **Window** in the **TFTP** field to open the **TFTP** log window.
If you use TFTP, any TFTP messages are displayed in this window.

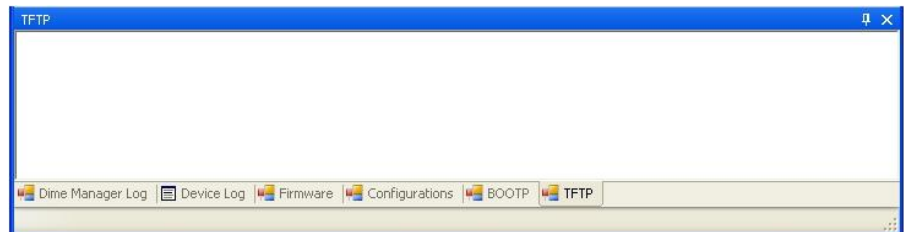

3.3.2 Define TFTP settings

- (1) Select **Services** -> **Configure** in the **TFTP** field to define the path with which TFTP files can be saved or opened. By default TFTP uses the path *My Documents\Funkwerk\Dime Manager\Configurations*. You can change this path.

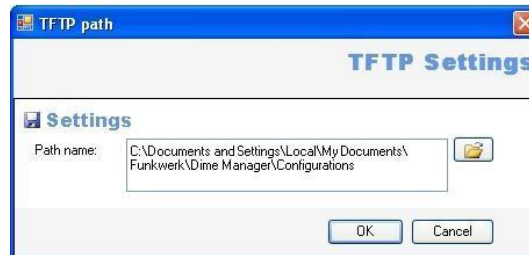

- (2) Once you have changed the path as required click **OK**.

3.3.3 Start or stop TFTP service

- (1) Select **Services** -> **Start** in the **TFTP** field to start the TFTP service.
As soon as the TFTP service is running in the background, the **Start** button is greyed out and the **Stop** button is highlighted.
- (2) If TFTP is already running in the background, select **Services** -> **Stop** in the **TFTP** field to stop the TFTP service.
As soon as the TFTP service has stopped, the **Start** button is highlighted and the **Stop** button is greyed out.




Note

Note that TFTP can run independently of the display in the **TFTP** log window (see [Open TFTP log window](#) on page 29).

3.3.4 Open BOOTP log window

- (1) Select **Services** -> **Window** in the **BOOTP** field to open the **BOOTP** log window.
If you use BOOTP, any BOOTP messages are displayed in this window.

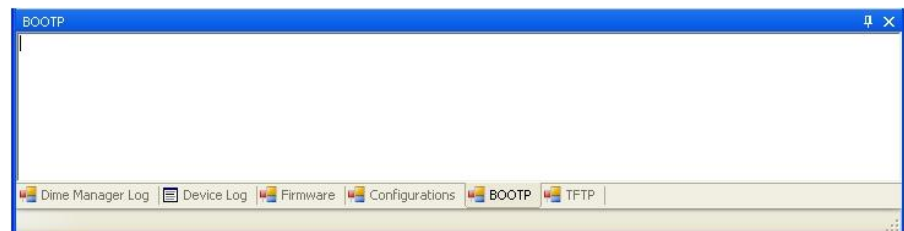

3.3.5 Define parameters for a device via BOOTP

- (1) Select **Services** -> **New** in the **BOOTP** field.

The **BOOTP** window opens. Here, you can enter the BOOTP parameters of a selected device.

You open the BOOTP configuration menu for a device from the device list by selecting **Configure BOOTP** either in the task bar via the button or via the context menu.

BOOTP

BOOTP Settings

Device Parameters


Device Name: IP Address:
MAC Address: Netmask:

Local Network Parameters

Domain Name:
Domain Name Server 1:
Domain Name Server 2:
Time Server:
Time Offset: (Hours)
SysLog Host:

Config File

Specifies a configuration file from the TFTP Directory to be sent to the device. TFTP must be active to use this service. Above specified values could be overwritten by the config file.

Filename: 

Ignore

Ignore BOOTP requests from this device:

OK Cancel

- (2) Change or add parameters as required.
- (3) If you wish to transfer a configuration file to the device, select the required file.



Note

Note that the TFTP service must be running to transfer a configuration file (see [Start or stop TFTP service](#) on page 30).

- (4) Click **OK**.

As soon as the device sends a BOOTP request (e.g. when booting), the parameters are transferred to the device. The **BOOTP** record card is displayed in the main window with the device updated via BOOTP.

3.3.6 Start or stop BOOTP service

- (1) Select **Services** -> **Start** in the **BOOTP** field to start the BOOTP service.
As soon as the BOOTP service is running, the **Start** button is greyed out and the **Stop** button is highlighted.



Note

Note that BOOTP can run independently of the display in the **BOOTP** log window (see [Open BOOTP log window](#) on page 30).

As soon as a device sends a BOOTP request, the **BOOTP** window opens with the parameters for this device. You can change the parameters as required.

- (2) Click **OK** to transfer the parameters to the device.
- (3) Select **Services** -> **Stop** in the **BOOTP** field to stop the BOOTP service.
As soon as the BOOTP service has stopped, the **Start** button is highlighted and the **Stop** button is greyed out.

3.3.7 Display BOOTP devices

- (1) Select **Services** -> **Display devices** in the **BOOTP** field to show the **BOOTP** record card in the foreground of the main window and to display the respective devices for which the BOOTP parameters are configured.

Device Name	IP Address	MAC Address	Ignore	BOOTP Config File

3.3.8 Install Syslog service

You can have the **Dime Manager** install the Syslog service.



Note

You require administrator rights to install or uninstall Syslog service, as well as to start or stop it.

**Note**

If you're running Windows XP without administrator rights, the administrator must install and launch the Syslog service via **Dime Manager**. You can also receive Syslog service messages as a user with restricted rights.

- (1) If you wish to install the Syslog service, select **Services -> Configure** in the **Syslog** field.
The **Syslog service installation** window opens.
- (2) Click the **Install Syslog service** button.
The syslog service is installed; the button text is modified in **Uninstall Syslog service**.
- (3) Click **OK** in the **Syslog service installation** window.
The **Syslog service installation** window closes; the Syslog service becomes available in the **Dime Manager**

**Note**

At installation, the Syslog service in Windows is included in the list of authorised applications. If you use additional firewall applications on your Windows system, you might have to add the Syslog service at the relevant location.

3.3.9 Uninstall Syslog service


**Note**

You require administrator rights to uninstall or install Syslog service, as well as to stop or start it.

- (1) Select **Services-> Configure** in the **Syslog** field to uninstall the Syslog service.
The **Syslog service installation** window opens.
- (2) Once the service is installed, you can uninstall it. On the button, the text **Uninstall Syslog service** appears. Click the **uninstall Syslog service** button.
The Syslog service is uninstalled; the button text is modified in **Install Syslog service**.
- (3) Click **OK** in the **Syslog service installation** window.
The **Syslog service installation** window closes; the Syslog service is no longer available in the **Dime Manager**

3.3.10 Open Dime Syslog log window

- (1) Select **Services** -> **Window** in the **Syslog** field to open the **Syslog** log window.
When you're using Syslog, i.e. when Syslog is running, any Syslog messages received at Port 514 are displayed in this window.

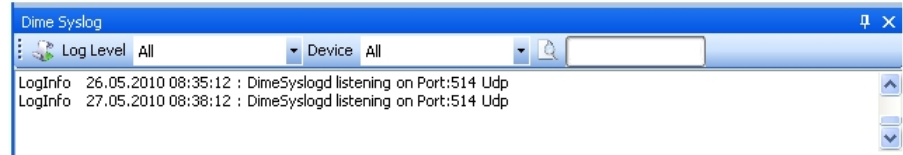

Note

You see Syslog messages for those devices which have entered the IP address of the PC on which the **Dime Manager** was installed in the FCI under **External Reporting** ->**System log** ->**New**

3.3.11 Start or end Syslog service

- (1) Select **Services**-> **Start** in the **Syslog** field to start the Syslog service.
As soon as the Syslog service is running in the background, the **Start** button is greyed out and the **Stop** button is highlighted.
- (2) If Syslog is already running in the background, select **Services** -> **Stop** in the **Syslog** field to stop the Syslog service.
As soon as the Syslog service has stopped, the **Start** button is highlighted and the **Stop** button is greyed out.

3.3.12 Receive and display Syslog messages

- (1) Install the Syslog service (see *Install Syslog service* on page 32).
- (2) Enter the IP address of the PC on which the **Dime Manager** is installed into the FCI of the devices whose Syslog messages you wish to receive. For this, in the FCI, go into the menu **External Reporting** -> **System log** -> **New**.
- (3) Open the Syslog log window (see *Open Dime Syslog log window* on page 34).
- (4) Start the Syslog service (see *Start or end Syslog service* on page 34).
You see the Syslog messages in the **Dime Syslog** window. You can pause the display and manipulate the data (see *Filtering Syslog messages* on page 21).



Note

As soon as Syslog is started, all messages are continuously saved in the Windows event viewer. You can administer the data with Windows standard tools.



Note

The size of the Windows events viewer is limited by default to 512 KB, i.e., about 1,000 entries. When the memory is full, the oldest messages are deleted first. If you have administrator rights, you can modify the size of the events viewer.



Note

The number of messages received by the devices depends on which setting you have selected for the respective device on the FCI in the menu **External reporting** -> **System log** -> **New** in the **Level** field.

3.4 Settings

In the **Settings** menu you can define basic settings.


You can

- Open the log window for the devices
- Open the log window for the **Dime Manager**
- Change the language for the user interface
- Change the TELNET client currently selected

3.4.1 Open log windows for devices

- (1) Select **Settings** -> **Devices log** to open the **Devices log** window for messages from all displayed devices.

The **Devices log** log window opens and any messages are displayed.

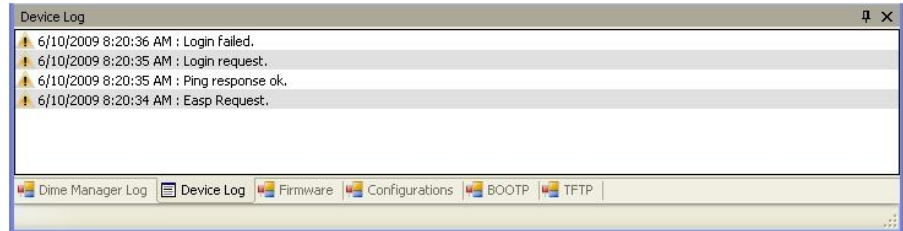

3.4.2 Open log windows for Dime Manager

- (1) Select **Settings** -> **Dime log** to open the window for messages from the **Dime Manager**.

The **Dime Manager** log window opens and any messages are displayed.

3.4.3 Change language

- (1) Select **Settings** -> **Language** to change the language of the user interface.
- (2) The languages currently available are German and English.

Select the desired language.

The message `To perform the language switch, Logging must be temporarily turned off. The contents of the BOOTP, TFTP and Dime Manager log windows will also be deleted. Are you sure you want to continue?` appears.

- (3) Click **Yes** to enable the selected language setting.

3.4.4 Select TELNET Client



Note

If you are using Microsoft Windows Vista, TELNET is disabled by default. If you wish to use a TELNET client, you must enable it first.

- (1) Select **Settings** -> **TELNET** in the **Configuration** field to select a different TELNET client.

- (2) Select the desired TELNET client.

The selected TELNET client is used for configurations with the setup tool (see [Con-](#)

figure device via TELNET on page 41).

3.5 Display information

In the **Info** menu you can

- Display information about the **Dime Manager**
- Access help files on the **Dime Manager**

3.5.1 Display copyright and version

- (1) Select **Info** -> **Info**.

The **About Dime Manager** window opens.


The copyright and version number are displayed.



- (2) Click **OK** to close the window.

3.5.2 Call up help

- (1) Select **Info** -> **Help** to call up HTML help.

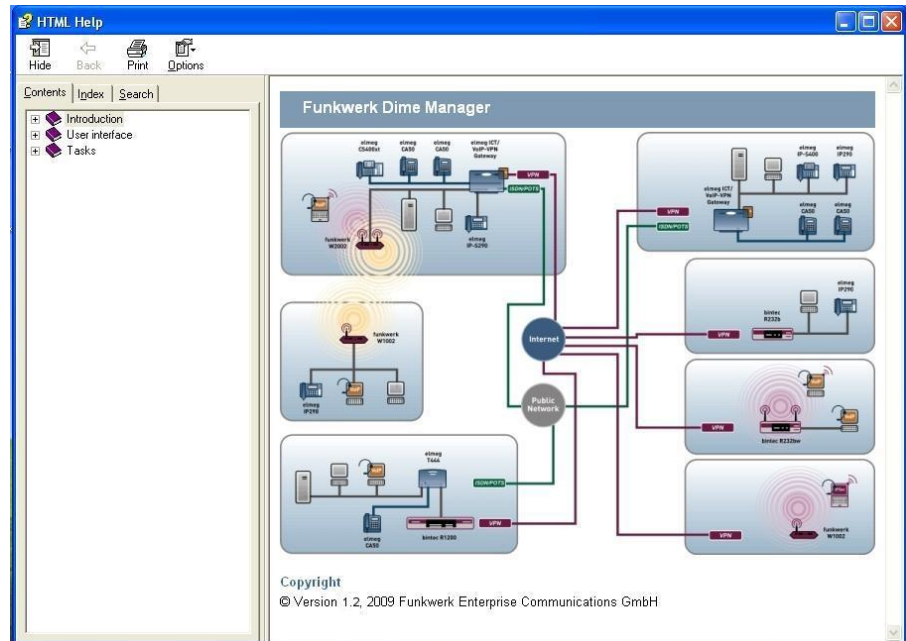

3.6 Perform tasks with the task bar or with the shortcut menu


In the default view the **Devices** record card has a task bar for important tasks. You can also perform these tasks via the shortcut menu.

You can select one or more devices and apply the following action to the selected device or selected devices.

The following descriptions refer to a single device. Proceed accordingly for multiple devices.

3.6.1 Change device parameters and password

You can change the name and password for a device as well as its IP settings.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **IP settings** or double-click the device.

The **IP settings** window opens.




Note

Note that the **IP settings** window only opens if the device has been located with SN-MP Discovery or can be reached via HTTPS.

- (3) Change the settings as required.
- (4) If you wish to save the configuration on the device so that it will be available after a restart, enable the **Save configuration permanently** setting.
- (5) Click **Test** to check whether or not the device can be reached at the specified IP address.
- (6) Click **OK** to transfer the settings to the selected device and close the window.

3.6.2 Configure device via HTTP

You can configure a device with HTTP using the **Funkwerk Configuration Interface** directly from **Dime Manager**. You do not need to log in, as the **Dime Manager** will have saved the device password and will take you directly to the selected device.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **HTTP configuration (FCI)**.

The start menu for the **Funkwerk Configuration Interface** opens.

The screenshot shows the Funkwerk W1002 configuration interface. At the top, there is a header with 'W1002', a language dropdown set to 'English', 'Online Help', 'Logout', and the Funkwerk logo. A 'Save configuration' button is visible in the top left of the main content area. On the left side, there is a navigation menu with categories like System Management, Physical Interfaces, and Local Services. The main content area displays system information, resource usage, and recent system logs.

Automatic Refresh Interval: 60 Seconds

Warning: System Password not changed!

System Information

Uptime	14 Day(s) 1 Hour(s) 19 Minute(s)
System Date	Thu May 06 14:16:15 2004
Serial Number	W1P800011000975
BOSS Version	V.7.8 Rev. 7 IPsec from 2009:05:06 00:00:00

Resource Information

CPU Usage	0%
Memory Usage	17.5/31.9 MB (54%)
Active Sessions (SIP, RTP, etc...)	0
Active IPsec Tunnels	0 / 0

Physical Interface

Physical Interface	Interface Specifics	Link
en1-0	br0: 192.168.0.120 / 255.255.248.0	
en1-1	br0: 192.168.0.120 / 255.255.248.0	
WLAN1	Off	

Recent System Logs

Time	Level	Subsystem	Message
04:11:44	Warning	SNMP	AUTHENTICATION FAILED from 172.16.96.34 at Thu May 6 4:11:44 2004
04:11:45	Warning	SNMP	AUTHENTICATION FAILED from 172.16.96.34 at Wed May 5 4:11:45 2004
04:11:50	Warning	SNMP	AUTHENTICATION FAILED from 172.16.96.34 at Sun May 2 4:11:50 2004
04:11:52	Warning	SNMP	AUTHENTICATION FAILED from 172.16.96.34 at Sat May 1 4:11:52 2004
04:11:54	Warning	SNMP	AUTHENTICATION FAILED from 172.16.96.34 at Fri Apr 30 4:11:54 2004
12:57:52	Information	Ethernet	en1-1: link down
12:57:52	Error	Ethernet	en220-0: bridge group id 150001 does not exist
12:57:01	Information	Ethernet	en1-1: link down
04:11:55	Warning	SNMP	AUTHENTICATION FAILED from 172.16.96.34 at Thu Apr 29 4:11:55 2004
04:11:58	Warning	SNMP	AUTHENTICATION FAILED from 172.16.96.34 at Wed Apr 28 4:11:58 2004

You can now configure the device.

- (3) If you wish to save the current configuration on the device, click **Save configuration** in the **Funkwerk Configuration Interface**. Refer to [Save configuration](#) on page 47 for information on how to save the configuration in the **Dime Manager**.

3.6.3 Configure device securely via HTTPS

You can configure a device securely with HTTPS using the **Funkwerk Configuration Interface** directly from **Dime Manager**. You do not need to log in, as the **Dime Manager** will have saved the device password and will take you directly to the selected device.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the icon or open the shortcut menu by right-clicking and select **HTTPS configuration (FCI) secure**.
- (3) In some cases a warning message may appear and the **Secure connection failed** window may open if a security certificate is not signed.



Secure Connection Failed

192.168.0.120 uses an invalid security certificate.

The certificate is not trusted because the issuer certificate is unknown.
The certificate is not valid for any server names.

(Error code: sec_error_unknown_issuer)

- This could be a problem with the server's configuration, or it could be someone trying to impersonate the server.
- If you have connected to this server successfully in the past, the error may be temporary, and you can try again later.

[Or you can add an exception...](#)

If this happens add an exception and download a certificate. Follow the instructions on the screen.

- (4) If you click the **Confirm security exception rule** button in the **Add security exception rule**, the start menu opens the **Funkwerk Configuration Interface**. You can now configure the device.
- (5) If you wish to save the current configuration on the device, click **Save configuration** in the **Funkwerk Configuration Interface**. Refer to [Save configuration](#) on page 47 for information on how to save the configuration in the **Dime Manager**.


3.6.4 Configure device via TELNET




Note

If you are using Microsoft Windows Vista, TELNET is disabled by default. If you wish to use a TELNET client, you must enable it first.

You can configure a device via the **Setup Tool** directly from **Dime Manager**.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **TELNET configuration (Setup)**.


A TELNET client opens. You can log into the chosen device and configure it.

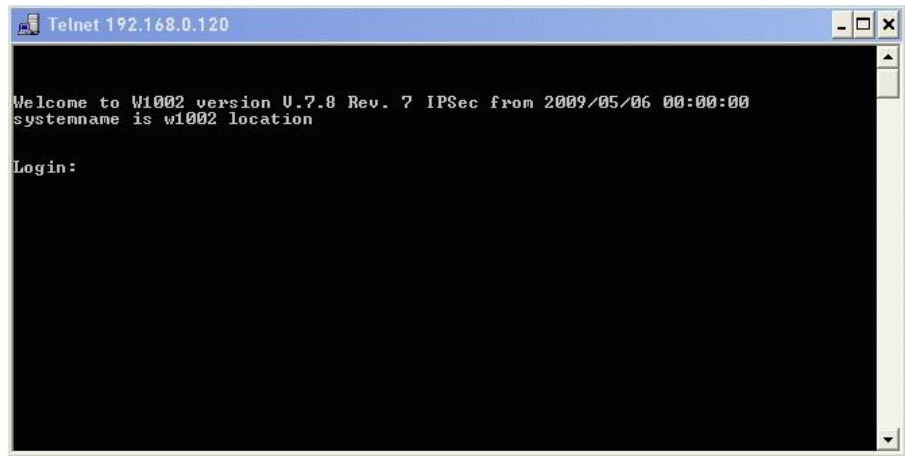


- (3) If you wish to save the current configuration on the device, select the **Save as boot configuration and exit** menu option in the **Setup Tool**. Refer to [Save configuration](#) on page 47 for information on how to save the configuration in the **Dime Manager**.

3.6.5 Update firmware from a file

You can update the firmware of a device using a firmware file, which is saved in your **Dime Manager**.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **Firmware update from file**.

The **Firmware for <device name>** window opens. By default the files are displayed from *My Documents\Funkwerk\Dime Manager\Firmware*. You can change this path (see [Change path to the firmware files / Update firmware files](#) on page 28).

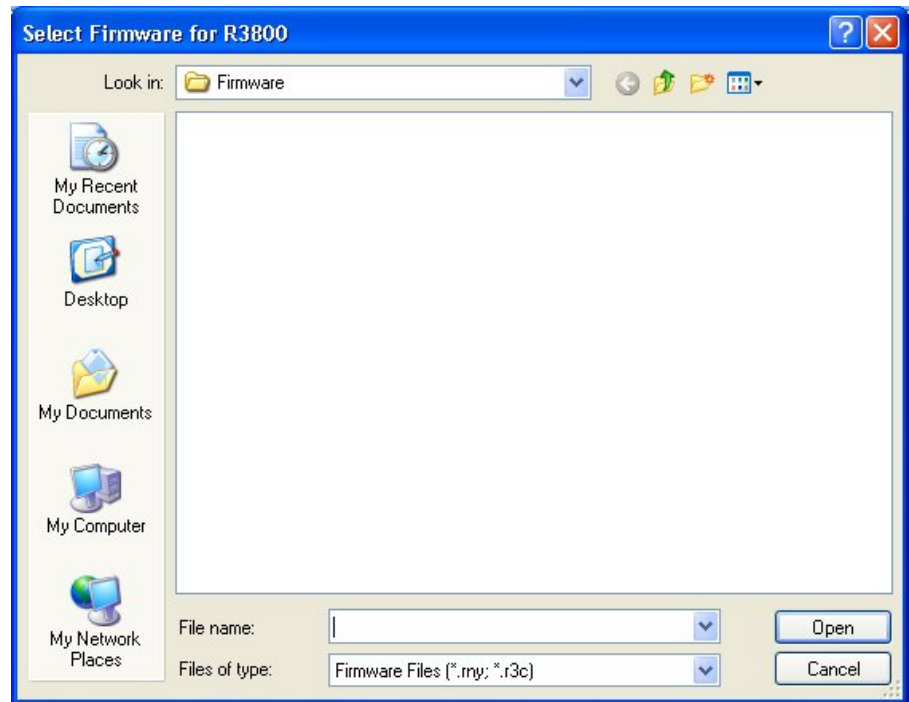

- (3) Select the required file and click **Open**.

The firmware file is transferred to the device.

Whilst the action is running the *Update firmware from file* message is displayed in the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Update firmware from file* message appears in green. If the action fails, the *Update firmware from file* message appears in red.

The background colour also serves as a progress bar for the transaction.




Note


To enable the new firmware, you must restart the device (see [Reboot device](#) on page 48).

3.6.6 Update firmware from a web server

You can update the firmware for a device using a web server.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **Firmware update from web server**.

The **Firmware update via the web** window opens.

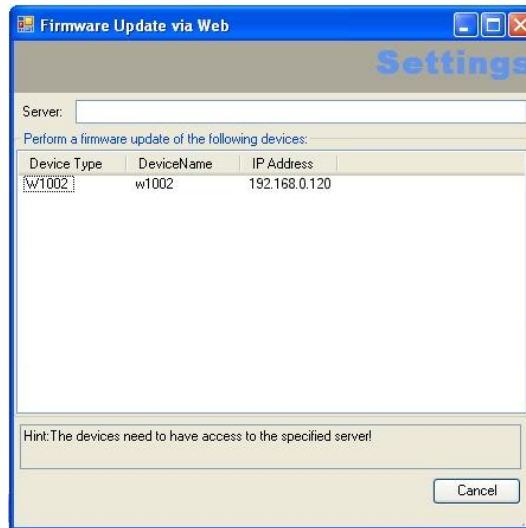

- (3) Enter the desired web server in the **Server** field.



Note

Note that DNS must be enabled on the chosen devices and there must be an Internet connection available from the chosen device to the entered web server.

- (4) Click **Start**.

The device loads the firmware file from the specified web server.

Whilst the action is running the *Internet update firmware (Url)* message is displayed in the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Internet update firmware (Url)* message appears in green. If the action fails, the *Internet update firmware (Url)* message appears in red.

The background colour also serves as a progress bar for the transaction.




Note

To enable the new firmware, you must restart the device (see [Reboot device](#) on page 48).

3.6.7 Update firmware from Funkwerk server

You can update the firmware for a device using the Funkwerk server.

- (1) Select the desired device in the main window on the **Devices** record card.

- (2) Click the  icon or open the shortcut menu by right-clicking and select **Firmware update from Funkwerk server**.


The **Firmware update via the web** window opens.

The Funkwerk server is preset, although you can change these default settings.



Note

Note that DNS must be enabled on the chosen devices and there must be an Internet connection available from the chosen device to the entered web server.

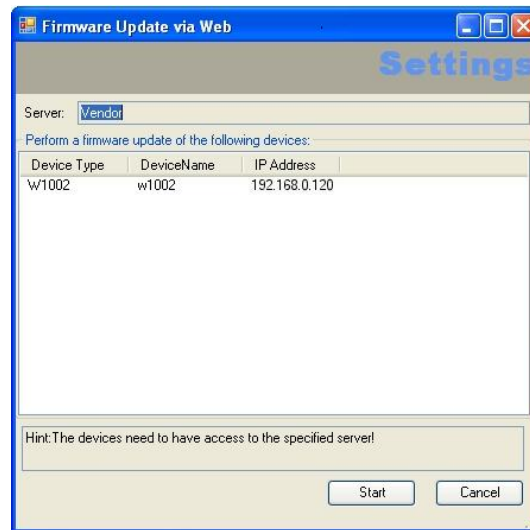

- (3) Click **Start**.

The device loads the firmware file from the Funkwerk server.

Whilst the action is running the *Internet update firmware (Vendor)* message is displayed in the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Internet update firmware (Vendor)* message appears in green. If the action fails, the *Internet update firmware (Vendor)* message appears in red. The background colour also serves as a progress bar for the transaction.



Note


To enable the new firmware, you must restart the device (see [Reboot device](#) on page 48).

3.6.8 Load configuration into a device

You can load a configuration into a device.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the ▲ icon or open the shortcut menu by right-clicking and select **Load configuration**.

The **Load configuration file** window opens. By default the configuration files are saved to *My Documents\Funkwerk\Dime Manager\Configurations*. You can change the path to the configuration files (see [Change the path to the configuration files](#) on page 27).

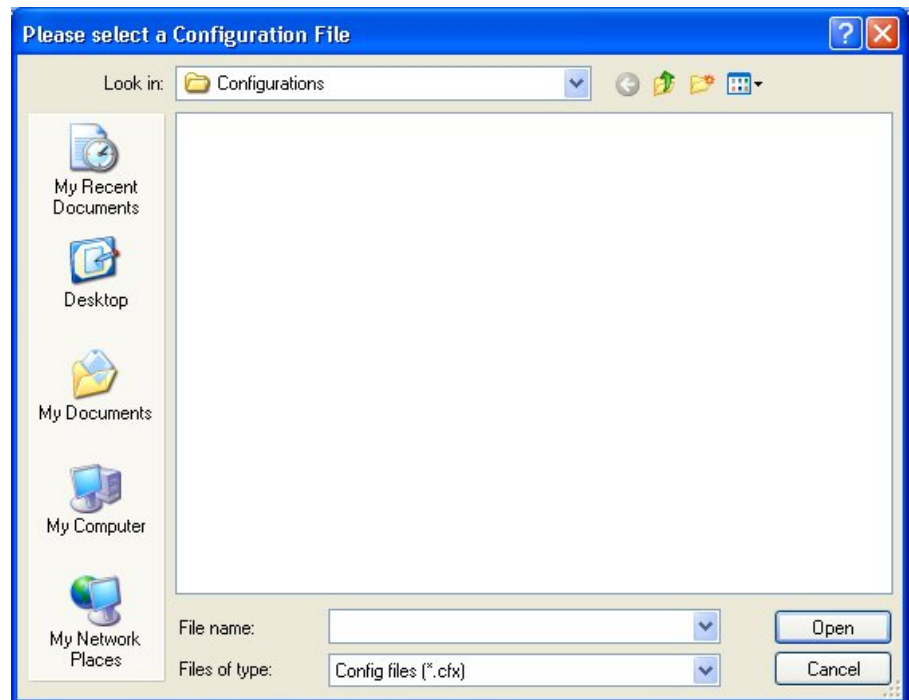

- (3) Select the required configuration file and click **Open**.

The configuration file is transferred to the device.

Whilst the action is running the *Update configuration* message is displayed in the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Update configuration* message appears in green. If the action fails, the *Update configuration* message appears in red.


The background colour also serves as a progress bar for the transaction.

3.6.9 Save configuration

You save the current configuration for a device in a file.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the ▼ icon or open the shortcut menu by right-clicking and select **Save configuration**.


The **Save configuration file** window opens. By default the configuration files are saved to *My Documents\Funkwerk\Dime Manager\Configurations*. You can change the path to the configuration files (see [Change the path to the configuration files](#) on page 27).

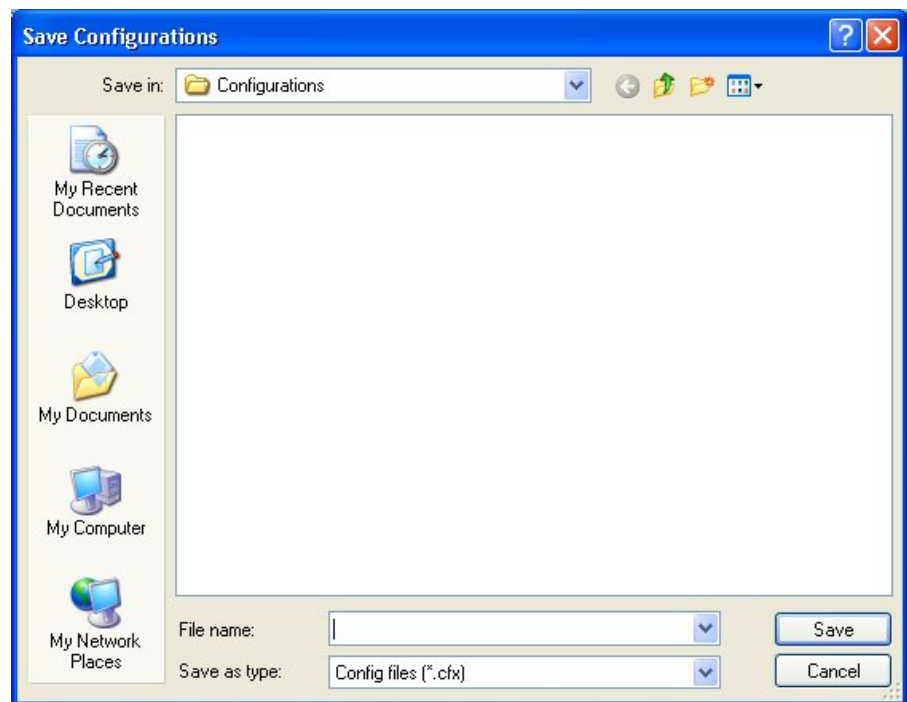


- (3) Select the required directory, enter a name for the configuration file and click **Save**.
The **Save configuration** window opens.
- (4) Check your entries, change them if necessary and click **Start**.
The configuration file is saved.
Whilst the action is running the *Save configuration* message is displayed in the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Save configuration* message appears in green. If the action fails, the *Save configuration* message appears in red.
The background colour also serves as a progress bar for the transaction.

3.6.10 Reboot device

You can reboot a device from the **Dime Manager**.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **Reboot device**.

The **Reboot device** window opens. The parameters for the selected device are displayed.

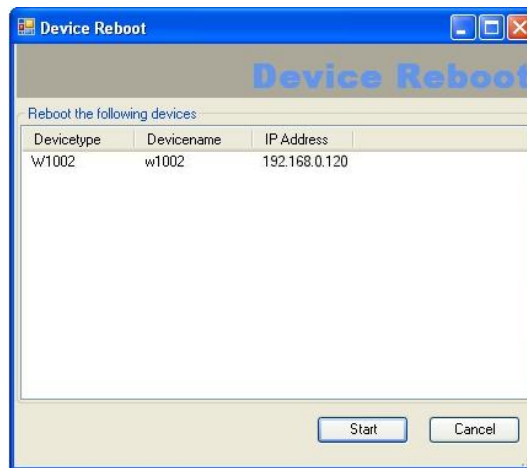

- (3) Click **Start**.


The device is rebooted.

Whilst the action is running the *Reboot device* message is displayed in the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Reboot device* message appears in green. If the action fails, the *Reboot device* message appears in red.


The background colour also serves as a progress bar for the transaction.

3.6.11 Reset default settings

You can reset a device to its default settings. The configuration will be lost if you do not save it first (see [Save configuration](#) on page 47).

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **Default settings**.

The **Default settings** window opens. The parameters for the selected device are displayed.

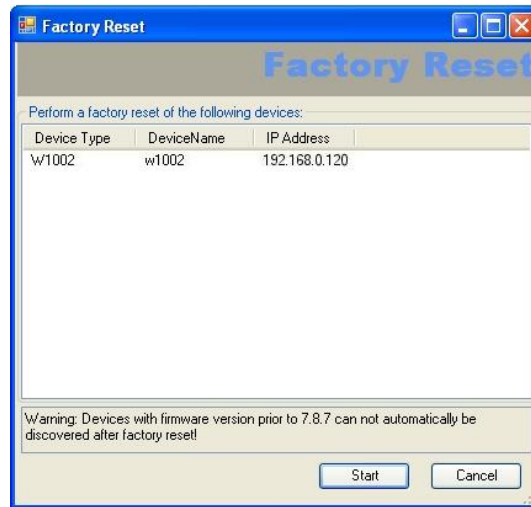

- (3) Click **Start**.


The device is reset to the default settings.

Whilst the action is running the *Define default settings* message is displayed in the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Define default settings* message appears in green. If the action fails, the *Define default settings* message appears in red.

The background colour also serves as a progress bar for the transaction.

3.6.12 Define parameters for a device via BOOTP

You can define parameters for a device via BOOTP.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **Configure BOOTP**.
The **BOOTP** window opens.

- (3) Change or add the displayed parameters as required.
- (4) If you wish to transfer a configuration file to the device, select the required file.




Note

Note that the TFTP service must be running to transfer a configuration file (see [Start or stop TFTP service](#) on page 30).


- (5) Click **OK**.
The parameters are transferred to the device as soon as it sends a BOOTP request.



3.6.13 Log data with trace

With trace, you can log all data packages sent and received on a particular device interface. You can display the data packages, or save them in a file.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **Trace interfaces**.

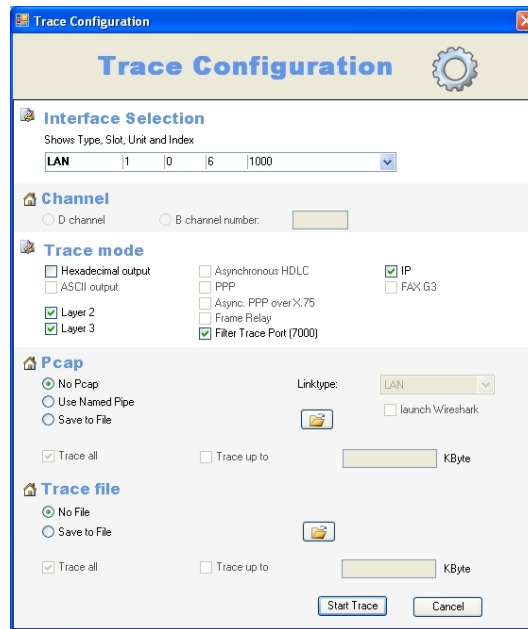The **Trace configuration** window opens.



- (3) In the **Interface selection** field of the interface list, select the interface whose data traffic you wish to log.
- (4) Once you've selected the ISDN interface, determine whether you wish to log the data traffic in the **D channel** or the **B channel**. If you've selected **B channel**, you must additionally provide the number of the desired B channel.
- (5) In the **Mode** field, select how you wish to filter the data to receive exclusively the relevant information. Depending on the selected interface, different filter options are available.
Keep the setting **Drop data from Port 7000** to drop the data packages on the connection between PC and the selected interface.
- (6) In the **Pcap** field, select whether to use a pipe or to generate a Pcap file.
If you select **Named Pipe**, a named pipe is used, Wireshark is launched by default and the data are displayed there.
If you wish to save the data in a Pcap file, select **Save to file** and click the  icon.
The **Save as** window opens.
Name the file and click **Save**.
The window closes, the data is saved in a Pcap file under the assigned name.
If you wish to limit the file size, select **file size limited to** and enter the desired value in KB.
- (7) In the field **Trace file**, select whether you wish to save the data in a text file.
If you wish to save the data in a text file, select **Save to file** and click the  icon.
The **Save as** window opens.
Name the file and click **Save**.

The window closes, the data is saved in a text file under the entered name.


If you wish to limit the file size, select **Data size limited to** and enter the desired value in KB.

- (8) Click **Start Trace**.


Trace is launched. Received data are displayed and optionally saved in relation to the configuration.


3.6.14 Log data with trace CAPI

With Trace CAPI, you can log a device's CAPI communication. For this, the CAPI server must be enabled for the respective device. You can enable the CAPI server in FCI under **Local services** -> **CAPI server** -> **Options**, insofar as the selected device has a CAPI server. In addition, the device should support **Bintec Remote CAPI**.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **Trace CAPI**.

The **Trace CAPI configuration** window opens.

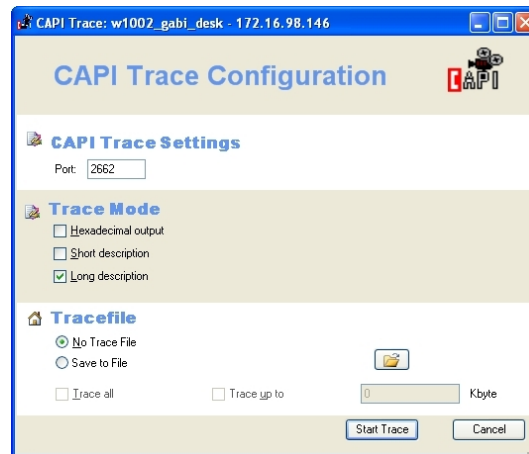

- (3) Keep preset port *2662* or enter an alternate port, if required.
- (4) Select a mode to set the output format. You can choose between an output in hexadecimal format, an output with short description and an output with detailed description.
- (5) If you wish to display the data on the screen, select the setting **Display in window** in the **Output** field.
- (6) If you wish to save the data in a file, select **Save to file** and click the  icon.
The **Save trace file** window opens.
Enter a file name and click **Open**.
The window closes, the data is saved under the entered name.
- (7) If you wish to limit the file size, enable **Data size limited to** and enter the desired


value in KB.

- (8) Click **Start Trace**.

CAPI Trace is launched. Received data are displayed and optionally saved in relation to the configuration.

3.6.15 Delete device

You can delete a device from the list on the **Devices** record card.

- (1) Select the desired device in the main window on the **Devices** record card.
- (2) Click the  icon or open the shortcut menu by right-clicking and select **Delete**.
The device is deleted from the list of devices.

3.7 Perform tasks with drag and drop

You can perform various tasks quickly and easily using drag and drop, e.g.

- Save the configuration in the **Dime Manager**
- Update the firmware in devices
- Update the configuration in devices


3.7.1 Save configuration with drag and drop

You can save the configuration for a device or several devices with drag and drop in the **Dime Manager**.

- (1) Select **Maintenance** -> **Window** in the **Configurations** field to open the **Configurations** menu.
- (2) Select a device or several devices on the **Devices** record card.
- (3) Press and hold the mouse button to drag the device(s) to the **Configurations** window and then release.

The **Save configuration** window opens. You can enter a name for the group configuration file in the **Filename** field. The first group configuration file that you save is assigned the name *cf_0.cfx* by default. Additional files are numbered: *cf_1.cfx*, *cf_2.cfx* and so on.

You can open the cfx files with an editor and view the saved information.

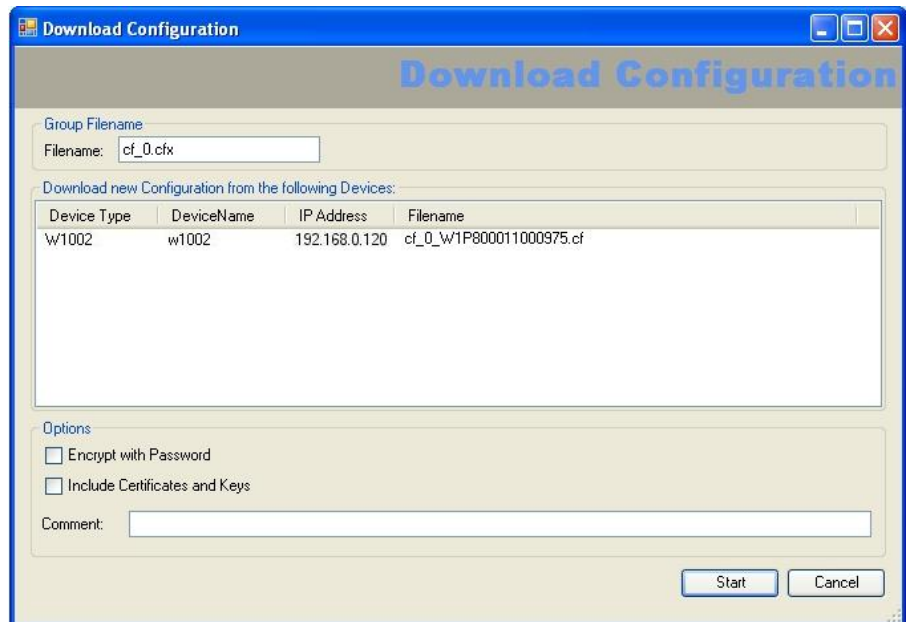

- (4) Click **Start**.

The configuration of each device is saved in a file and a configuration file is also created for all devices, a so-called **group configuration file**. In the tooltip for the respective file you can see for which devices the file is suitable.

Whilst the action is running the *Save configuration* message is displayed in the **Devices** menu in the **Action** column in the row for the respective device in black or white depending on the background colour. Once the action is completed, the *Save configuration* message appears in green. If the action fails, the *Save configuration* message appears in red.

The background colour also serves as a progress bar for the transaction.

You can open and view configuration files using an editor.

3.7.2 Update firmware with drag and drop

You can update the firmware for one device or several devices with drag and drop.

- (1) Select **Maintenance** -> **Window** in the **Firmware** field to open the **Firmware** menu.
- (2) If you wish to update the firmware files, which are saved in the **Dime Manager**, select **Maintenance** -> **Configure** in the **Firmware** field, carry out the desired settings in the **Firmware information** window (see [Change path to the firmware files / Update firmware files](#) on page 28) and click **OK**.
The firmware files are updated as required.
- (3) If you wish to update the firmware for a single device, select the corresponding firmware file in the **Firmware** window, press and hold the mouse button and drag it to the desired device on the **Devices** record card.

The firmware for the selected device is updated.

Whilst the action is running the *Update firmware from file* message is displayed in the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Update firmware from file* message appears in green. If the action fails, the *Update firmware from file* message appears in red.

- (4) If you wish to update the firmware for several devices of the same type (e.g. **R1200**), select the desired devices on the **Devices** record card and a suitable firmware file in the **Firmware** window.
- (5) Press and hold the mouse button to drag the selected devices to the **Devices** record card and then release the mouse button.

The firmware for the selected devices is updated.

Whilst the action is running the *Update firmware from file* message is displayed in the **Devices** window in the **Action** column in the row for the corresponding device in black or white depending on the background colour. Once the action is successfully completed, the *Update firmware from file* message appears in green. If the action fails, the *Update firmware from file* message appears in red.

The background colour also serves as a progress bar for the transaction.



Note

To enable the new firmware, you must restart the device (see [Reboot device](#) on page 48).

3.7.3 Load configuration with drag and drop in a single device

You can load a configuration file with drag and drop in a single device. To do this, you can use one of the configuration files that you have saved previously in the configuration directory (see [Save configuration](#) on page 47 or [Save configuration with drag and drop](#) on page 53).

- (1) Select **Maintenance** -> **Window** in the **Configurations** field to open the **Configurations** menu.
- (2) Select the device into which you wish to load a configuration file in the main window on the **Devices** record card.
- (3) Select the configuration file you wish to load into the device in the **Configurations** window.
- (4) Press and hold the mouse button to drag the file to the selected device and then release the mouse button.

The configuration file is loaded into the selected device.

Whilst the action is running the *Update configuration* message is displayed in

the **Devices** window in the **Action** column in black or white depending on the background colour. Once the action is successfully completed, the *Update configuration* message appears in green. If the action fails, the *Update configuration* message appears in red.

The background colour also serves as a progress bar for the transaction.

3.7.4 Load configuration with drag and drop in multiple devices

You can load a configuration file with drag and drop in multiple devices in a single step. To do this, you can use the files that you have saved previously in the configuration directory (see [Save configuration](#) on page 47 or [Save configuration with drag and drop](#) on page 53). For devices of the same type (e.g. **R1200**) you can use the same configuration file; for devices of different types you can use a group configuration file (see [Save configuration with drag and drop](#) on page 53).

- (1) Select **Maintenance** -> **Window** in the **Configurations** field to open the **Configurations** menu.
You can display the available configuration and group configuration files.
- (2) Select the devices into which you wish to load a configuration file in the main window on the **Devices** record card.
- (3) If you wish to load a configuration into devices of the same type, select the configuration file you wish to load into the devices in the **Configurations** window.
- (4) If you wish to load a configuration into devices of different types, select the group configuration file you wish to use for the devices in the **Configurations** window.
- (5) Press and hold the mouse button to drag the selected file to the selected devices and then release the mouse button.

The configuration file is loaded into the selected devices.

Whilst the action is running the *Update configuration* message is displayed in the **Devices** window in the **Action** column in the row for the respective device in black or white depending on the background colour. Once the action is successfully completed, the *Update configuration* message appears in green. If the action fails, the *Update configuration* message appears in red.

The background colour also serves as a progress bar for the transaction.

Index

Trace CAPI 52

A

Action 10
Add devices manually 22

B

BOOTP 29, 49
BOOTP parameters 32, 49
BOOTP record card 10
BOOTP service 32

C

Change language 36
Change password 38
Change path to the firmware files 28
Change the path to the configuration files 27
Change window display 19
Configuration files 26, 27
Configuration via FCI 39
Configuration via FCI - secure 40
Configuration with the Setup Tool 41
Copyright 37

D

Default settings 48
Define parameters via BOOTP 32
Define TFTP settings 30
Delete device 53
Device list 7
Device parameters 38
Device properties 14
Devices 2
Devices log 36, 36, 36
Devices log window 36
Devices record card 10
Dime Manager log 36, 36, 36
Dime Manager log window 36

Discover 22
Display BOOTP devices 32
Display configuration files 26
Display devices 23
Display field 10
Display firmware files 28
Display information 37
Display Syslog messages 35
Dock window 6
Drag and drop 53, 53, 54, 55, 56

E

Elements 6
End Syslog service 34

F

FCI configuration 39
File window 17
Filter 19
Filter display 19
Firmware 44
Firmware files 28

G

General settings 35

H

Halt update 19
Help 38
HTTP configuration - FCI 39
HTTPS configuration - (FCI) - secure 40

I

Install Syslog service 32
Installation 3
IP configuration 14
IP settings 38

L

Load configuration 46, 55, 56

- Load configuration with drag and drop
 - 55 , 56
- Load search results 25
- Log 17
- Log window 17
- M**
- Main window 8
- Maintenance 25
- Menu bar 7
- Miscellaneous 14
- O**
- Open BOOTP log window 30
- Open Dime Syslog log window 34
- Open Syslog log window 34
- Open TFTP log window 29
- Operation 19
- Operation icons 19
- P**
- PC system requirements 2
- Position window 6
- Possible Applications 1
- R**
- Reboot 48
- Reboot device 48
- Receive Syslog messages 35
- Resume update 19
- S**
- Save configuration 47 , 53
- Save configuration with drag and drop
 - 53
- Save device list 23
- Save search results 23
- Search for devices 22
- Search for devices in the background
 - 23
- Search for folders 27
- Secure configuration via FCI 40
- Select devices 19
- Select TELNET Client 36
- Services 29
- Settings 35
- Shortcut menu 9 , 38
- Software system requirements 2
- Start Syslog service 34
- Start TFTP service 30
- State 10
- Status icon colours 10
- Status icons 10
- Statuses 14
- Stop TFTP service 30
- Supported devices 2
- Syslog 29
- Syslog service 32 , 32 , 33 , 33 , 34 ,
 - 34 , 35 , 35
- System requirements 2
- T**
- Task bar 9 , 38
- Tasks 22
- Tasks with drag and drop 53
- Tasks with the shortcut menu 38
- Tasks with the task bar 38
- TELNET Client 2 , 36
- TELNET configuration - Setup 41
- TFTP 29
- Trace 50
- U**
- Uninstall Syslog service 33
- Update firmware 54
- Update firmware - File 42
- Update firmware - Funkwerk server
 - 44
- Update firmware - Web server 43
- Update firmware files 28
- Update firmware with drag and drop
 - 54
- User interface 6

V

Version 37

W

Window 6, 17

Window display icons 19