

TECHNICAL DATA

Copyright © December 21, 2004 Funkwerk Enterprise Communications GmbH
Bintec User's Guide - XGeneration
Version 1.0

Purpose This document is part of the user's guide to the installation and configuration of Bintec gateways running software release 7.1.13 or later. For up-to-the-minute information and instructions concerning the latest software release, you should always read our **Release Notes**, especially when carrying out a software update to a later release level. The latest **Release Notes** can be found at www.bintec.net.

Liability While every effort has been made to ensure the accuracy of all information in this manual, Funkwerk Enterprise Communications GmbH cannot assume liability to any party for any loss or damage caused by errors or omissions or by statements of any kind in this document and is only liable within the scope of its terms of sale and delivery.

The information in this manual is subject to change without notice. Additional information, changes and **Release Notes** for Bintec gateways can be found at www.bintec.net.

As multiprotocol gateways, Bintec gateways set up WAN connections in accordance with the system configuration. To prevent unintentional charges accumulating, the operation of the product should be carefully monitored. Funkwerk Enterprise Communications GmbH accepts no liability for loss of data, unintentional connection costs and damages resulting from unsupervised operation of the product.

Trademarks Bintec and the Bintec logo are registered trademarks of Funkwerk Enterprise Communications GmbH. Other product names and trademarks mentioned are usually the property of the respective companies and manufacturers.

Copyright All rights are reserved. No part of this publication may be reproduced or transmitted in any form or by any means – graphic, electronic, or mechanical – including photocopying, recording in any medium, taping, or storage in information retrieval systems, without the prior written permission of Funkwerk Enterprise Communications GmbH. Adaptation and especially translation of the document is inadmissible without the prior consent of Funkwerk Enterprise Communications GmbH.

Guidelines and standards Bintec gateways comply with the following guidelines and standards:

R&TTE Directive 1999/5/EG

CE marking for all EU countries and Switzerland

You will find detailed information in the Declarations of Conformity at www.bintec.net.

**How to reach Funkwerk
Enterprise Communications
GmbH**

Funkwerk Enterprise Communications GmbH Suedwestpark 94 D-90449 Nuremberg Germany Telephone: +49 180 300 9191 0 Fax: +49 180 300 9193 0 Internet: www.funkwerk-ec.com	Bintec France 6/8 Avenue de la Grande Lande F-33174 Gradignan France Telephone: +33 5 57 35 63 00 Fax: +33 5 56 89 14 05 Internet: www.bintec.fr
--	---



1	X2301	3
1.1	Delivery size	3
1.2	General Product Features	3
1.3	LEDs	5
1.4	Connections	6
1.5	Pin Assignments	7
1.5.1	Serial Interface	7
1.5.2	Ethernet Interface	7
1.5.3	ADSL Interface	8
2	X2302	11
2.1	Delivery size	11
2.2	General Product Features	11
2.3	LEDs	13
2.4	Connections	14
2.5	Pin Assignments	15
2.5.1	Serial Interface	15
2.5.2	Ethernet Interface	15
2.5.3	ADSL Interface	16



1 X2301

All products of the **XGeneration** provide you with a similar set of functions and differ in terms of the supported interfaces or connection types.

1.1 Delivery size

Your gateway is supplied with the following parts:

- Cable sets/power supply:
 - Ethernet cable
 - Serial cable
 - DSL cable
 - Power supply
- Bintec Companion CD
- Documentation:
 - **Quick Install Guide** (printed)
 - **User's Guide** (on CD)
 - **Release Notes**, if required
 - Safety Instructions

1.2 General Product Features

The general product features cover performance features and the technical requirements for installation and operation of your gateway.

These features are outlined in the following table:

Feature	Data
Product name	X2301

Feature	Data
Dimensions/weight (B x H x D): Dimensions without cables Weight Transport weight (incl. documentation, cabling, packaging)	140.6 mm x 26.6 mm x 99.5 mm 350 g approx. 1.2 kg
Memory	16 MB SDRAM, 4 MB Flash-ROM
LEDs	11 (1 power, 4x2 Ethernet, 1x WAN, 1x Status)
Power consumption of equipment	4.7 Watt
Voltage supply	12V DC 500mA EU PSU
Ambient requirements: Storage temperature Ambient temperature Relative humidity Room classification	-20° to +70°C 0 to 40 °C 10 to 90% non-condensing in operation 5 to 95% non-condensing in storage Operate only in dry rooms.
Available interfaces: ADSL interface Serial interface V.24 Ethernet IEEE 802.3 LAN (4 port switch)	Built-in ADSL modem for Annex A Built-in, supports the following baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 bauds Built-in (twisted-pair only), 10/100 Mbps, auto sensing, MDIX
Plugs used: Serial interface Ethernet interface ADSL interface	3-pole MiniDIN RJ45 RJ11

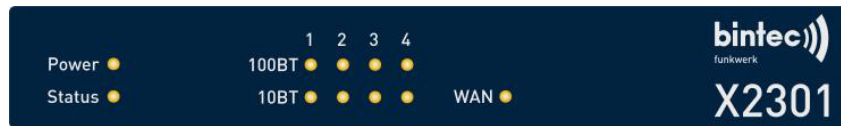
Feature	Data
SAFERNET™ Security Technology	Community Passwords, PAP, CHAP, MS-CHAP, Access Control Lists, NAT, SIF
Software includes	BRICKware for Windows BRICKtools for Unix
Printed documentation included	Quick Install Guide
Documentation in PDF format	User's Guide BRICKware for Windows Software Reference

Table 1-1: General product features

1.3 LEDs

The LEDs on your **XGeneration** Gateway indicate the states and the activity of the gateway.

They are arranged as follows:

Figure 1-1: LEDs on **X2301**

In operational mode the LEDs display the following status information:

LED	Status	Information
PWR	on	Power supply has been connected.
Status	on flashing	The gateway is booting. The gateway is active.

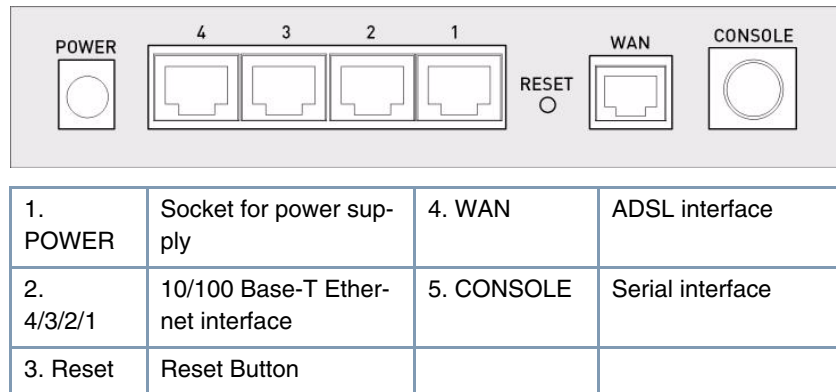
LED	Status	Information
1 to 4	on flashing	The gateway is connected to the Ethernet (100 Mbit/s or 10 Mbit/s respectively). Data traffic via the Ethernet interface (100 Mbit/s or 10 Mbit/s respectively).
WAN	on	The gateway has successfully synchronized with the ADSL provider's DSLAM.

Table 1-2: LED status display

1.4 Connections

All connections are located on the rear of the gateway. **X2301** offers a 4-port Ethernet switch and an ADSL interface as well as a serial interface.

The connections are arranged as follows:

Figure 1-2: **X2301** rear

1.5 Pin Assignments

1.5.1 Serial Interface

For connecting a console **X2301** provides a serial interface. Baud rates between 1200 and 115200 Bit/s are supported.

The interface is connected through a 3-pole MiniDIN socket:

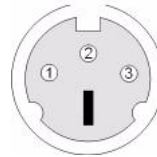


Figure 1-3: 3-pole MiniDIN socket

The pin assignment of the socket is as follows:

Pin	Function
1	Rx
2	GND
3	Tx

Table 1-3: Pin assignment of the serial socket

1.5.2 Ethernet Interface

X2301 offers an Ethernet interface with integrated 4-port switch for LAN connection. It can be used to connect single PCs as well as additional switches.

An RJ45 socket is used for connecting:

1 8

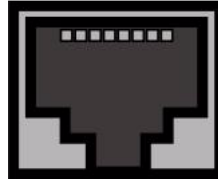


Figure 1-4: Ethernet 10/100Base-T interface (RJ45 socket)

The Ethernet sockets have the following pin assignment

Pin	Function
1	TD +
2	TD -
3	RD +
4	Not used
5	Not used
6	RD -
7	Not used
8	Not used

Table 1-4: RJ45 socket for LAN connections

1.5.3 ADSL Interface

The ADSL interface is connected using a RJ11 socket. The supplied cable combines the RJ45 plug required by most ADSL splitters and the RJ11 plug required by the gateway.

Only the inner pins are used for the ADSL connection:



Figure 1-5: ADSL interface (RJ11)

The ADSL interface has the following pin assignment:

Pin	Function
1	Not used
2	a
3	b
4	Not used

Table 1-5: ADSL interface (RJ11 socket)

2 X2302

All products of the **XGeneration** provide you with a similar set of functions and differ in terms of the supported interfaces or connection types.

2.1 Delivery size

Your gateway is supplied with the following parts:

- Cable sets/power supply:
 - Ethernet cable
 - Serial cable
 - DSL cable
 - Power supply
- Bintec Companion CD
- Documentation:
 - **Quick Install Guide** (printed)
 - **User's Guide** (on CD)
 - **Release Notes**, if required
 - Safety Instructions

2.2 General Product Features

The general product features cover performance features and the technical requirements for installation and operation of your gateway.

These features are outlined in the following table:

Feature	Data
Product name	X2302

Feature	Data
Dimensions/weight (B x H x D): Dimensions without cables Weight Transport weight (incl. documentation, cabling, packaging)	140.6 mm x 26.6 mm x 99.5 mm 350 g approx. 1.2 kg
Memory	16 MB SDRAM, 4 MB Flash-ROM
LEDs	11 (1 power, 4x2 Ethernet, 1x WAN, 1x Status)
Power consumption of equipment	4.7 Watt
Voltage supply	12V DC 500mA EU PSU
Ambient requirements: Storage temperature Ambient temperature Relative humidity Room classification	-20° to +70°C 0 to 40 °C 10 to 90% non-condensing in operation 5 to 95% non-condensing in storage Operate only in dry rooms.
Available interfaces: ADSL interface Serial interface V.24 Ethernet IEEE 802.3 LAN (4 port switch)	Built-in ADSL modem for Annex B Built-in, supports the following baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 bauds Built-in (twisted-pair only), 10/100 Mbps, auto sensing, MDIX
Plugs used: Serial interface Ethernet interface ADSL interface	3-pole MiniDIN RJ45 RJ11

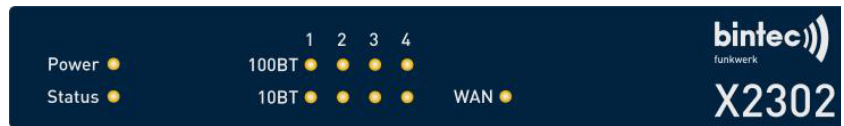
Feature	Data
SAFERNET™ Security Technology	Community Passwords, PAP, CHAP, MS-CHAP, Access Control Lists, NAT, SIF
Software includes	BRICKware for Windows BRICKtools for Unix
Printed documentation included	Quick Install Guide
Documentation in PDF format	User Manual BRICKware for Windows Software Reference

Table 2-1: General product features

2.3 LEDs

The LEDs on your **XGeneration Gateway** indicate the states and the activity of the gateway.

They are arranged as follows:

Figure 2-1: LEDs on **X2302**

In operational mode the LEDs display the following status information:

LED	Status	Information
PWR	on	Power supply has been connected.
Status	on flashing	The gateway is booting. The gateway is active.

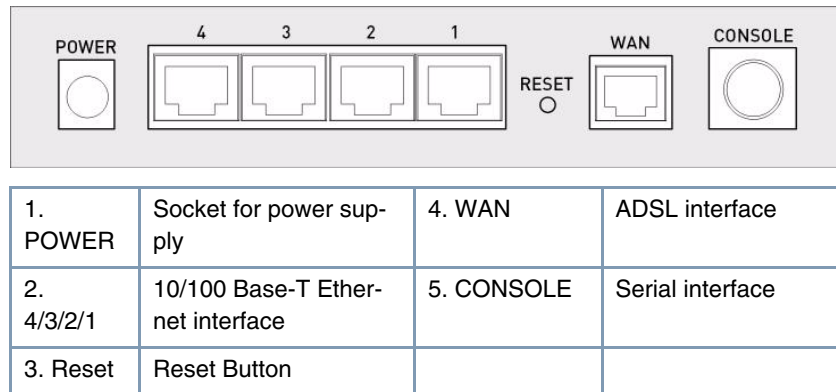
LED	Status	Information
1 to 4	on flashing	The gateway is connected to the Ethernet (100 Mbit/s or 10 Mbit/s respectively). Data traffic via the Ethernet interface (100 Mbit/s or 10 Mbit/s respectively).
WAN	on	The gateway has successfully synchronized with the ADSL provider's DSLAM.

Table 2-2: LED status display

2.4 Connections

All connections are located on the rear of the gateway. **X2302** offers a 4-port Ethernet switch and an ADSL interface as well as a serial interface.

The connections are arranged as follows:

Figure 2-2: **X2302** rear

2.5 Pin Assignments

2.5.1 Serial Interface

For connecting a console **X2302** provides a serial interface. Baud rates between 1200 and 115200 are supported.

The interface is connected through a 3-pole MiniDIN socket:

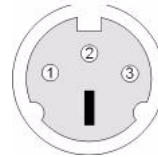


Figure 2-3: 3-pole MiniDIN socket

The pin assignment of the socket is as follows:

Pin	Function
1	Rx
2	GND
3	Tx

Table 2-3: Pin assignment of the serial socket

2.5.2 Ethernet Interface

X2302 offers an Ethernet interface with integrated 4-port switch for LAN connection. It can be used to connect single PCs as well as additional switches.

An RJ45 socket is used for connecting:

1 8

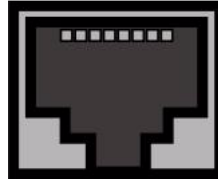


Figure 2-4: Ethernet 10/100Base-T interface (RJ45 socket)

The Ethernet sockets have the following pin assignment:

Pin	Function
1	TD +
2	TD -
3	RD +
4	Not used
5	Not used
6	RD -
7	Not used
8	Not used

Table 2-4: RJ45 socket for LAN connections

2.5.3 ADSL Interface

The ADSL interface is connected using a RJ11 socket. The supplied cable combines the RJ45 plug required by most ADSL splitters and the RJ11 plug required by the gateway.

Only the inner pins are used for the ADSL connection:



Figure 2-5: ADSL interface (RJ11)

The ADSL interface has the following pin assignment:

Pin	Function
1	Not used
2	a
3	b
4	Not used

Table 2-5: ADSL interface (RJ11 socket)

